


# Daikin One+ Smart Thermostat Installation & Commissioning

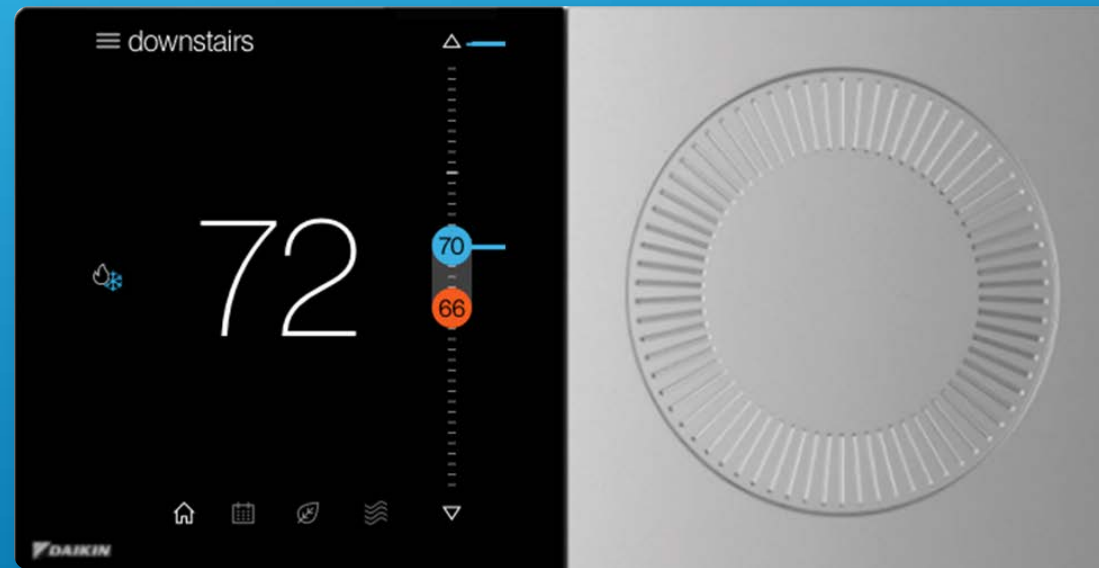

## Technical Training Module TRC-3



# Disclaimer

---

This material provides technical information that is to only be used by appropriately trained and certified HVAC-R installers and technicians who have agreed to the terms and conditions available here at <https://www.daikincity.com/DaikinCityB2BTermsOfUse.html>. If you have not agreed to these terms and conditions, you may not use or view this material, and you assume responsibility for any injury or property, system or equipment damage which may result. If you have agreed to these terms, you also agree, by viewing or using this material, that this material, by its nature, cannot include a discussion of everything necessary to effect a proper installation or repair of HVAC-R equipment, nor can it address every possible scenario or environment a technician or installer may encounter. Accordingly, this material should not be considered as recommendations for best practices and will not be considered installation or repair instructions to the extent of any conflict with Daikin- or Goodman-issued manuals and specifications, or industry standards and regulations. Each installer or technician remains fully responsible for ensuring proper installation or repair of the HVAC-R equipment being worked on, and you remain fully responsible for any injury or property, system or equipment damage which may result from your installation.

©2021 Daikin, all rights reserved.

## Agenda

### Daikin *One+*

System Configurations

Installing Daikin *One+*

Commissioning Daikin *One+*

Full Set-up

Dealer Navigation

Homeowner Navigation

Mobile Apps

# Daikin One+ Smart Thermostat

- Premium control that provides optimal comfort.
- Easy to use, energy efficient, reliable, and ensures that the system is set up properly.
- Designed to regulate and communicate with HVAC equipment.
- The user will be able to control the indoor unit remotely through the Daikin One Home app.




# Daikin One+ Smart Thermostat

- Offers two-way communication when combined with:
  - Daikin *FIT* system; air conditioners and heat pumps, residential inverters; air conditioners and heat pumps, and two stage system; air conditioners and heat pumps.
  - Also includes the Daikin *One* ecosystem which provide an integrated solution for temperature control and air quality.
    - Daikin *One* home air monitor (recommend adding the MERV 15 filter)
- Serves as a cloud-connected hub and controller for communicating HVAC systems.





## Daikin One+ Interface

- The thermostat has a physical dial on the right used for manual setpoints adjustments.
- Pressing the center of the dial at any time during normal mode acts as a home button, displaying the primary screen.
- The high-resolution touch screen on the left supports tactile-based interactions.
- Navigating to each screen is done by tapping an icon.

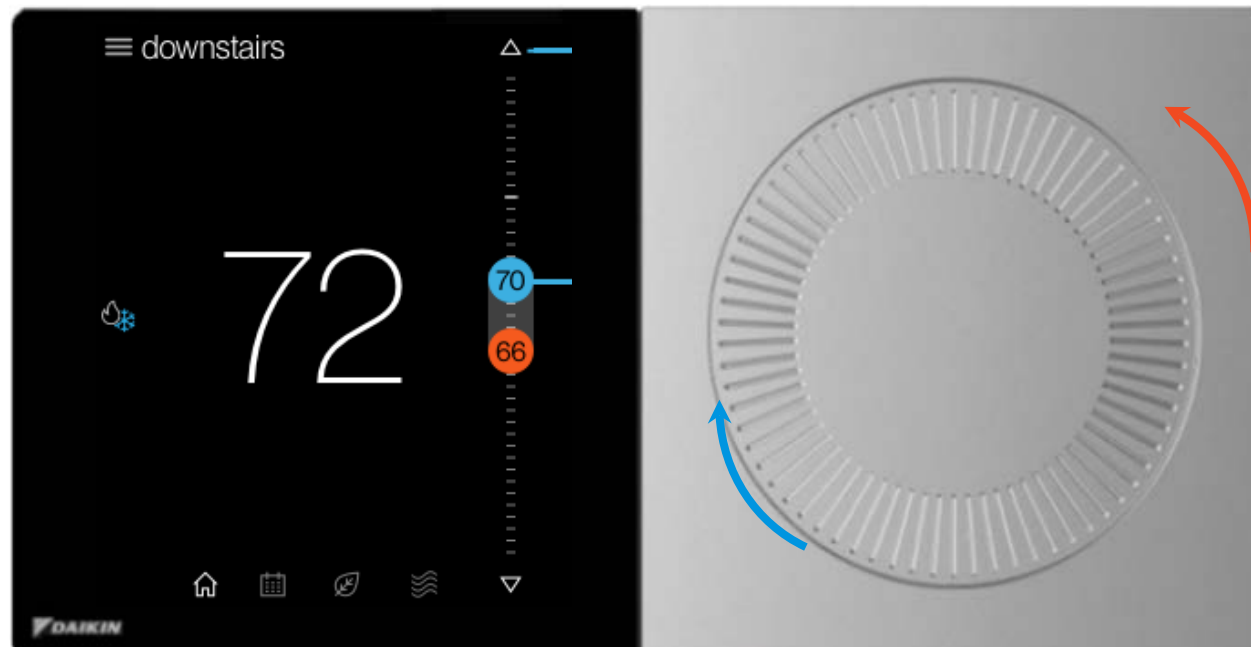


## Service Reminders

 - Set service reminders to maintain your system.
- Preset reminder options include:
  - Media filter
  - Humidifier Pad
  - Service reminders

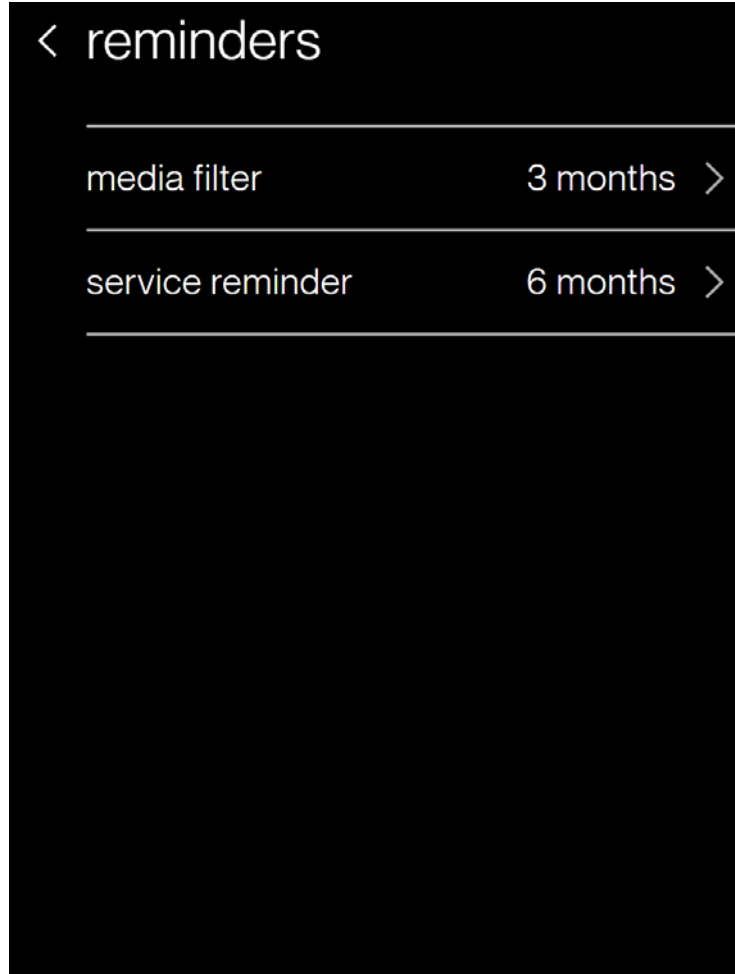

## Messaging

- Daikin *One+*'s messaging updates, confirms, and informs about selections you make during set-up and operation.
- There are four types of messages:
  - Status
  - Alerts
  - Reminders and Prompts
  - Learn more/tips

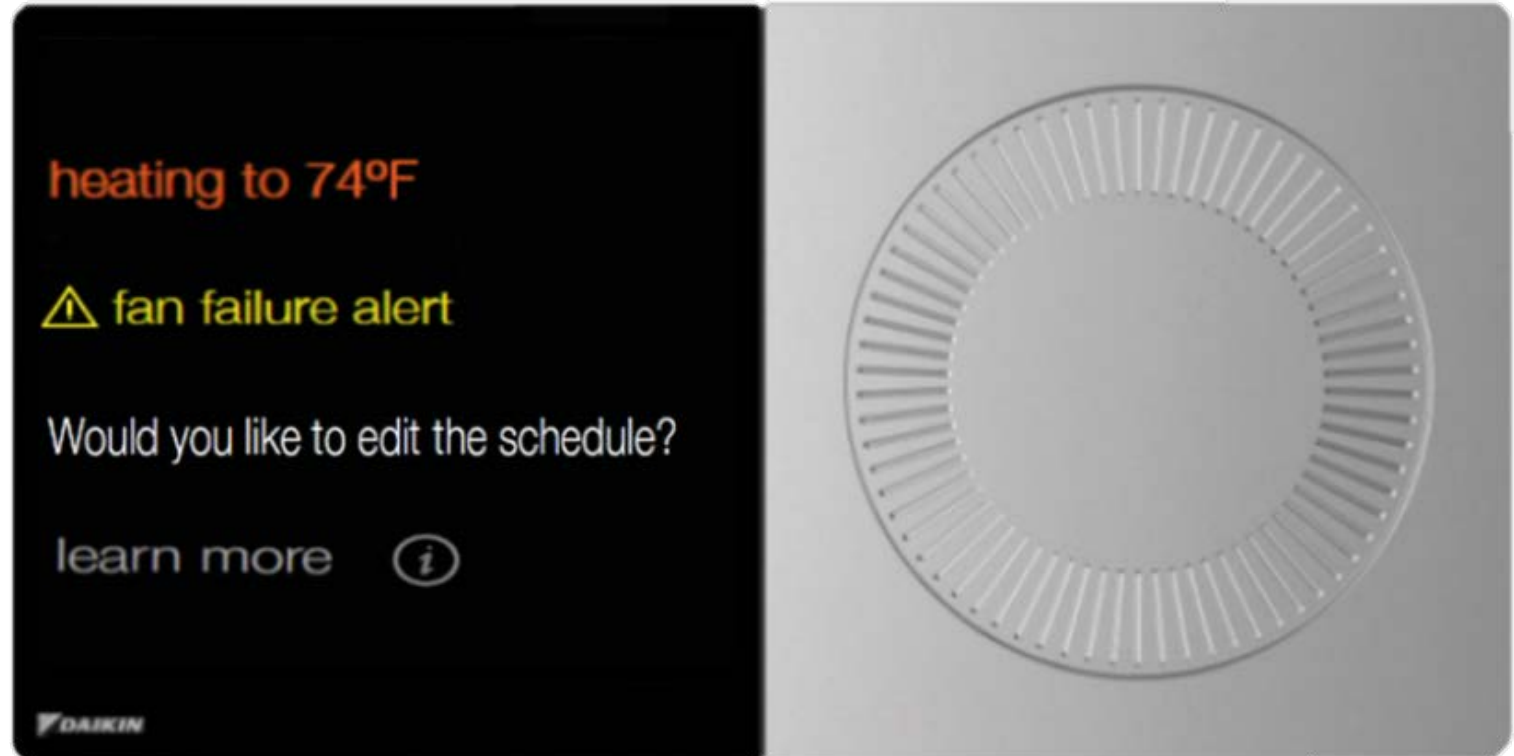

Note: Alerts have priority over all other messages in the system.



# Daikin One+ Smart Thermostat

## Quick Reference Card

- Quick reference cards are packaged with the thermostat to help answer questions during the installation and commissioning.



Scanning the bar code on the **bottom left** corner will link you to a website related to the title of the card.

[https://daikinone.com/smart\\_thermostats/oneplus/pros/](https://daikinone.com/smart_thermostats/oneplus/pros/)

## Agenda

Daikin *One+*

### System Configurations

Installing Daikin *One+*

Commissioning Daikin *One+*

Full Set-up

Dealer Navigation

Homeowner Navigation

Mobile Apps

# Valid System Configurations

## Communicating Indoor

- Air handler.
- Furnace.
- EEV coil.

## Communicating Outdoor

- Heat pump.
- Air Conditioning.

## Non-communicating Indoor

- Furnace
  - Utilizing a D24V Gateway

## Non-communicating Outdoor\*

- 24V single-stage condenser.



\*Added equipment.

## Agenda

Daikin *One+*

System Configurations

Installing Daikin *One+*

Commissioning Daikin *One+*

Full Set-up

Dealer Navigation

Homeowner Navigation

Mobile Apps

# Installing Daikin *One+* Smart Thermostat


## DO NOT Install The Thermostat Where It Can Be Affected By:

- Drafts or dead spots behind doors and in corners.
- Hot or cold air from ducts or ceiling fans.
- Radiant heat from the sun or appliances.
- Concealed pipes and chimneys.
- Unheated (uncooled) areas such as an outside wall.



# Installing Daikin *One+* Smart Thermostat

- Mount the thermostat to be
  - Leveled.
  - Approximately 5' from the floor.
  - On an interior wall using the included screws.

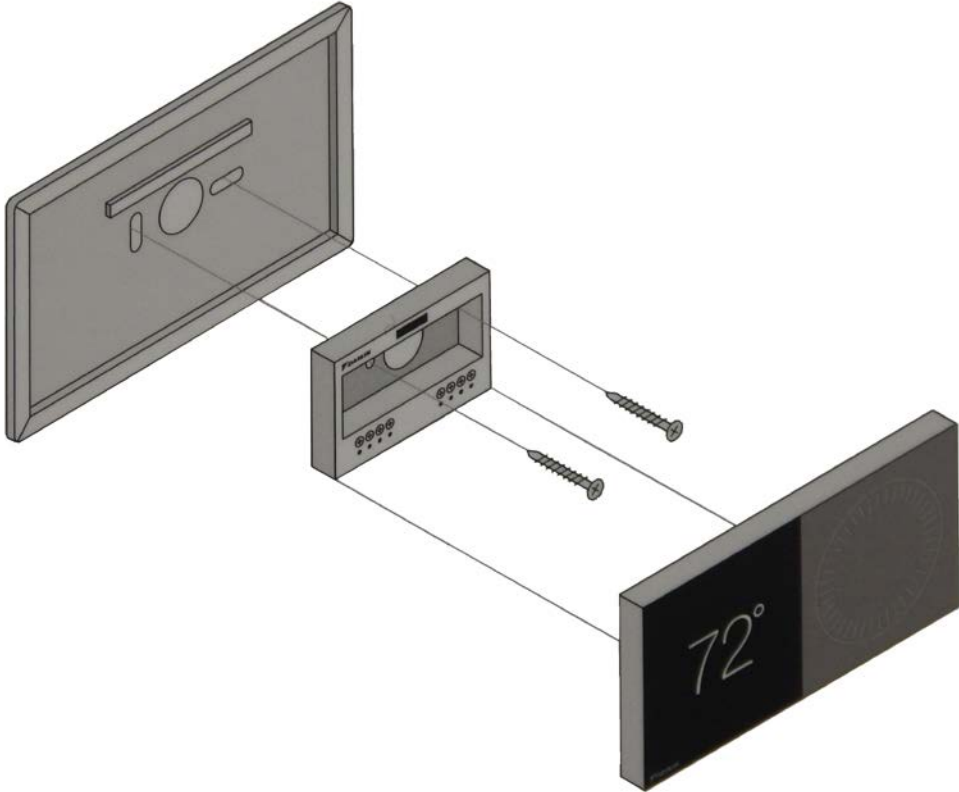

FLOOR

# Installing Daikin *One+* Smart Thermostat

- Maximum wire distance between the Daikin *One+* and the indoor unit should not exceed **125 feet using 18 gauge wire.**
- **Check for proper voltage before and after wiring is installed.**
  - 0.6VDC between Data 1 and 2
- Wiring communicating indoor unit to communicating outdoor units.
  - Connect **1, 2, C and R** from the **Daikin One+**, to **1, 2, C and R** at the **indoor** unit.
  - Connect wires **1 and 2** from the **indoor** unit to **1 and 2** at the **outdoor** unit.
- Wiring communicating indoor unit to non-communicating outdoor units.
  - Connect **1, 2, C and R** from the **Daikin One+**, to **1, 2, C and R** at the **indoor** unit.
  - Connect wire **Y1** from the **indoor** unit to **Y1** at the **outdoor** unit.




- ① **Data Line 1**
- ② **Data Line 2**
- ⓐ **24 volt common**
- Ⓡ **24 volt power**

# Installing Daikin One+ Smart Thermostat

## Wiring thermostat to communicating systems

- Communicating indoor units supplied with a **9 pin** connector **only**, will move the connector to the far **left** to pair **R, C, G, W1** on the 9 pin with **1, 2, R, C** on the **indoor PCB**.
- Communicating outdoor units supplied with a **7 pin** connector **only**, will move the connector to the far **left** to pair **R, C** on the 7 pin with **1, 2** on the **outdoor PCB**.

**Note:** The Daikin One+ is labeled **1, 2, C, R**. **If wired incorrectly, you will receive a communication error, or your equipment may not be recognized and displayed**

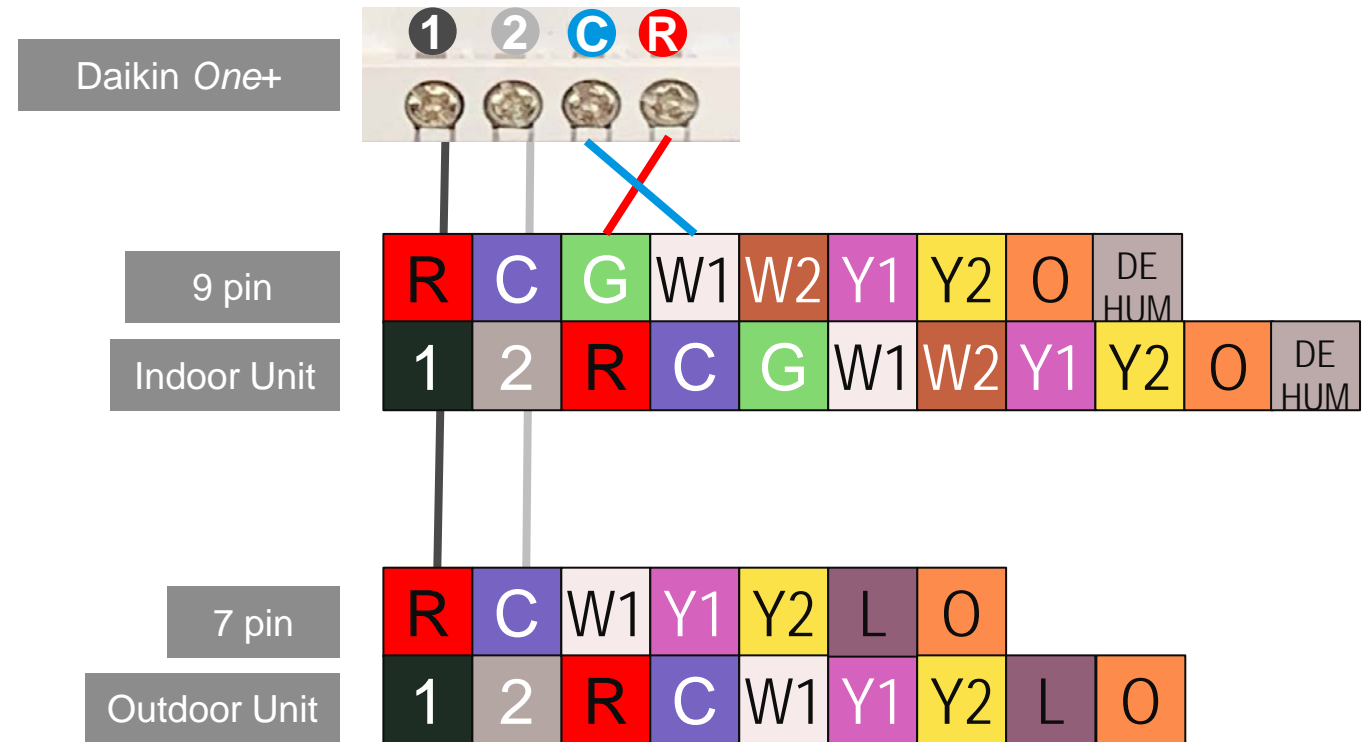




# Installing Daikin *One+* Smart Thermostat

## Wiring thermostat to communicating systems


- Communicating indoor units with a 4 pin connector **supplied**, will match 1, 2, R, C on the 4 pin with 1, 2, R, C on the **indoor PCB**.
- Communicating outdoor units with a 4 pin connector **supplied**, will match 1, 2 on the 4 pin with 1, 2 on the **outdoor PCB**.

**Note:** The Daikin *One+* is labeled 1, 2, C, R. **If wired incorrectly, you will receive a communication error, or your equipment may not be recognized and displayed.**

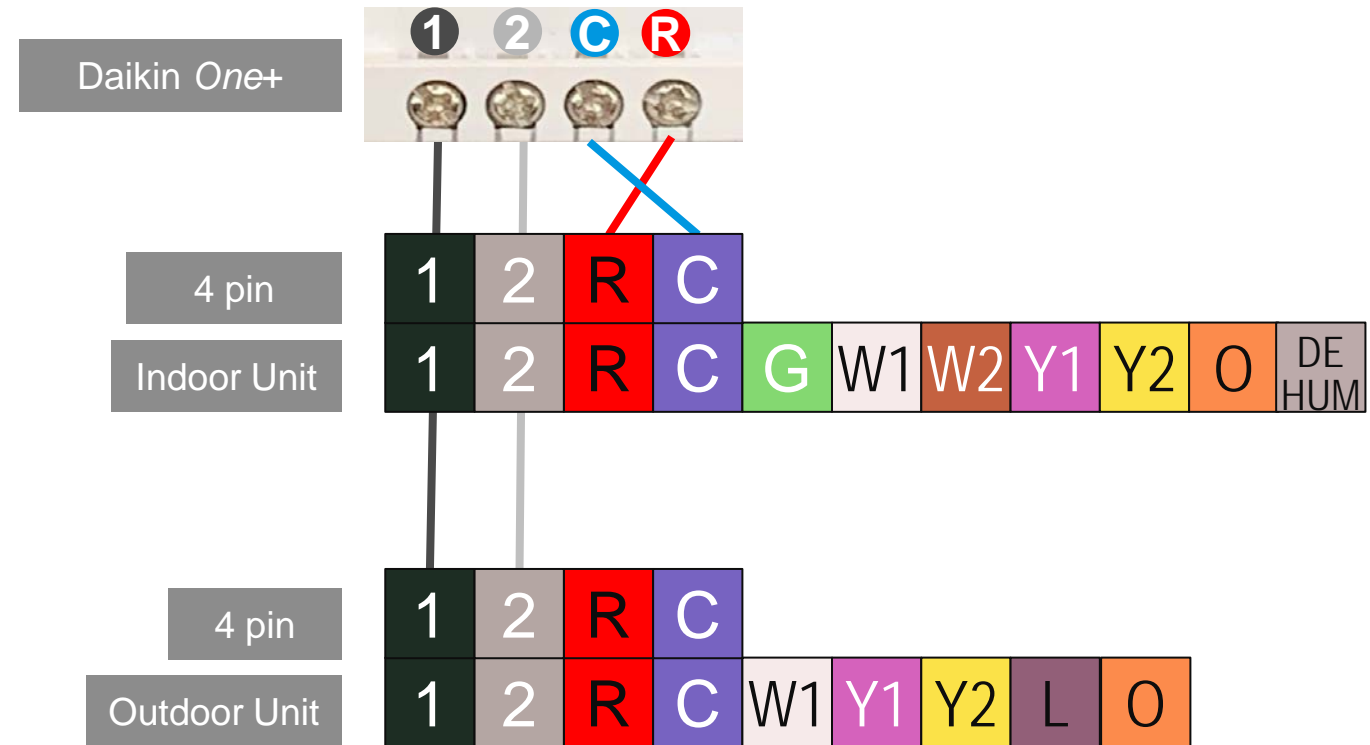

## Aux wiring

- The thermostats Aux outputs are dry contacts that close the connection to turn on the Aux equipment.
- A 24V AC control signal must be routed through one of the aux contacts of the thermostat.

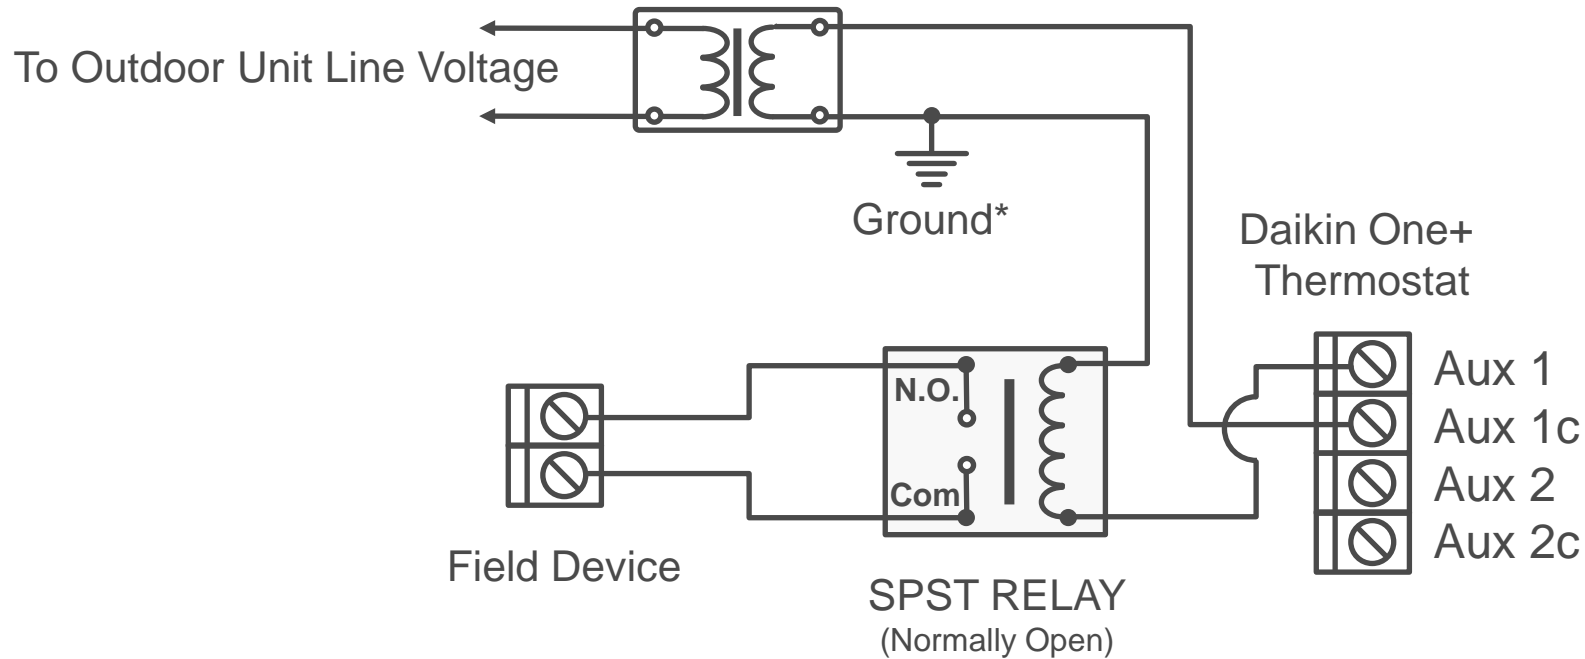

\*The terminals are selected in the Daikin *One+* installer wizard.

Note: It is recommended to use a minimum of 18-gauge wire. Maximum operating length of wire is 125 ft.

## Agenda

Daikin *One+*

System Configurations

Installing Daikin *One+*

Commissioning Daikin *One+*

Full Set-up

Dealer Navigation

Homeowner Navigation

Mobile Apps




# Commissioning Daikin *One+* Smart Thermostat

- Begin set-up: walks installers through the entire commissioning process to ensure the system is configured properly and ready for the homeowner to use.
  - Enables random access to any setting.
  - Remembers settings as they are entered.
  - Individual may stop and restart as needed.
- The screens are populated based on the model numbers of the equipment, matched to a database of device configuration settings.



# Commissioning Daikin One+ Smart Thermostat

- Start-up screen is displayed upon powering the thermostat.
- The welcome screen displays preferences to choose from.
- Select Unitary (default) before moving to the setup screen.
- Version of the thermostat is displayed on the learn more screen.
- Selecting setup options allows you to factory reset the thermostat.

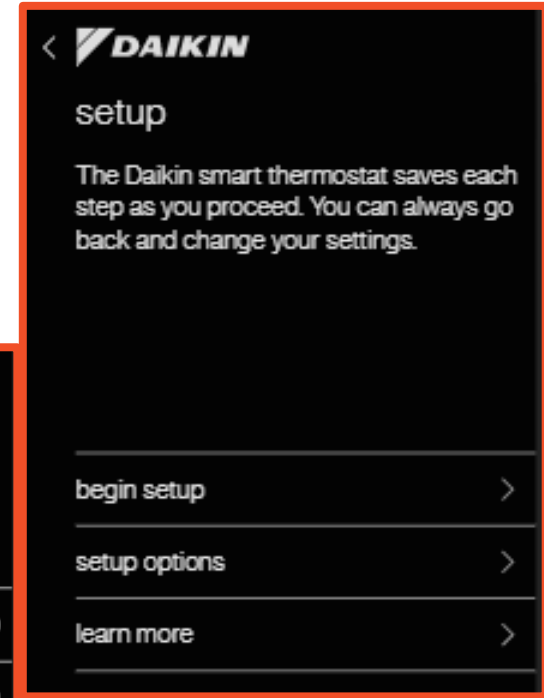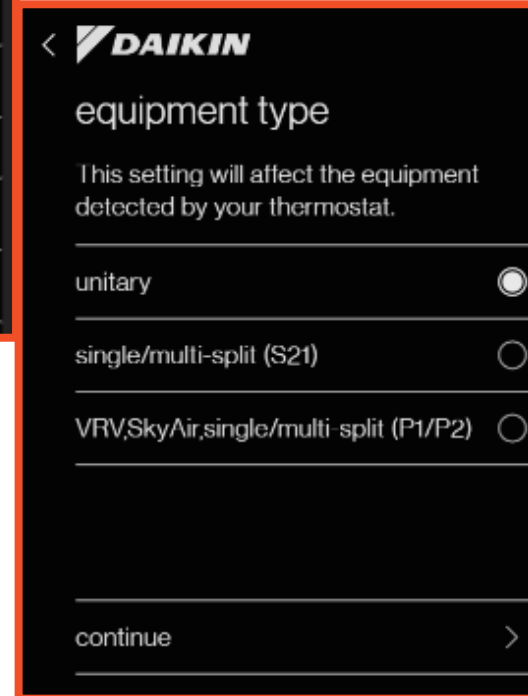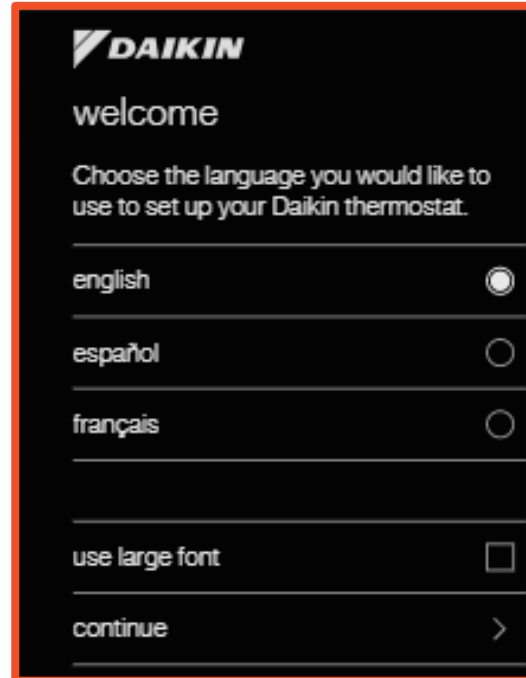

## Agenda

Daikin *One+*

System Configurations

Installing Daikin *One+*

Commissioning Daikin *One+*

Full Set-up

Dealer Navigation

Homeowner Navigation

Mobile Apps

## Start-up


- Tapping begin set-up starts the five step set-up process:

- Communication.
- Personalization.
- Equipment Set-up.
- System Optimization.
- Preferences.

- **Note:** All steps must be completed and reviewed before completing set-up to ensure the system is configured properly and ready for the homeowner to use.

For detailed menu settings

[https://daikinone.com/smart\\_thermostats/oneplus/pros/](https://daikinone.com/smart_thermostats/oneplus/pros/)

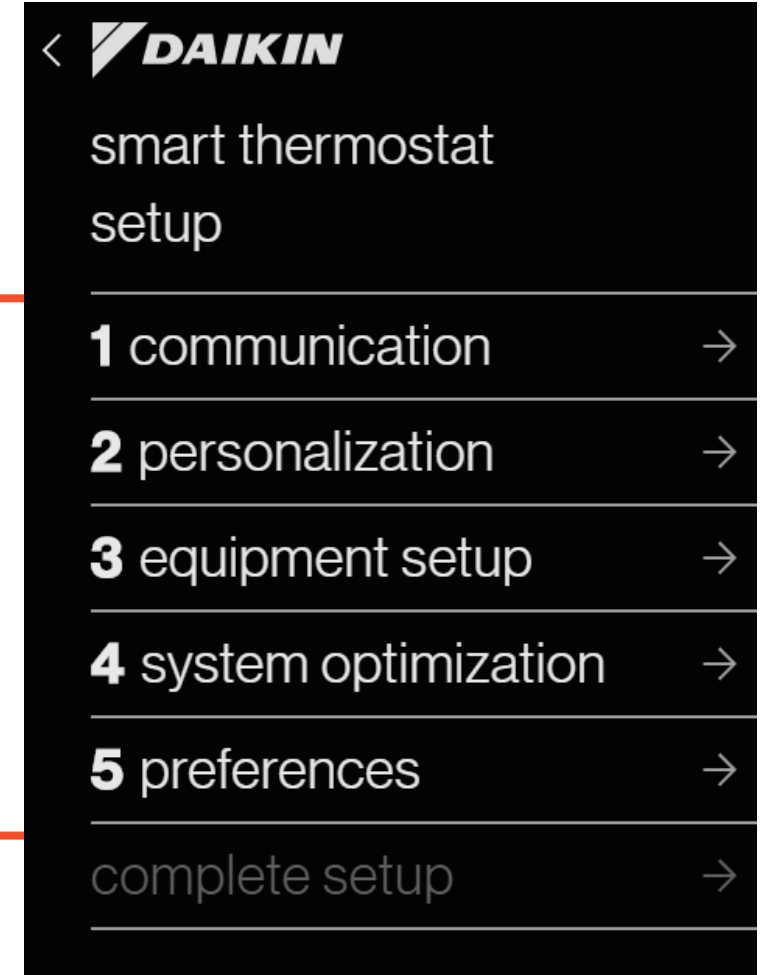



# Full Set-up

## Step 1 - Communication

- Configures **Communication Networks**.
- Select home Wi-Fi to search for networks.
- With **Wi-Fi configured**, the system can check the software version and update software to the **latest** version **automatically**.

### Note:

- Wireless router must be password protected.
  - Compatible with 5Ghz routers which supports 2.4Ghz
- Equipment type displays the equipment selected on start up.

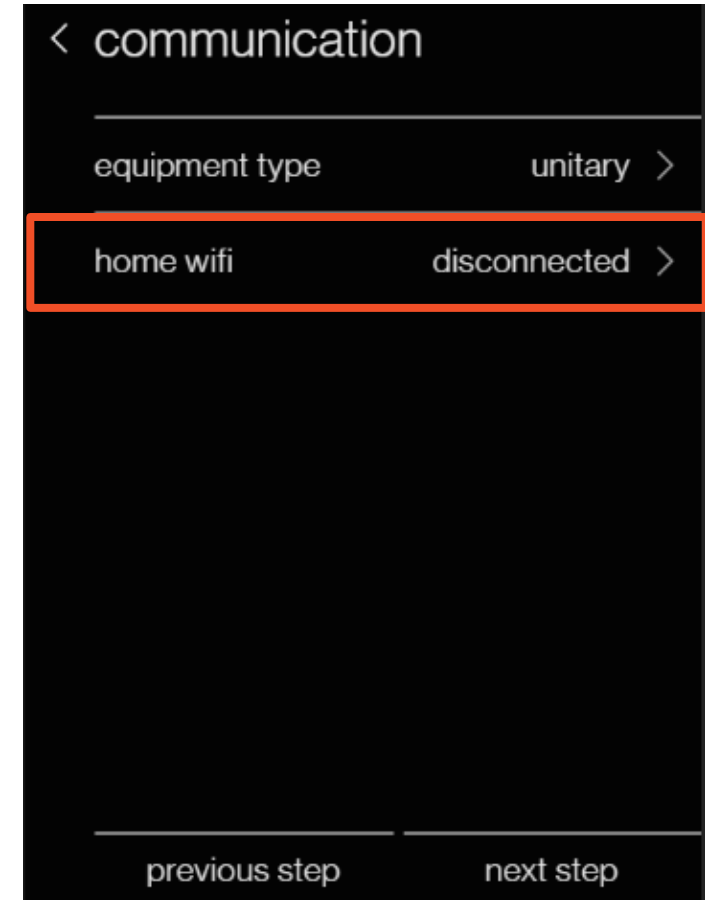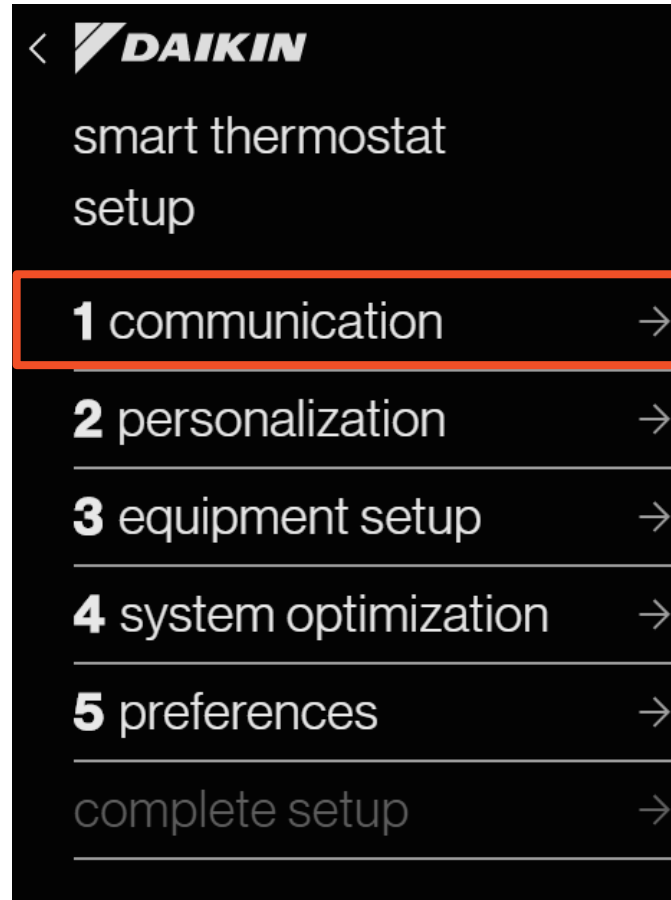




# Full Set-up

## Step 2 - Personalization

- Tapping the **personalization tab** allows you to edit default information.
- Personalization displays:
  - Language.
  - Large font selection.
  - Date & Time.
    - If Wi-Fi is connected, date & time sets automatically.
  - Thermostat Name.
  - Degree Units.



**Note:** A green check mark appears next to items reviewed from the set-up menu.

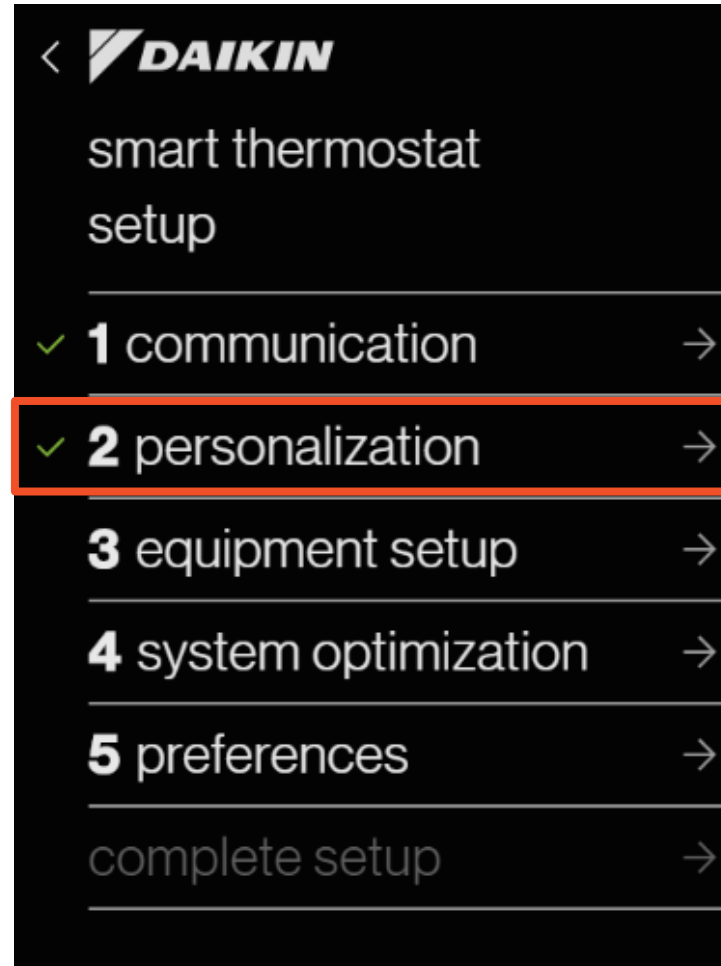

# Full Set-up

## Step 3 - Equipment Set-up

- Displays equipment found by searching the communication network, or by adding/removing equipment and accessories from the preset list.
- The unit that is identified determines the list of configurations that will be displayed
  - View unit Specifications.
  - Configure
    - Cool settings
    - Heat Settings
    - Heat Pump Settings
    - Humidifier Relay
    - Aux alarm
    - Heater Kit

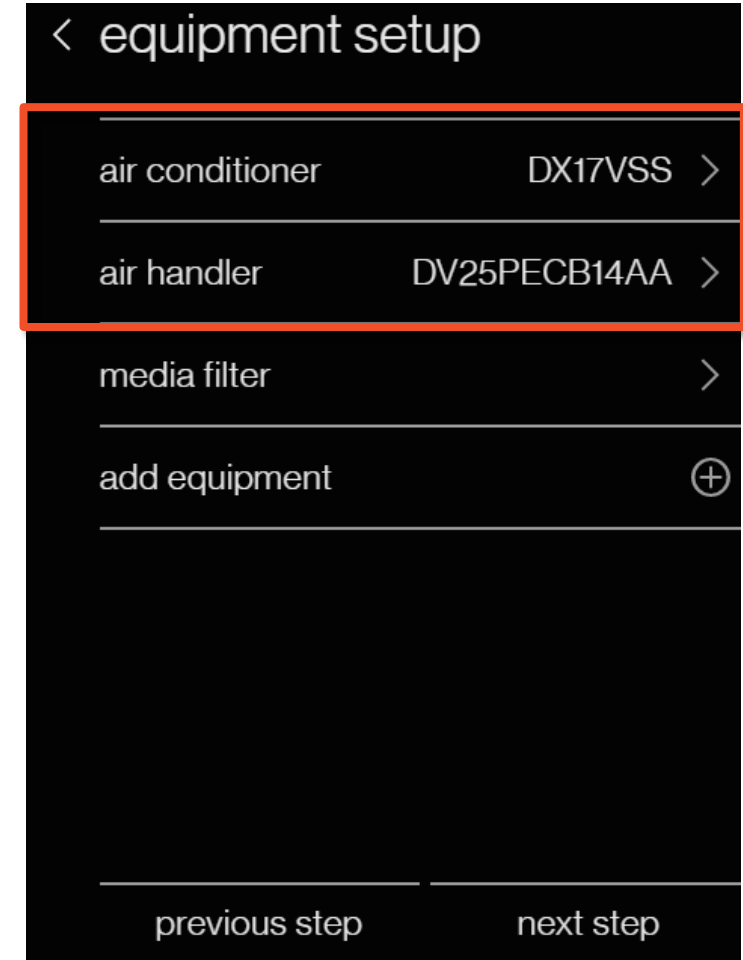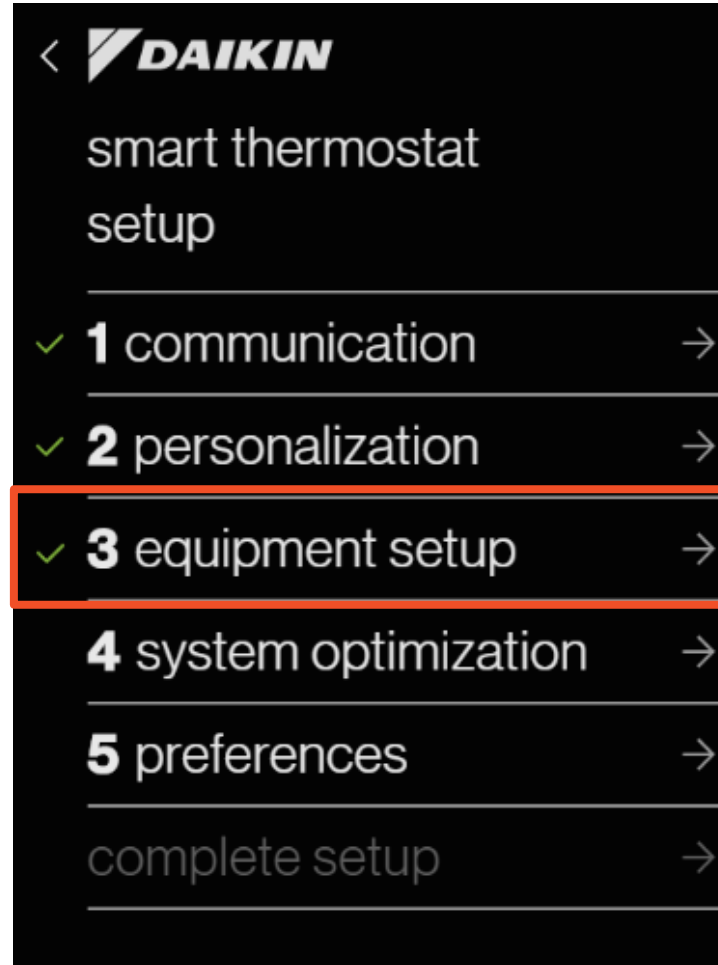

## [DaikinOnePlusCommissioningMenuOutline-Unitary](#)

## Added Equipment

- The Daikin *One+* smart thermostat is compatible with multiple accessories.
  - Air quality sensor
  - Humidifier
  - Dehumidifier
    - You can install the humidifier and dehumidifier by using aux 1 or 2
      - Recommend using an isolation relay between auxiliary device and thermostat.
  - UV Bulb
  - Electronic Filter
  - HEPA filter
  - EWC Zone Board.

**Humidifier**



**Air Quality Sensor**



**EWC Zone Board**






**Dehumidifier**



# Full Set-up



## Add Equipment – Auxiliary Heat

- Selecting add equipment will allow you to configure an auxiliary heat source.

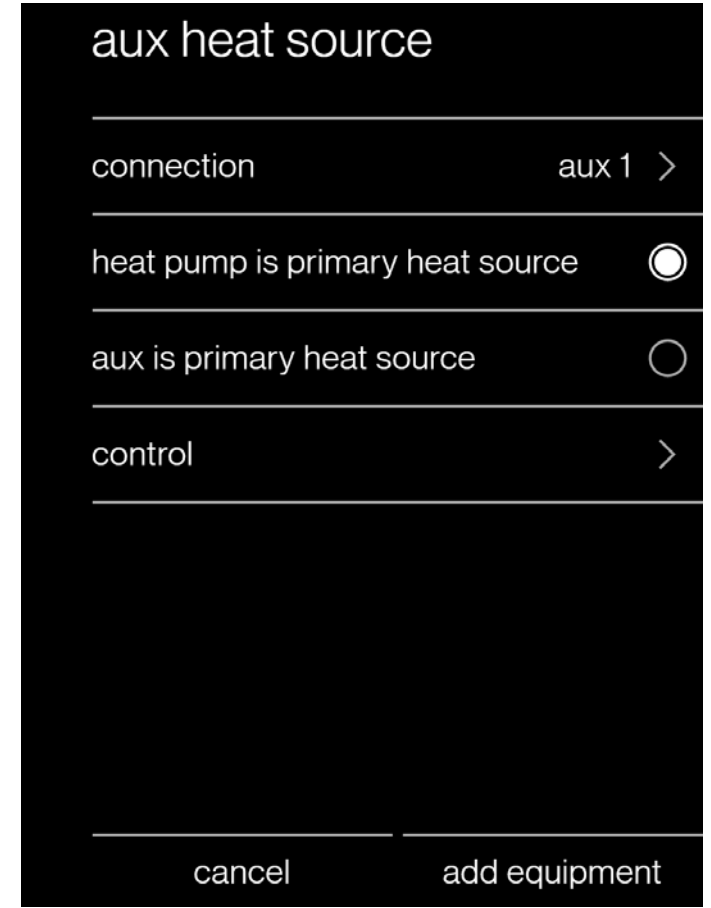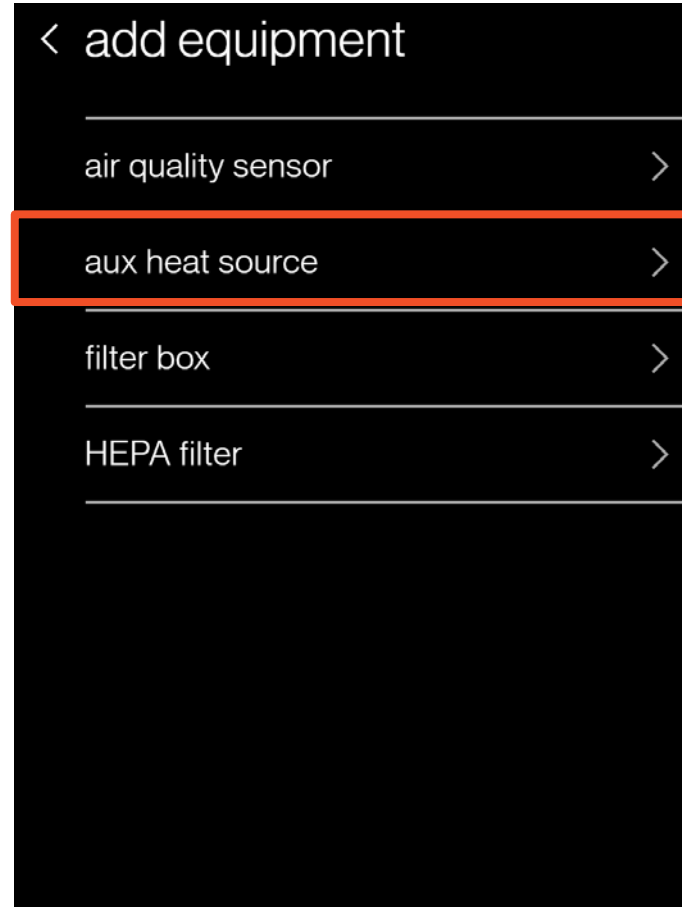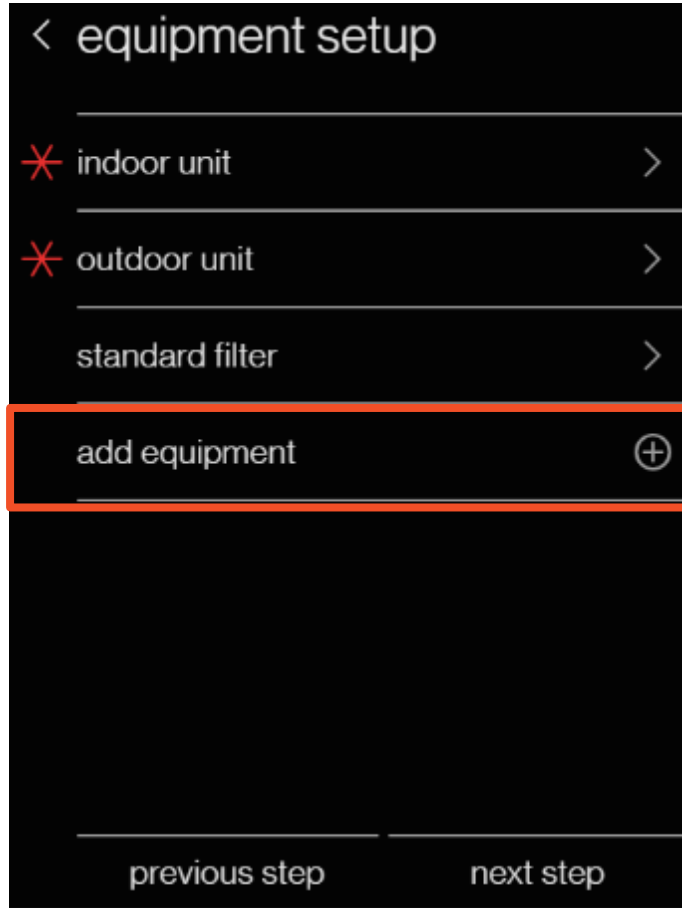

## Secondary Heat Settings



- The control section will allow you to adjust settings such as lockouts and secondary heat activation temperature.

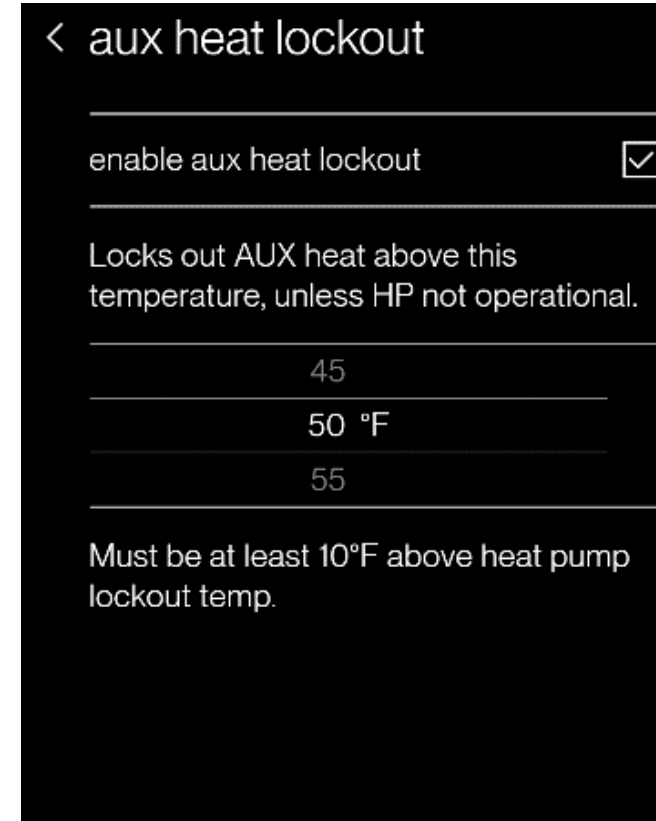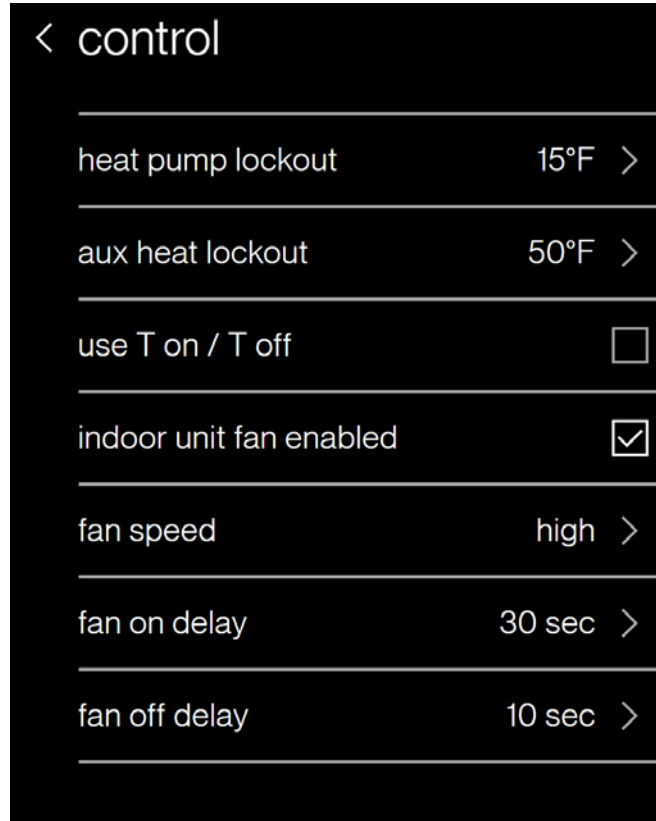

**\*Emergency Heat mode will appear as a system mode when connected to heat pump units and can be used to directly turn on the aux heat source if enabled.**

# T on/T off Control

- T on and T off provide an alternative control method to have the main AC/heat pump control the aux heat source using its PI control algorithm.
- T on/T off is the only control option for AC- only outdoor units
  - If the indoor unit is a gas furnace, or is an air handler with a heater strip, these heat sources will be controlled around the heat setpoint by the demand-based algorithm.
  - The aux heat source will be controlled independently.

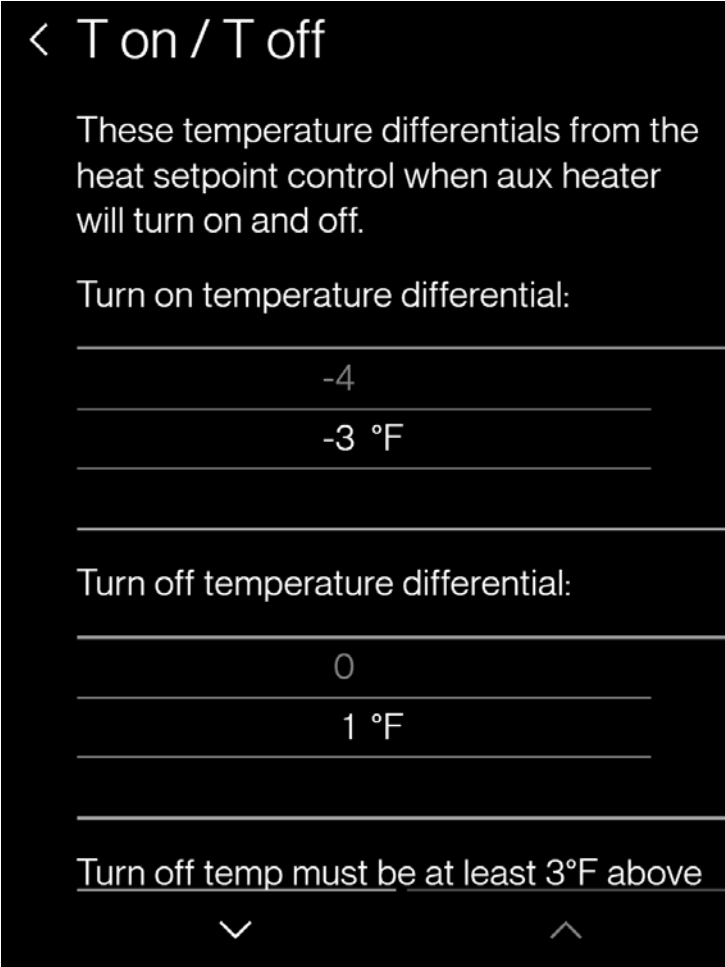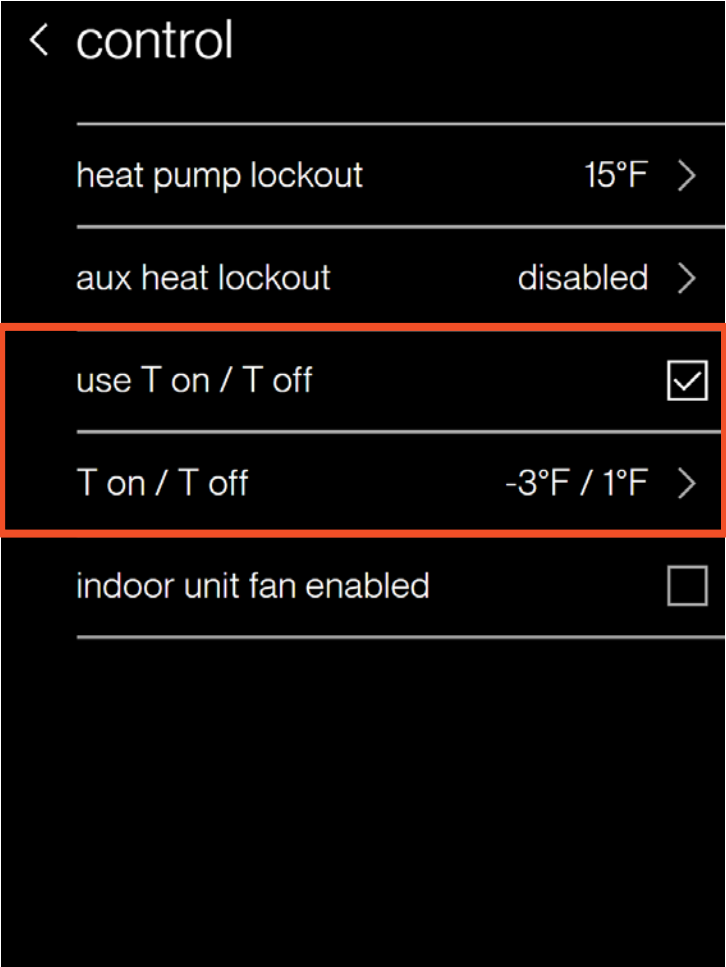


# Aux Heat Control

- When heat pump is the primary heat source:
  - Heat pump lockout temperatures are adjustable from  $-20^{\circ}\text{F}$  to  $65^{\circ}\text{F}$  in  $5^{\circ}\text{F}$  increments. (default  $15^{\circ}\text{F}$ )
  - Auxiliary heat lockout temperatures are adjustable from  $-10^{\circ}\text{F}$  to  $75^{\circ}\text{F}$  in  $5^{\circ}\text{F}$  increments. (default  $50^{\circ}\text{F}$ )

Auxiliary heat demand:

- T on differential is adjustable from  $-7^{\circ}\text{F}$  to  $-3^{\circ}\text{F}$  in  $1^{\circ}\text{F}$  increments (default  $-3^{\circ}\text{F}$ )
- T off differential is adjustable from  $-4^{\circ}\text{F}$  to  $1^{\circ}\text{F}$  in  $1^{\circ}\text{F}$  increments (default  $1^{\circ}\text{F}$ )

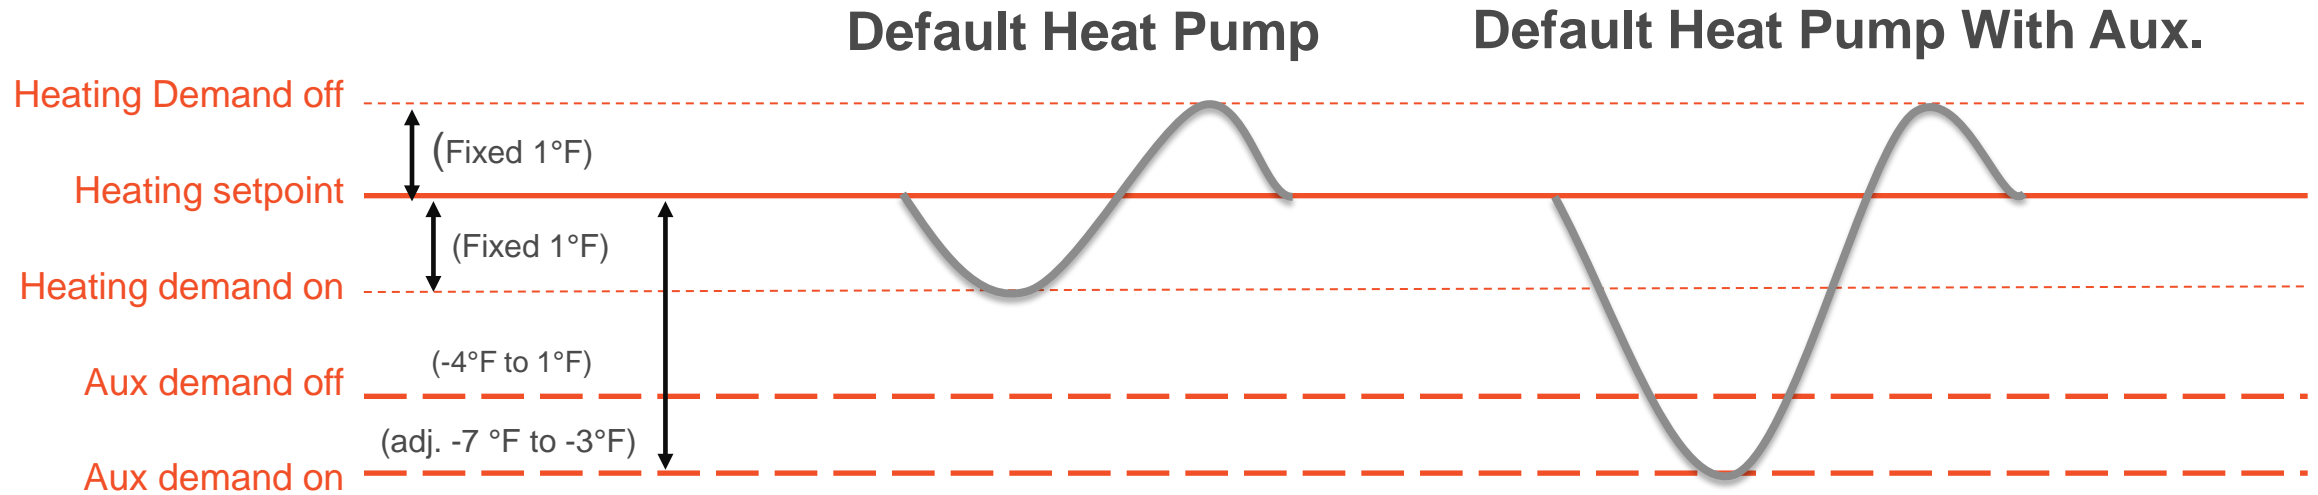


# Aux Heat Control

- When auxiliary heat is the primary heat source:
  - Heat pump lockout temperatures are adjustable from  $-20^{\circ}\text{F}$  to  $65^{\circ}\text{F}$  in  $5^{\circ}\text{F}$  increments. (default  $15^{\circ}\text{F}$ )
  - Setpoint differential can be set at  $-9^{\circ}\text{F}$ ,  $-7^{\circ}\text{F}$ ,  $-4^{\circ}\text{F}$ , and  $-2^{\circ}\text{F}$  (default  $-2^{\circ}\text{F}$ )

Heat pump demand:



- T on differential can be set at  $-1^{\circ}\text{F}$  or  $-2^{\circ}\text{F}$  (default  $-1^{\circ}\text{F}$ )
- T off differential  $1^{\circ}\text{F}$  fixed

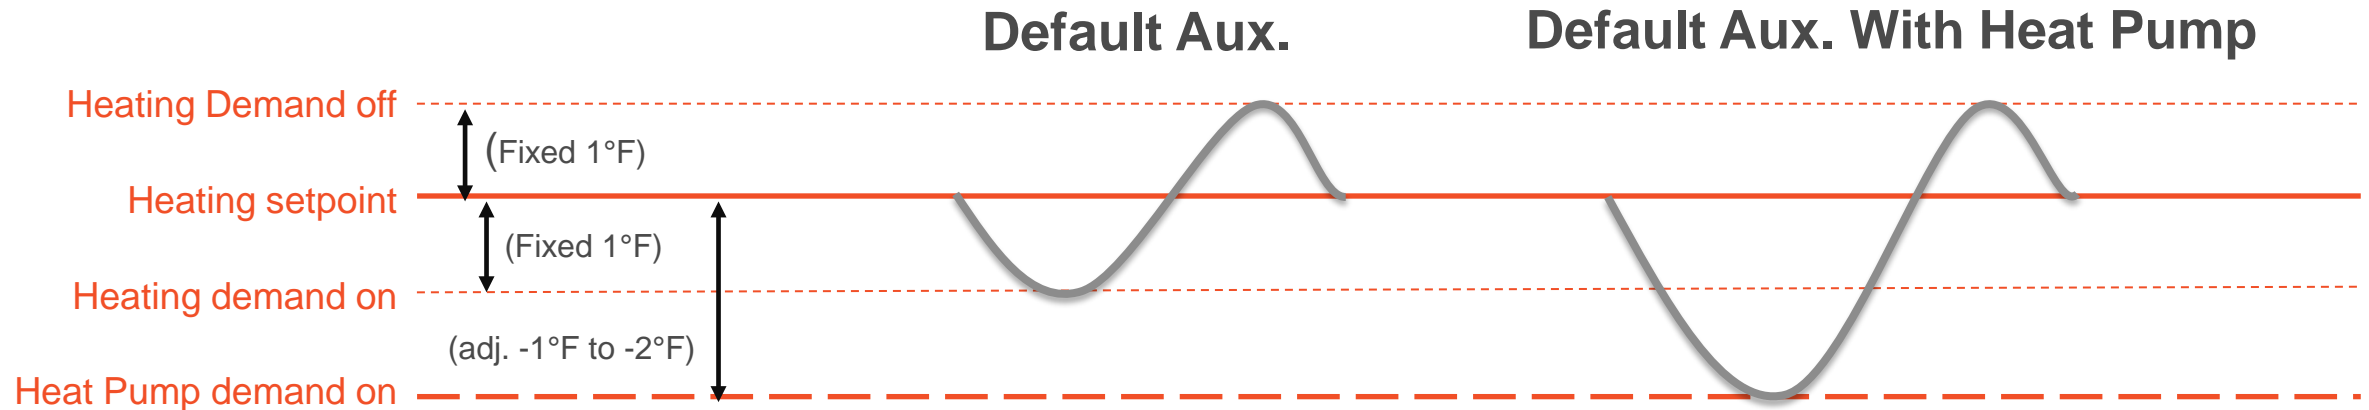





## Step 4 – System Optimization

- System optimization displays:
  - System test.
    - Inverters only.**
  - Charge mode.
    - Inverters only.**
  - Optional test.
  - Error history.
    - Logs alerts with an error code.
      - White = not critical**
      - Yellow = critical**
  - Calibration. **Thermostat must be in OFF mode.**
    - Wait 30 minutes before calibration for the thermostat to equalize.**
  - Status.

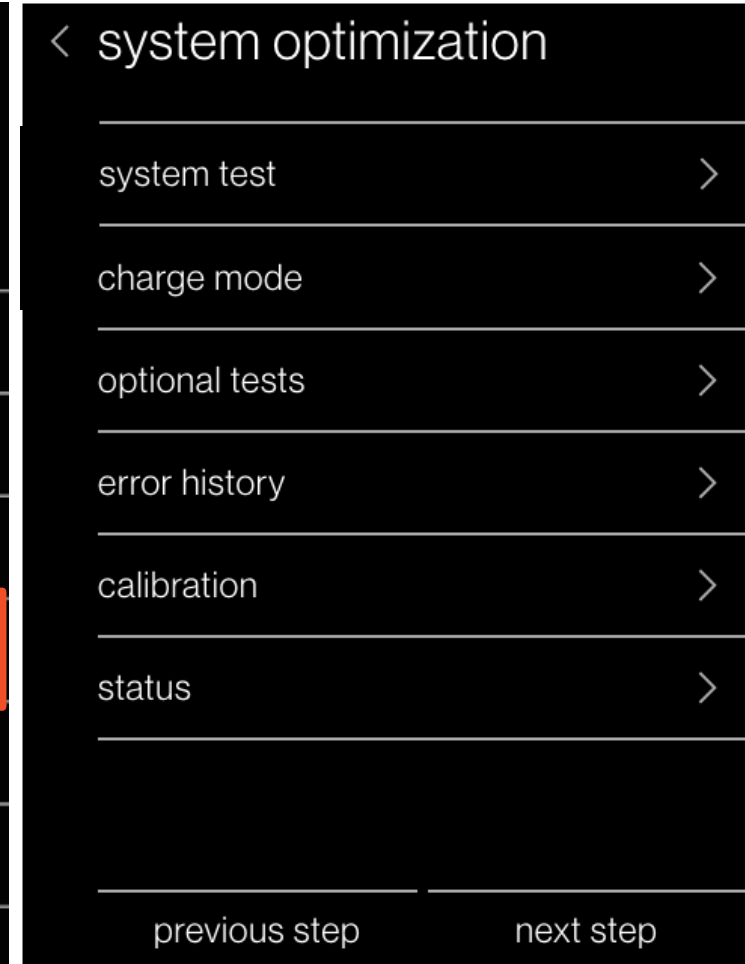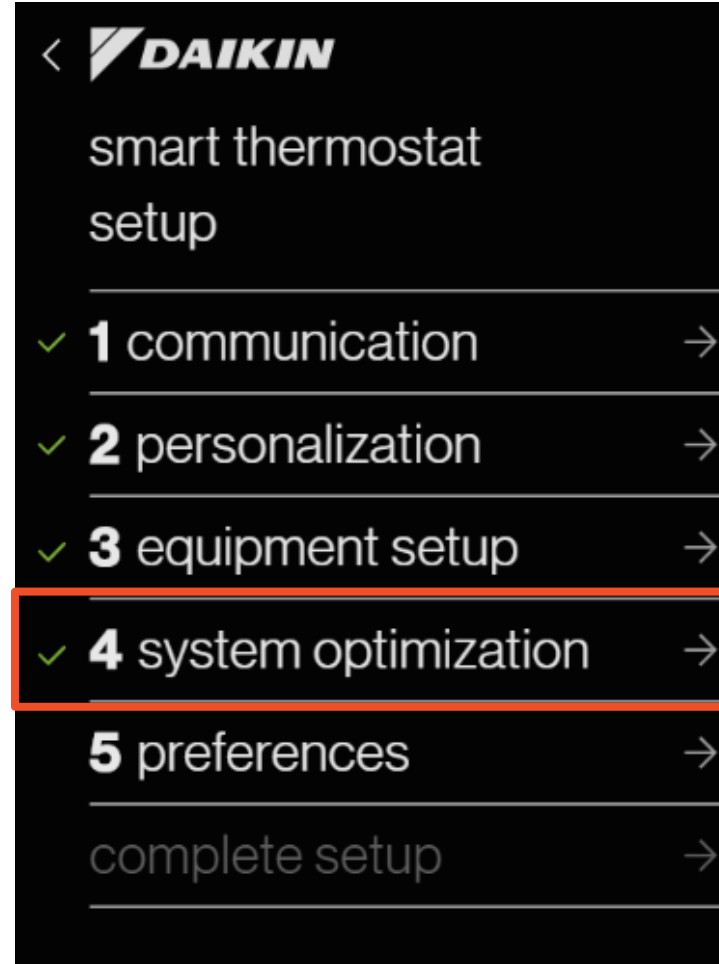



## System Test

- The system test should be run for the **inverter units** before proceeding to complete set-up.
- To proceed through the set-up process, the system test needs to be completed without any errors.
- When the tests are completed, the run test screen is displayed.
  - System test is complete only when display code E11 notice clears from the seven segment LED display on the heat pump or air conditioner.

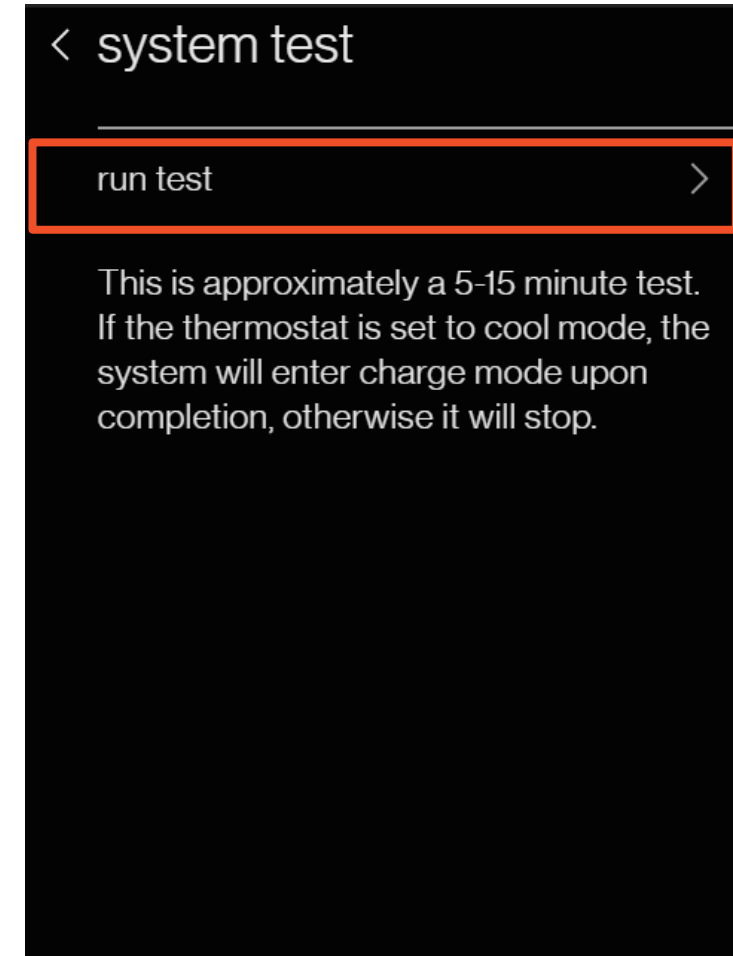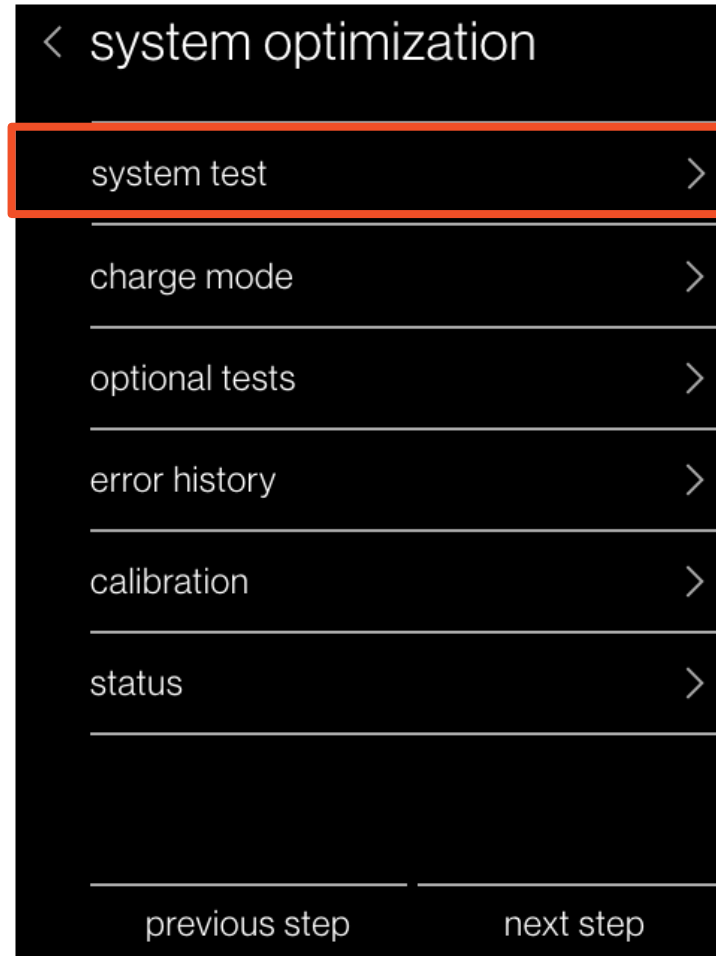

## Charge Mode




- Selecting **charge mode** allows for a steady system operation for approximately **1 hour** to allow for refrigerant charging of the system via the suction charge port.
- The system will stop after completion.
- **Note:** For proper charging of a system, please see equipment installation manual.

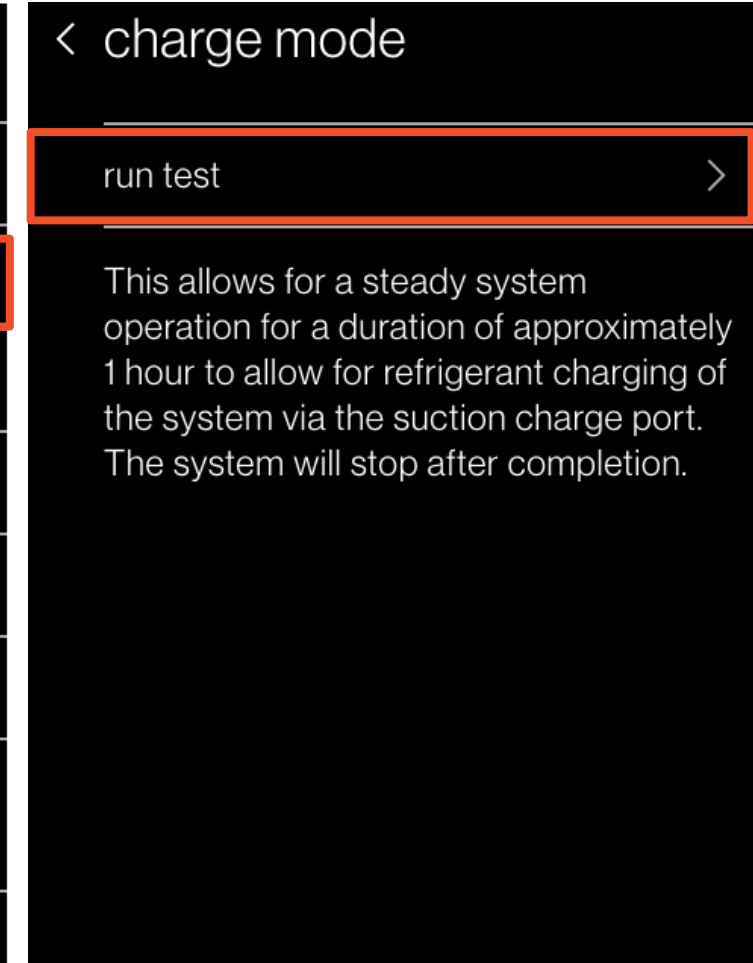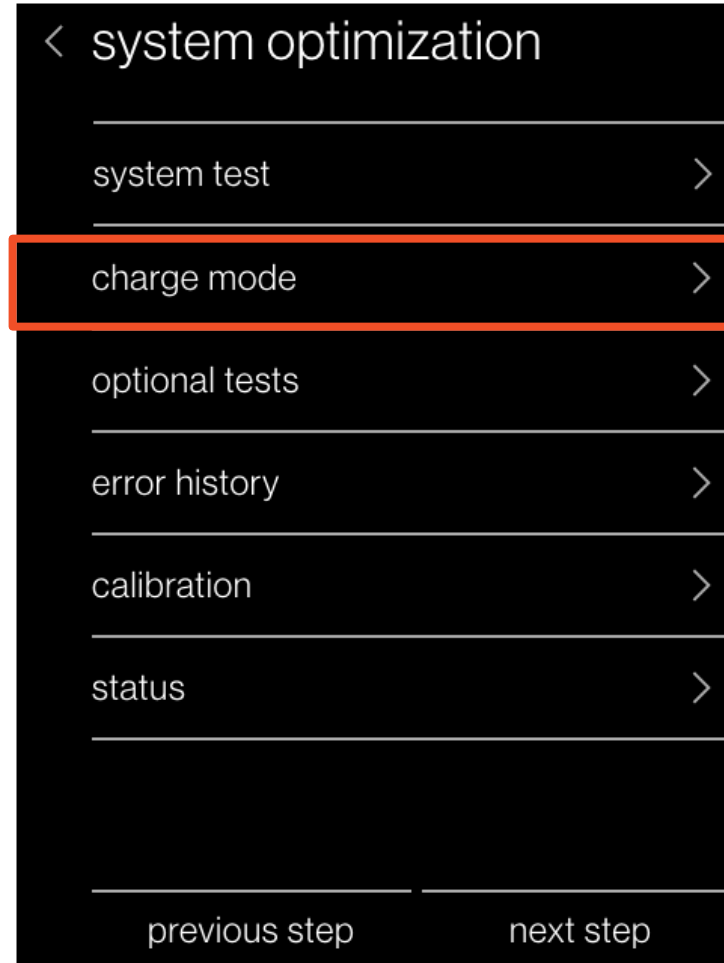

## Optional Tests



- Each optional test has a short description.
- Optional tests display a stop test button while test is running.

**Note: Thermostat will only display tests that the system can perform.**

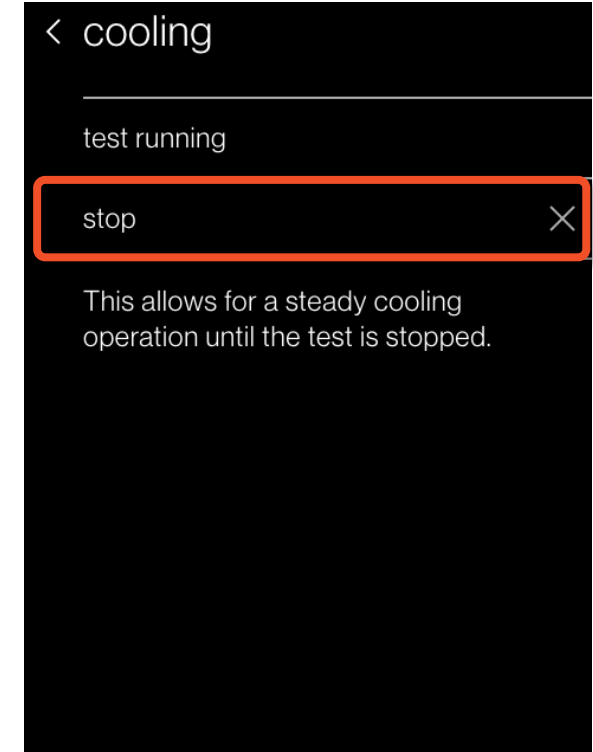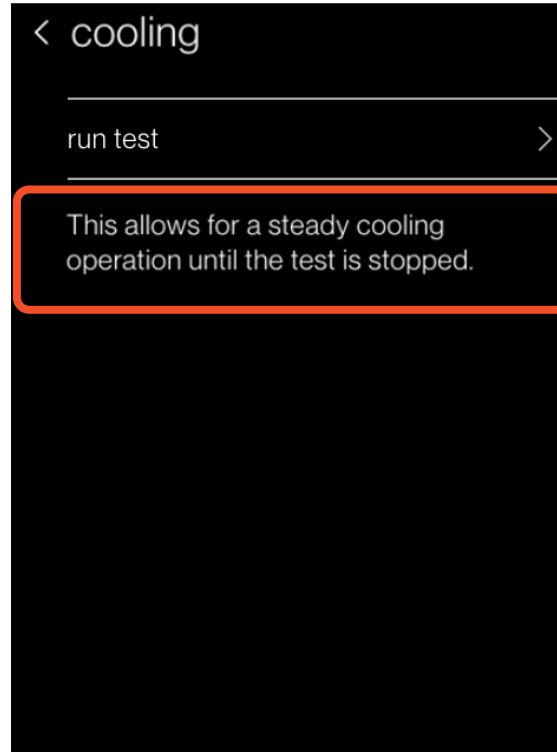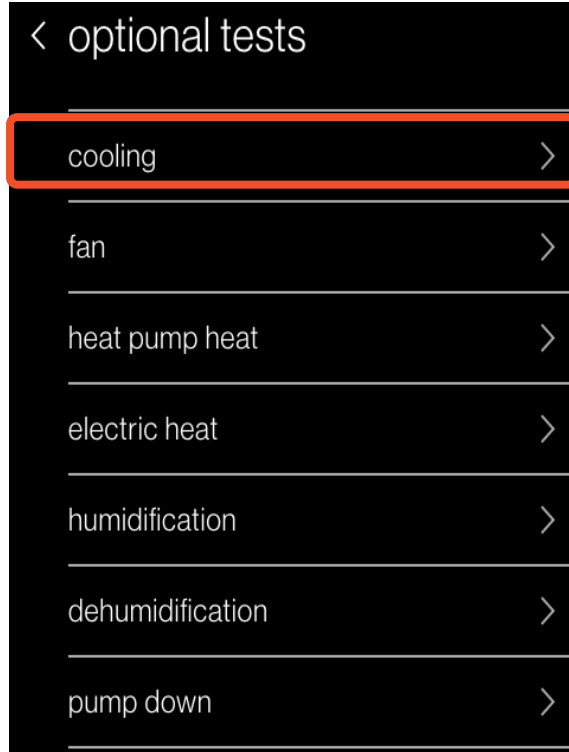

## Status

- The status menu displays data pertaining to the selected equipment.
- The scrollable list can be accessed any time by returning to the installer set-up screen.

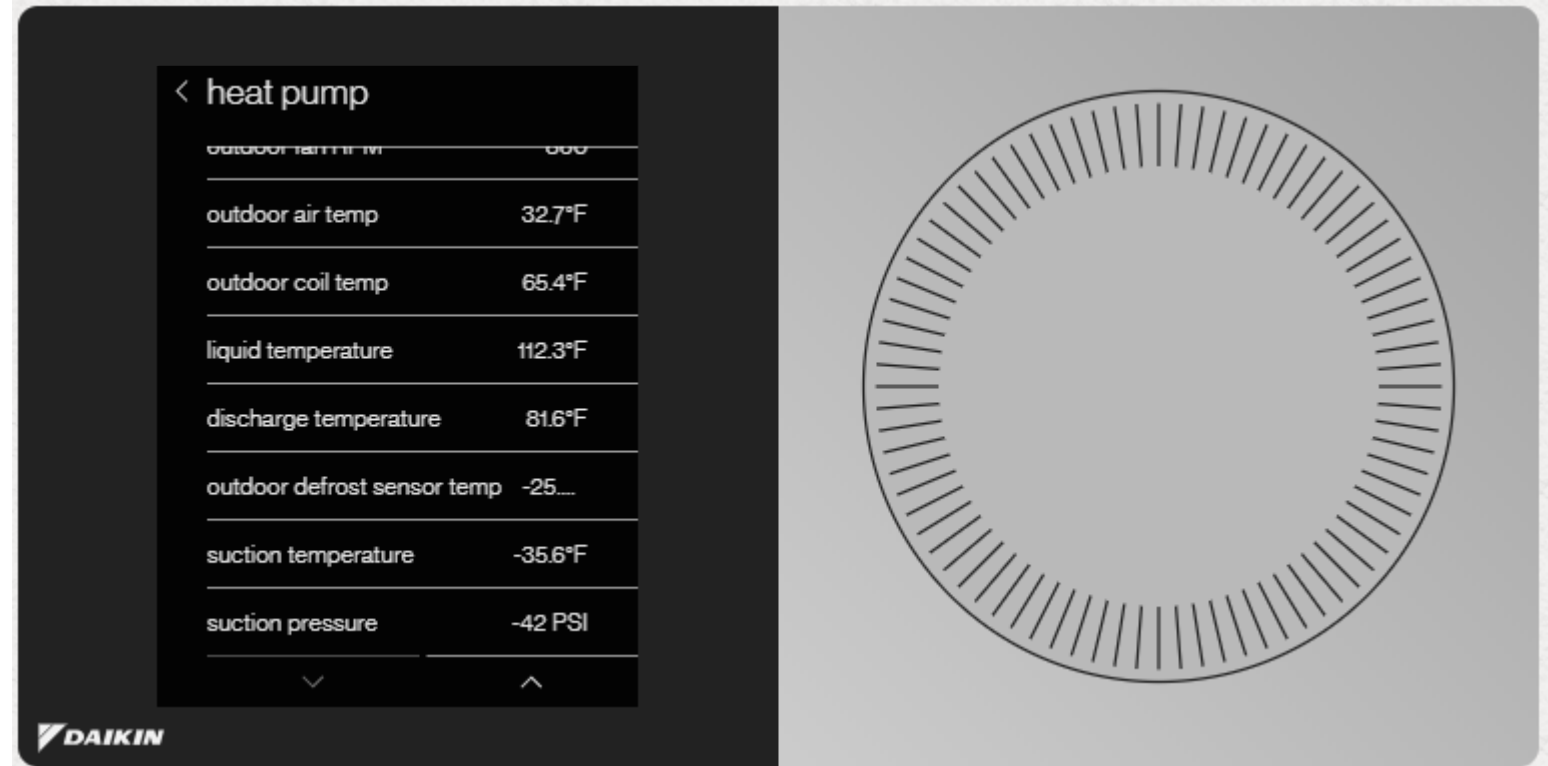
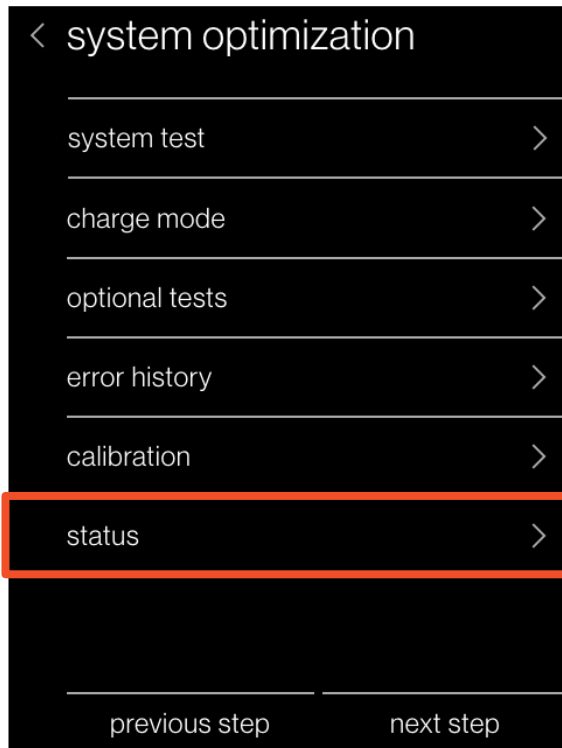


# Full Set-up

## Step 5 - Preferences



- There are four preference settings to choose from in order to optimize your systems performance.
  - Cool/Heat
  - House settings
  - Dealer information
  - Reminders

**Note:** Changing preferences is not required, but reminders and dealer contact information should be inputted.

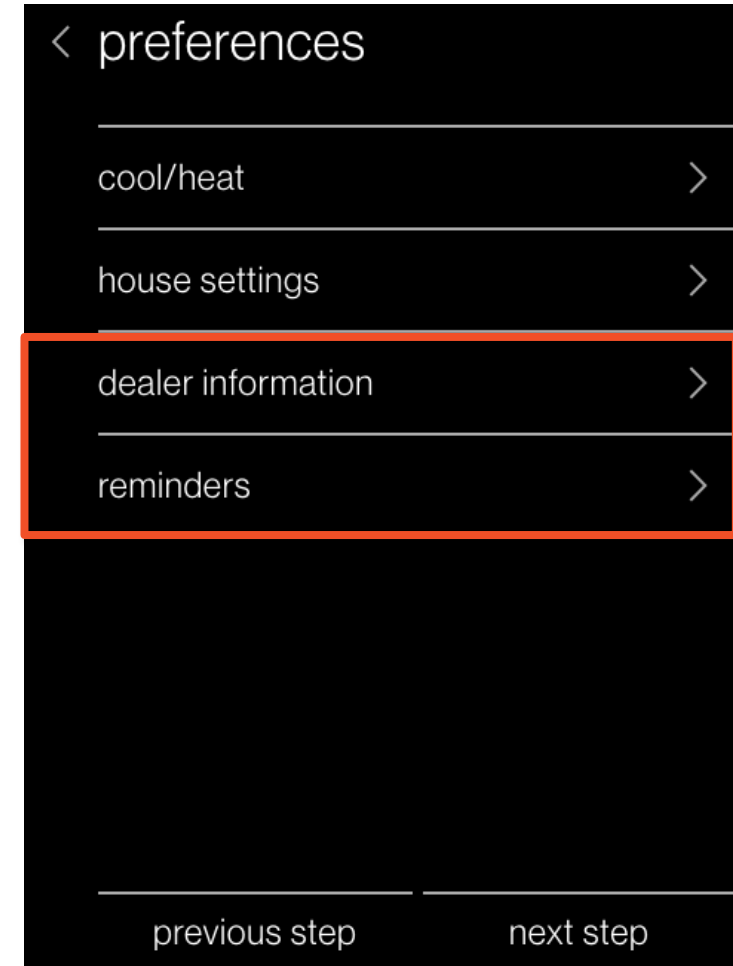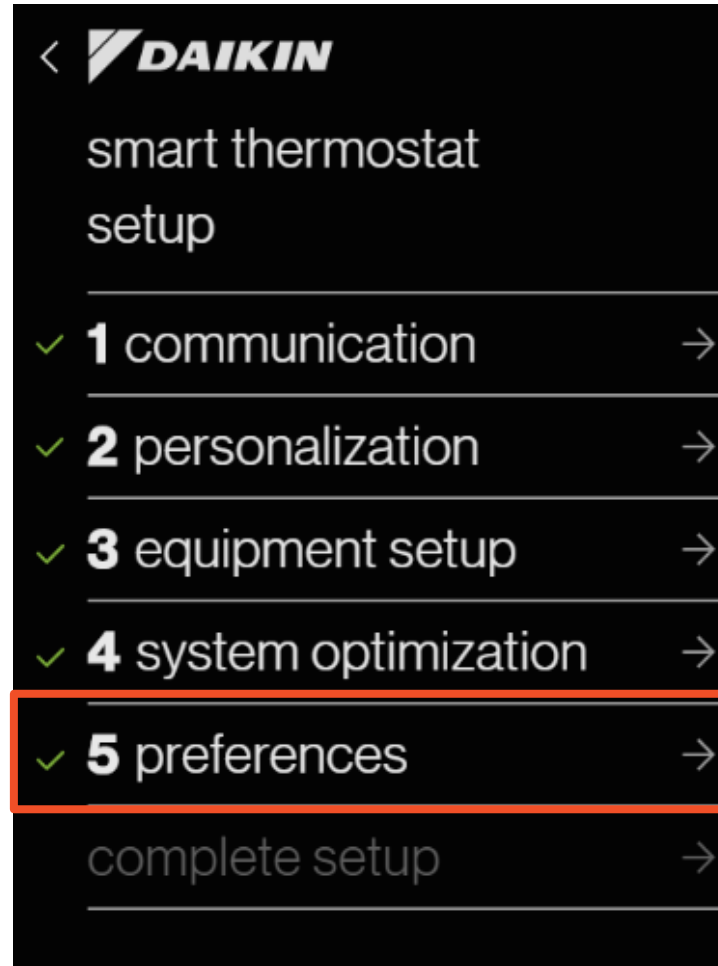

## Dealer information

- Selecting allows you to enter and review the dealer's information.

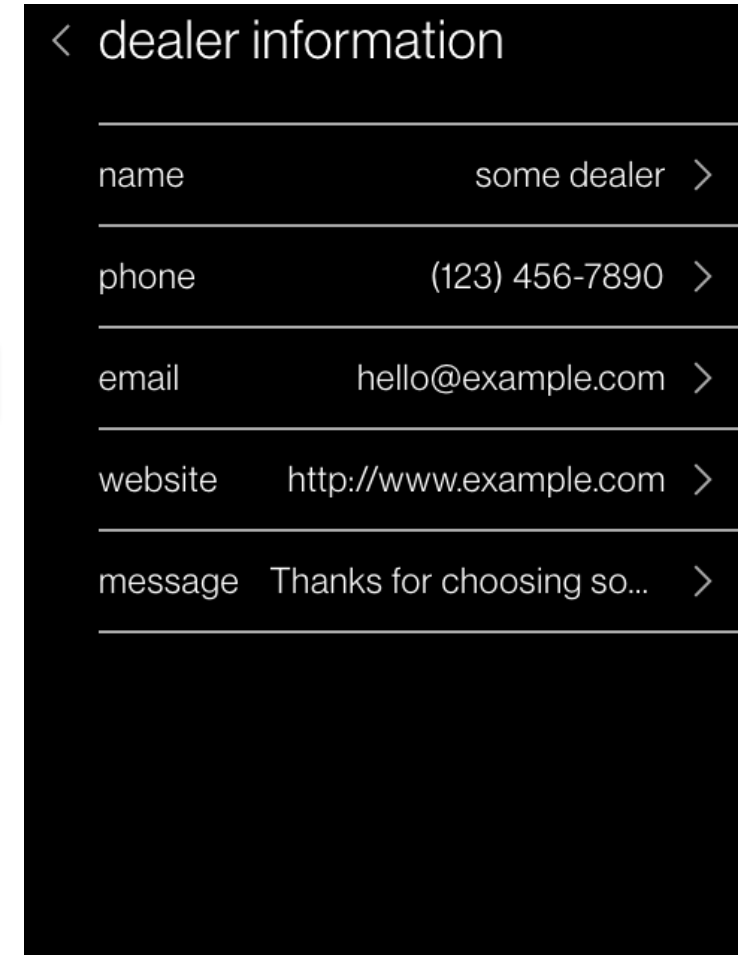
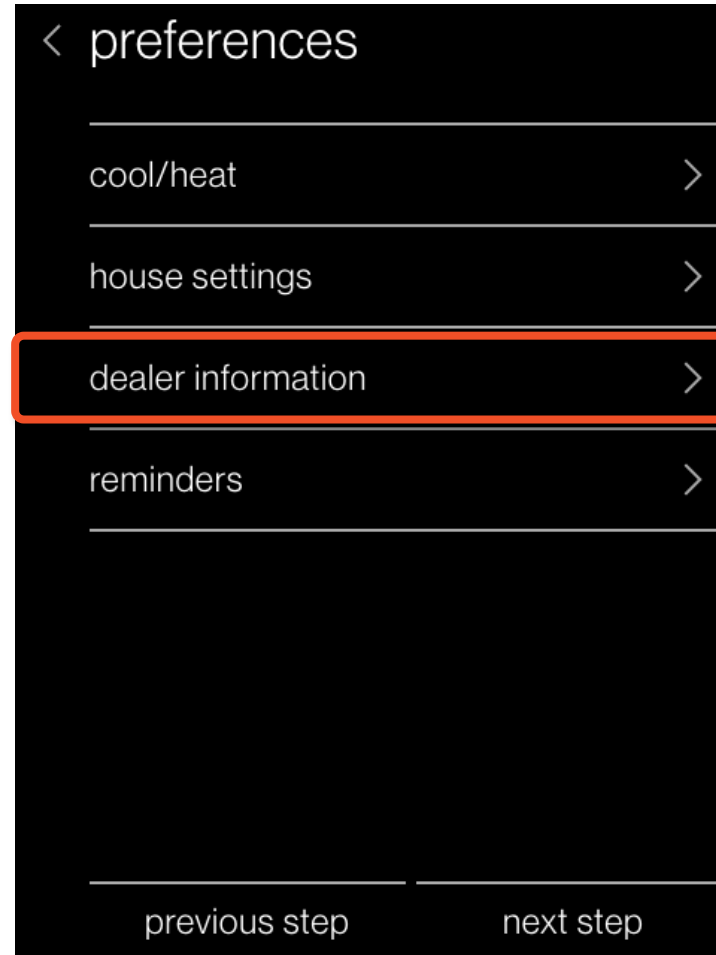


# Full Set-up

## Reminders

- The number of reminders are based on the installed equipment with accessories.
- Once the equipment has been added, a **1 – 24** month service reminder can be selected depending on the installed equipment.

**Note:** The homeowner cannot edit service reminders.

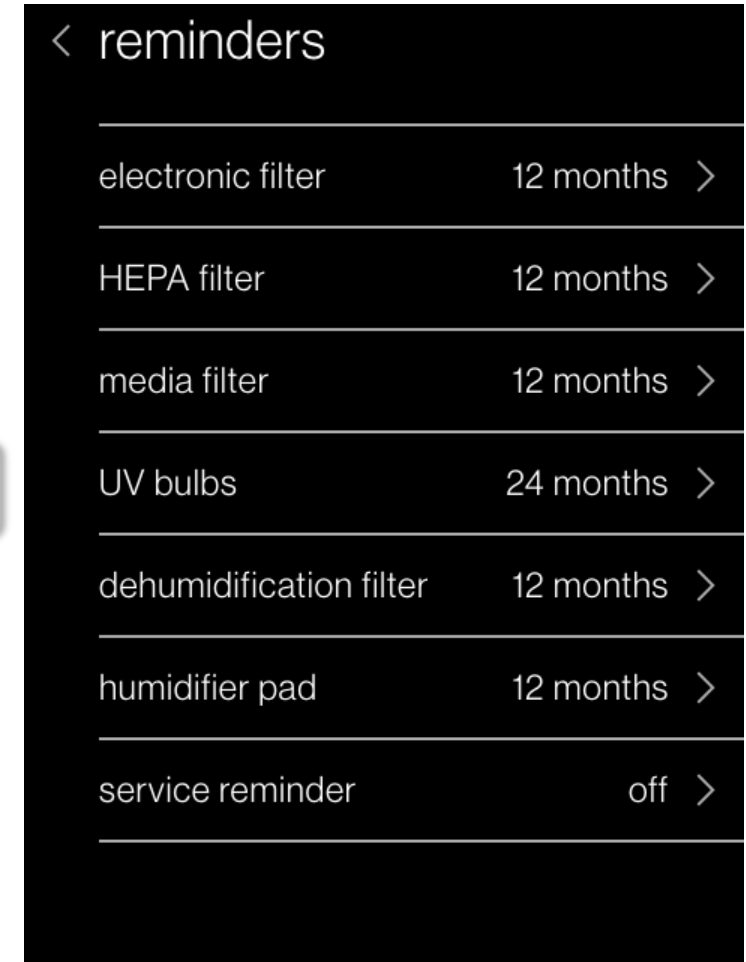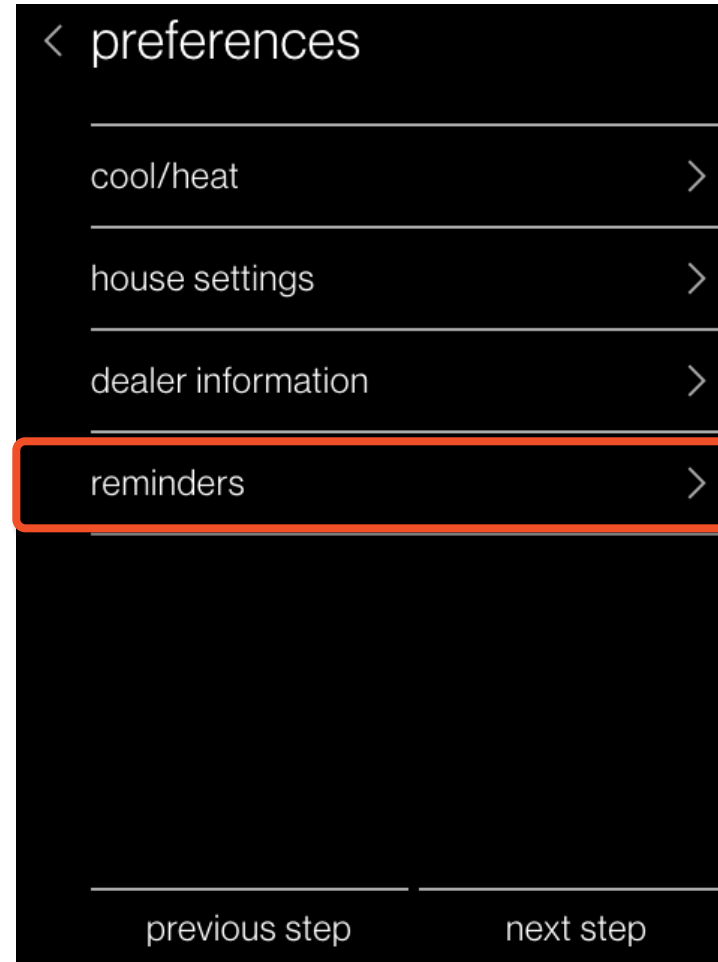




# Full Set-up

## Final step - Complete set-up

- Selecting complete set-up will conclude the full set-up of the thermostat and display normal mode for you to navigate and verify settings.

**Reminder:** All steps must be reviewed before completing full set-up.

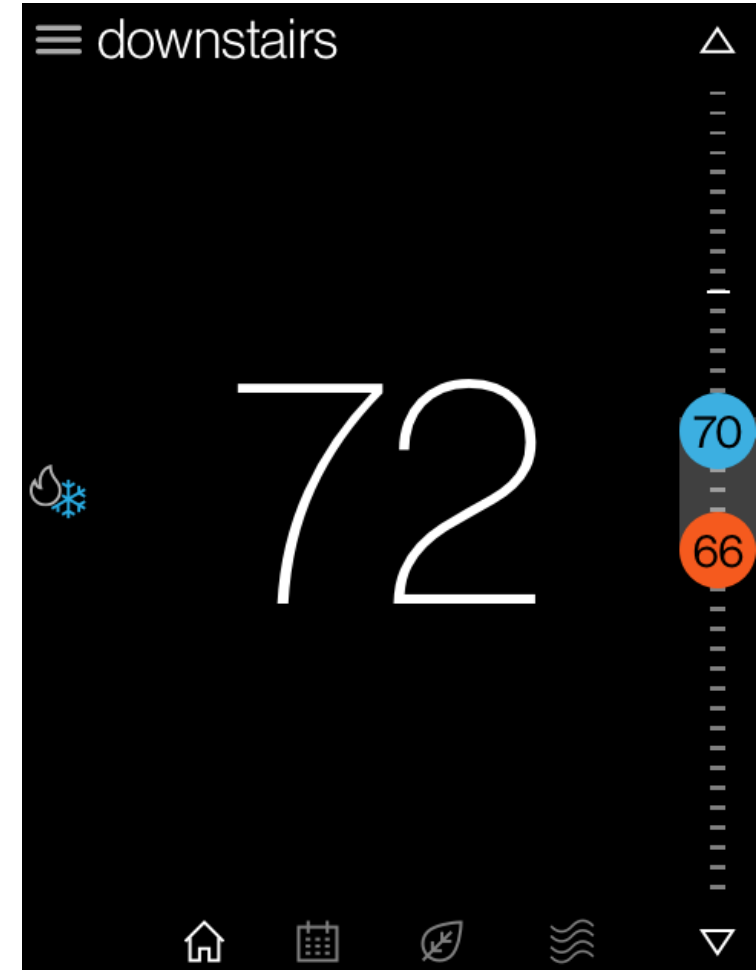

## Agenda

Daikin *One+*

System Configurations

Installing Daikin *One+*

Commissioning Daikin *One+*

Full Set-up

Dealer Navigation





Homeowner Navigation

Mobile Apps

# Dealer Navigation

## Dealer edit

- Navigating to **dealer edit** will allow you to access or revisit the installer set-up screen.
- Advanced adjustments to the Daikin *One+* will be made here.

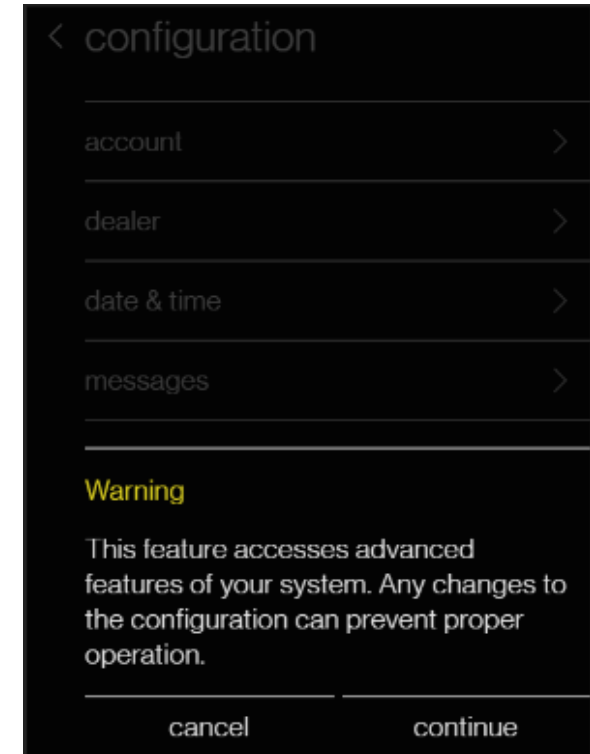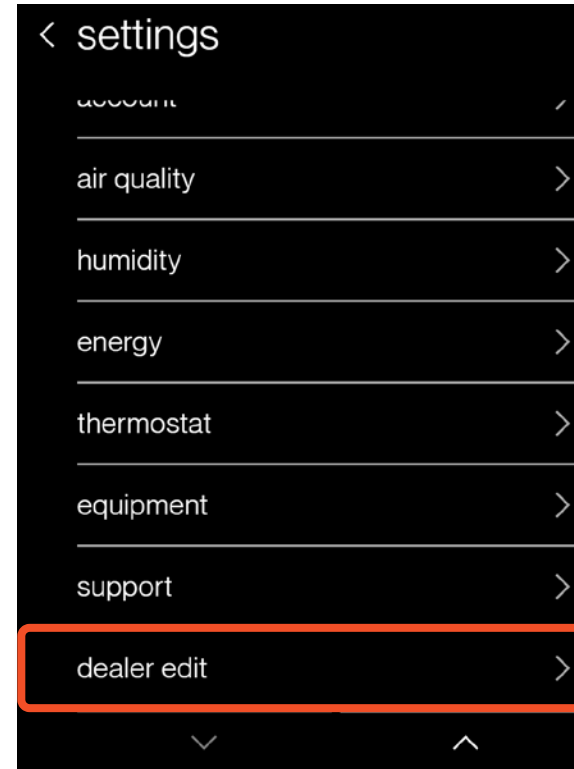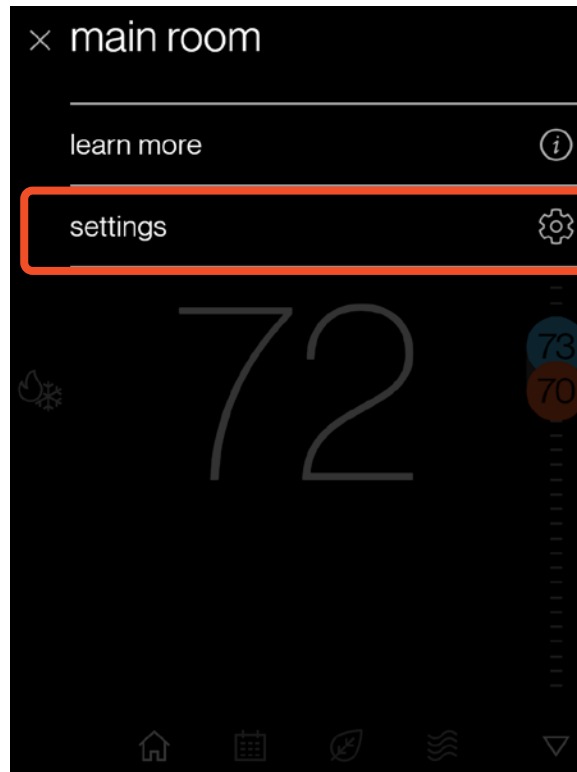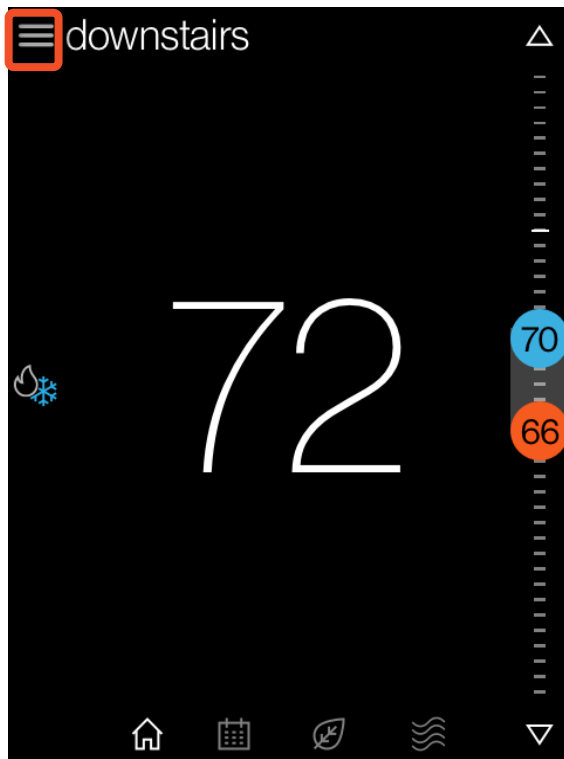

# Dealer Navigation

- Acknowledging the prompt enables you to tap the learn more icon.
- The icon displays the installer code, giving you access to the installer set-up screens.

The image displays two screenshots from a mobile application interface. The left screenshot shows a screen titled 'dealer edit' with a back arrow on the left and an information icon on the right. The main text reads 'Enter your 4-digit PIN to unlock the thermostat:' followed by four empty boxes for PIN entry. Below this is a text field containing 'unlock thermostat' and a lock icon. A keyboard is visible at the bottom. The right screenshot shows the same screen, but the information icon is highlighted with a red box. Below the text 'This thermostat's installer code is:', the code 'c0fe' is displayed and highlighted with a red box.

## Agenda

Daikin *One+*

System Configurations

Installing Daikin *One+*

Commissioning Daikin *One+*

Full Set-up

Dealer Navigation

Homeowner Navigation

Mobile Apps


## Normal Mode

- Normal mode allows you to view messaging, temperature, and access settings to adjust parameters placed by the installer.
- Navigating is accomplished by tapping icons or turning the analog dial.
- **Note:** Analog turn dial is used to adjust **temperature only**. Pressing the dial returns to the home screen.



## Adjust control

- Tapping the system mode icon allows you to select:
  - Auto. (cool & heat)
  - Cool.
  - Heat.
  - Off.
  - Emergency heat. (heat pump only)
- Tapping the arrow icons or rotating the dial will adjust setpoints that are displayed. You can also slide the setpoints to the desired temperature.

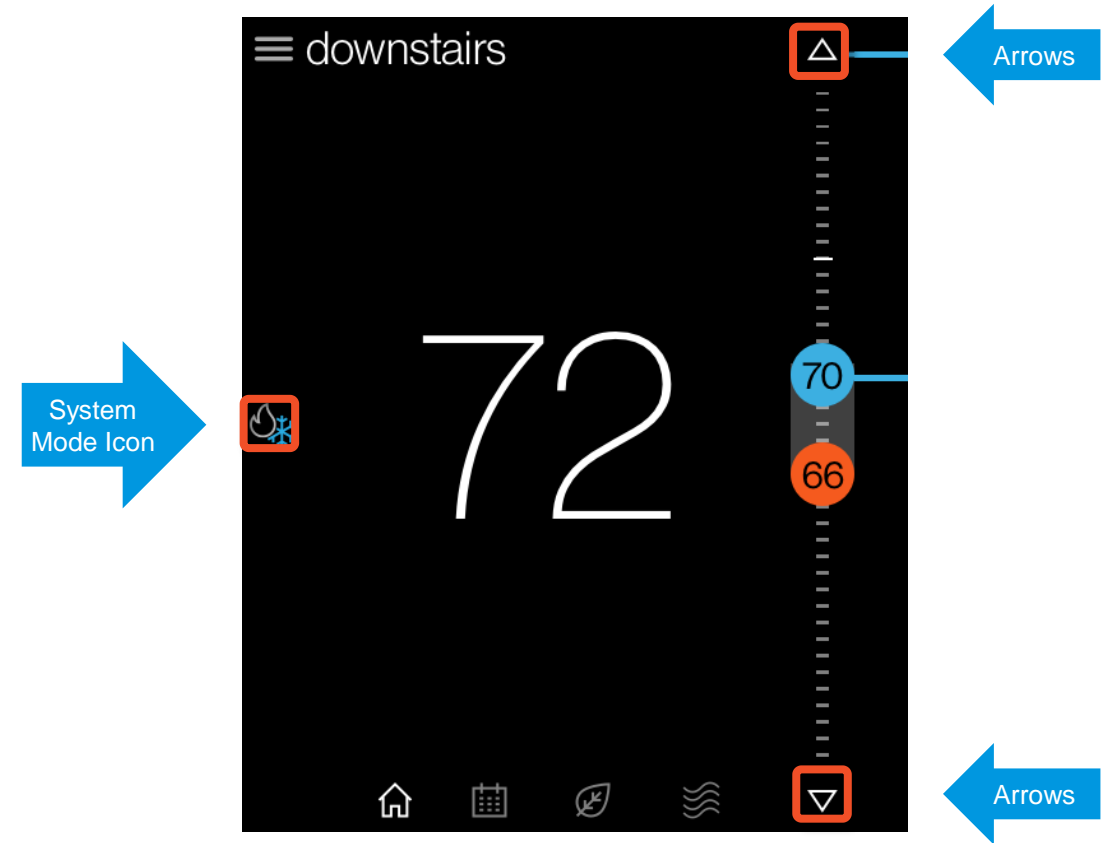


# Homeowner Navigation

## Schedule

- The schedule is presented as **7** days, displaying one day at a time, with **24** hours fitting on the screen.
- You can use the drop-down menu or swipe to enable schedule editing.
- Copy and paste is a feature that makes scheduling seamless.

**Note:** Unlike other screens, scheduling requires saving edits before exiting the mode.


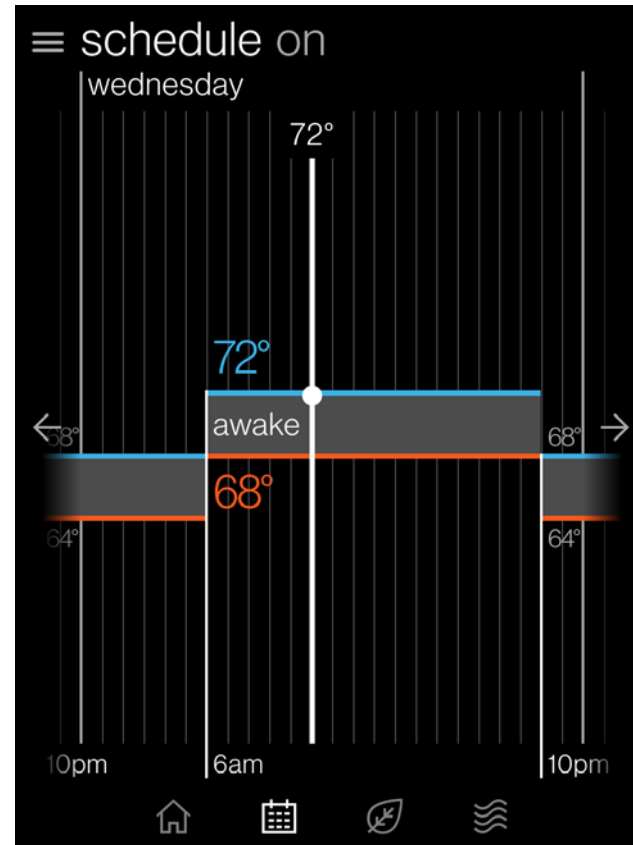




# Homeowner Navigation



## Away

- The away screen displays the current state (on/off) and the away cooling/heating setpoints used when away is on.
  - on/off is selected from drop down menu.
- User can change the values of the setpoints by dragging the numbers or the comfort range up and down.
- With the mobile application, enabling geo-fencing will automatically switch to away mode when **outside** the radius.
  - Settings must be configured in the mobile application.

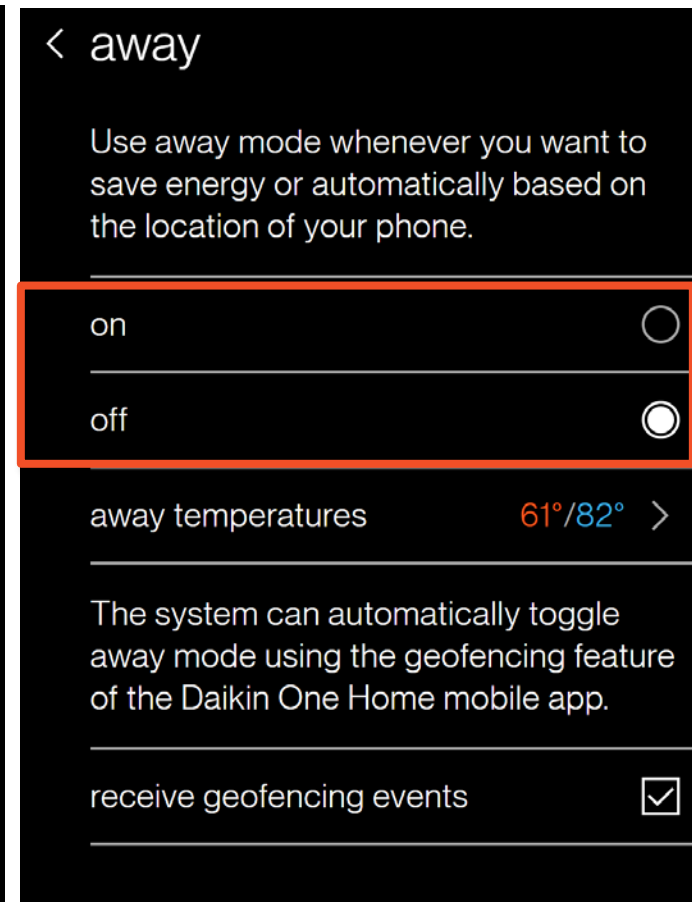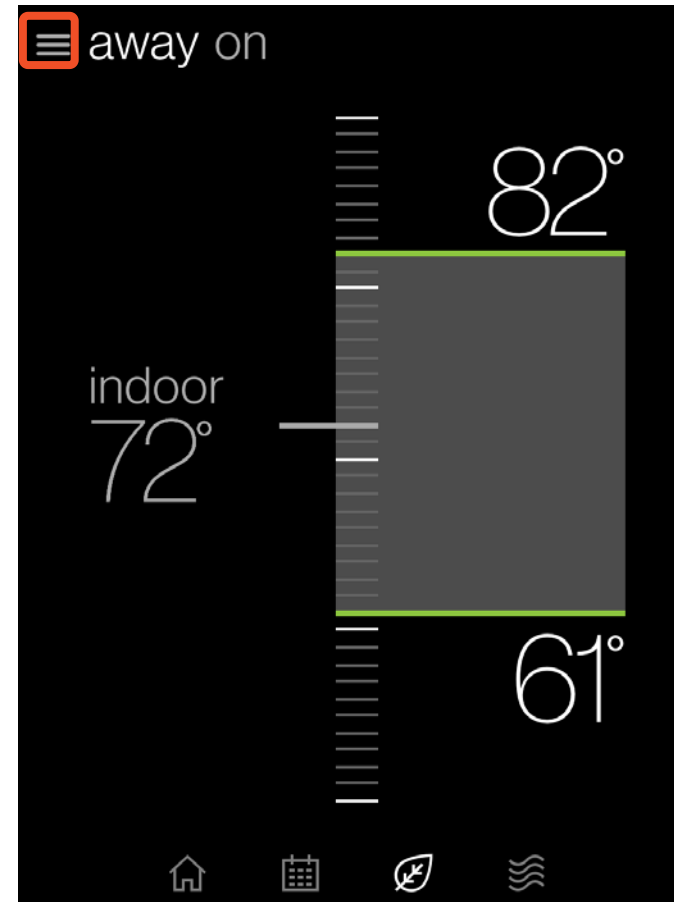

## Air quality



- The air quality screen displays **indoor air** quality levels, **outdoor air** quality, and **weather** (when connected to the internet and paired with the app.)
- If air quality sensors **are not** installed, indoor air quality is based on filter life cycle and humidity values.
- Selecting indoor air quality from the air quality screen allows you to access **one clean and air quality history**.
  - **One clean** runs the fan, at high speed for three hours, to circulate and filter the indoor air.

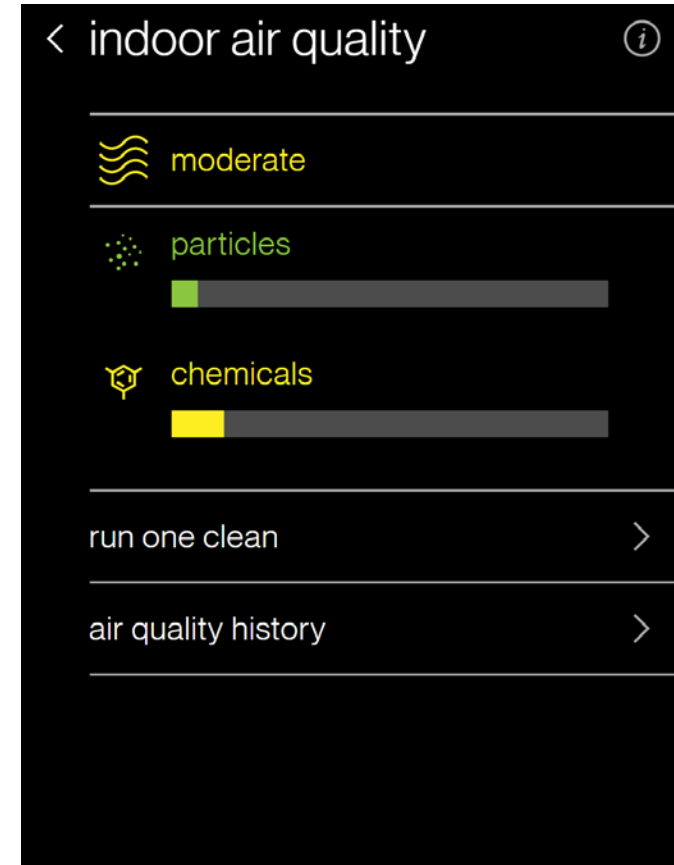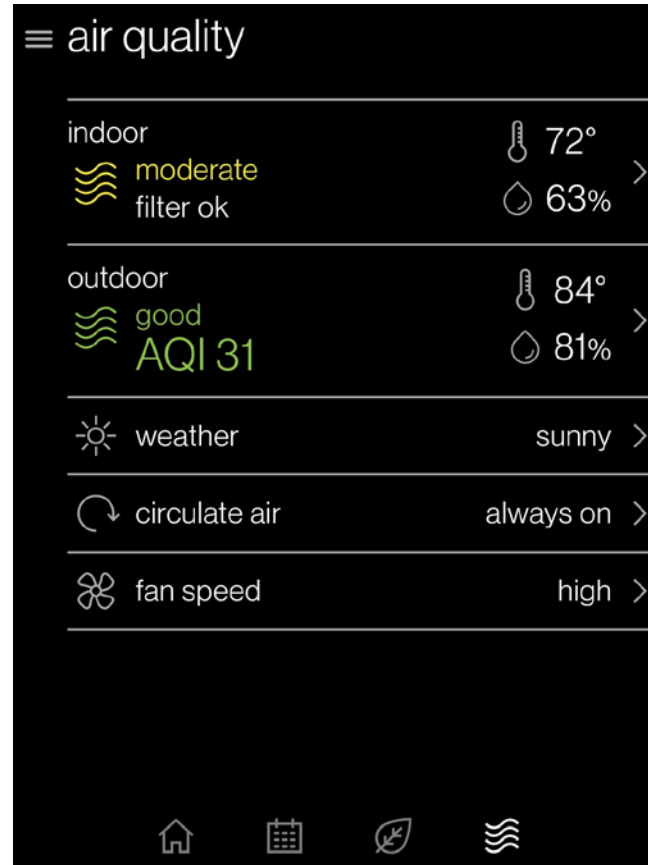

# Homeowner Navigation

## Settings

- Settings gives you access to additional supporting features:
  - Display.
    - Adjust and enable visual features.
  - Comfort.
    - Set target humidity.
  - Configuration.
    - App. account setup
    - Dealer information
    - Date & Time
    - Enable messages/view alerts
    - System components
    - Home Wi-Fi

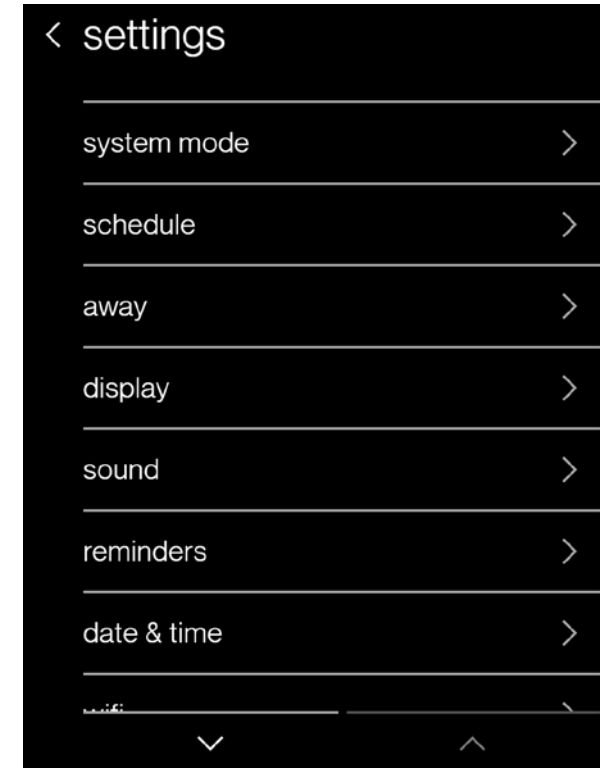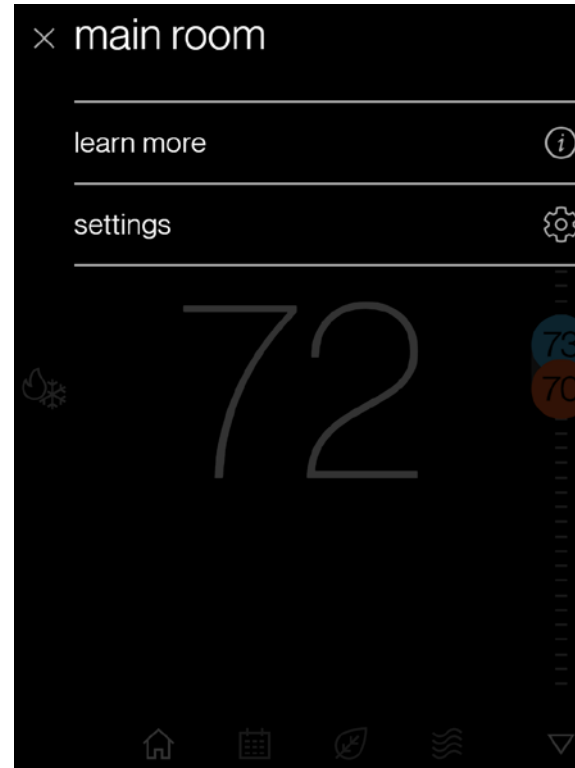

## Agenda

Daikin *One+*

System Configurations

Installing Daikin *One+*

Commissioning Daikin *One+*

Full Set-up

Dealer Navigation



Homeowner Navigation

Mobile Apps

## Account set-up




- Setting up an account is a four-step process.
  1. Downloading the application from your IOS or Android application store.
    - Creating the account.
  2. Confirming your account.
  3. Adding the thermostats' location.
  4. Connecting the app to the thermostat.

**Note:** A mobile device, the **Daikin One+** connected to **Wi-Fi** that is wired to a **communicating system** and a valid **email address** is needed to create a mobile account.

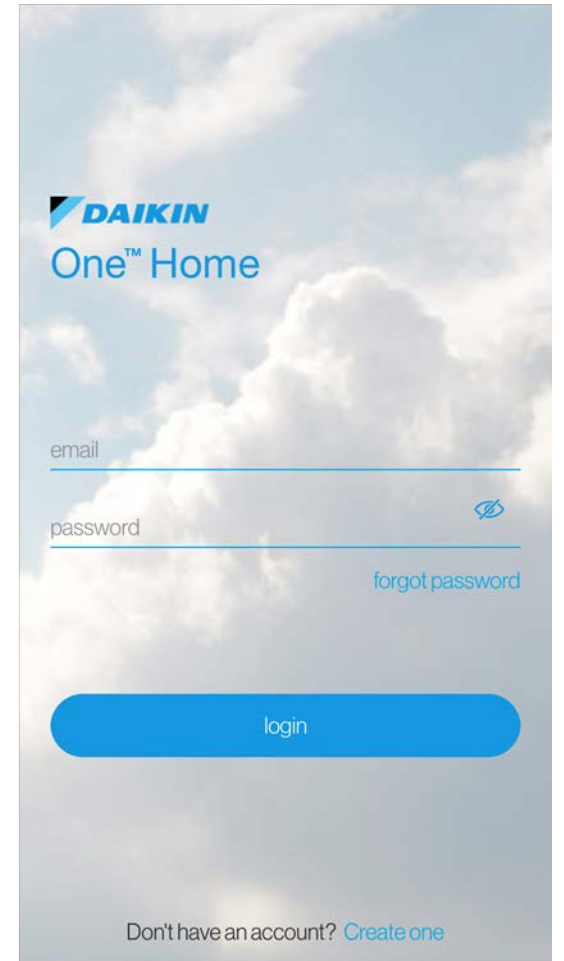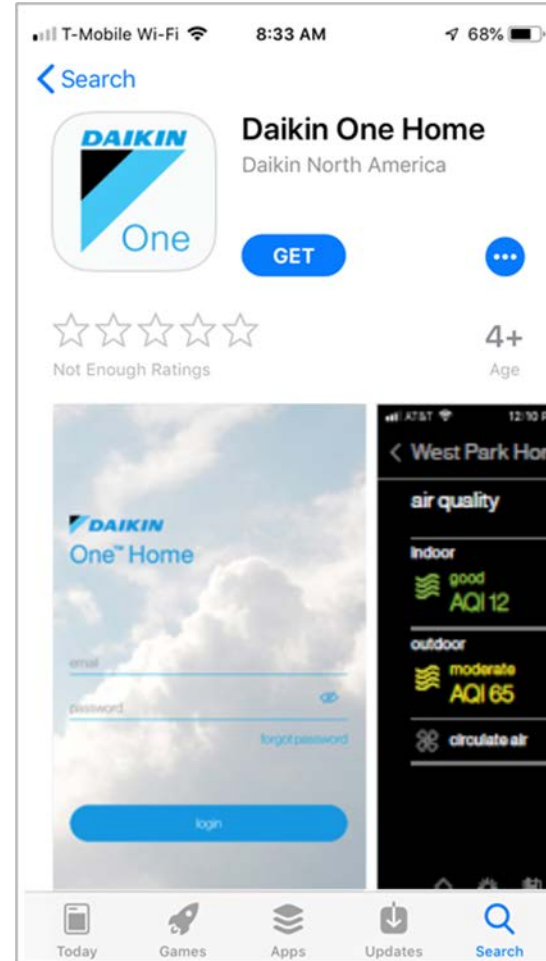




## Step 1 - Create the account

- Tapping create one at the bottom right corner of the login screen will start the process.
- Before agreeing, read the terms and service, privacy statement, and other notices.
- Fill in your name, valid email address, and password.

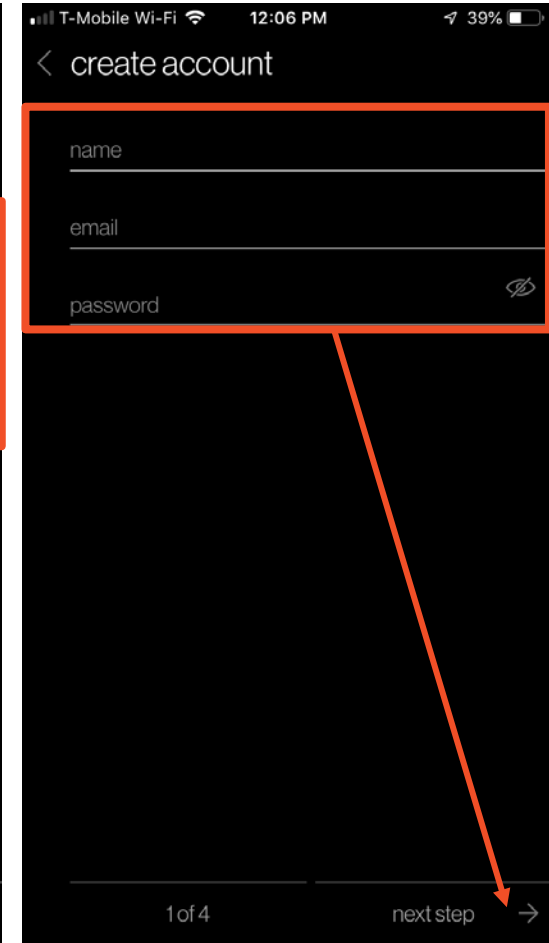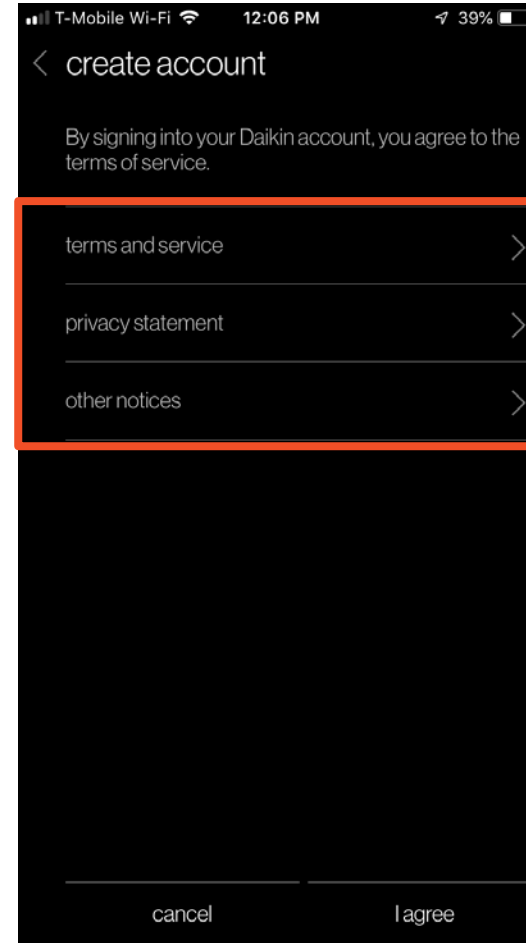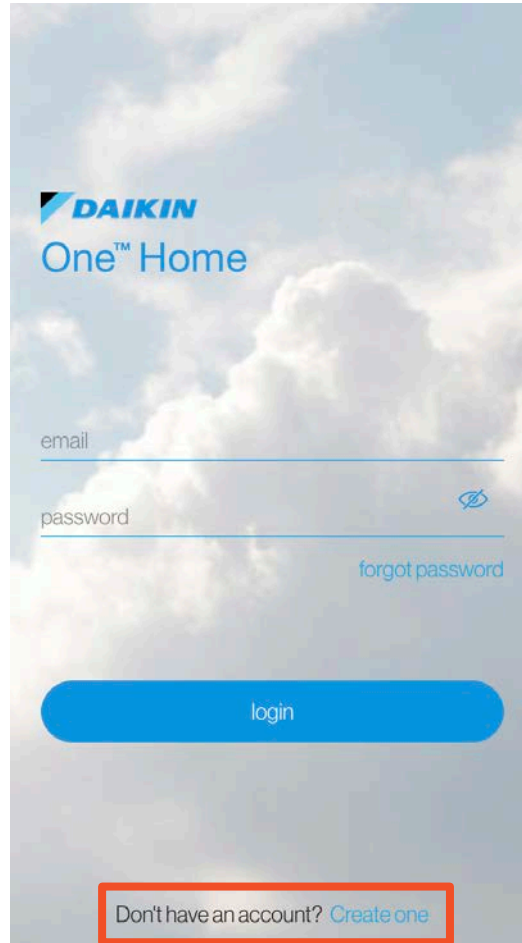


## Step 2 - Confirming the account

- You will be prompted to access the email address you provided when creating the account.
- A welcome email will appear in your inbox providing a six-digit code.
- Entering the six-digit code on your phone app. will allow you to continue.

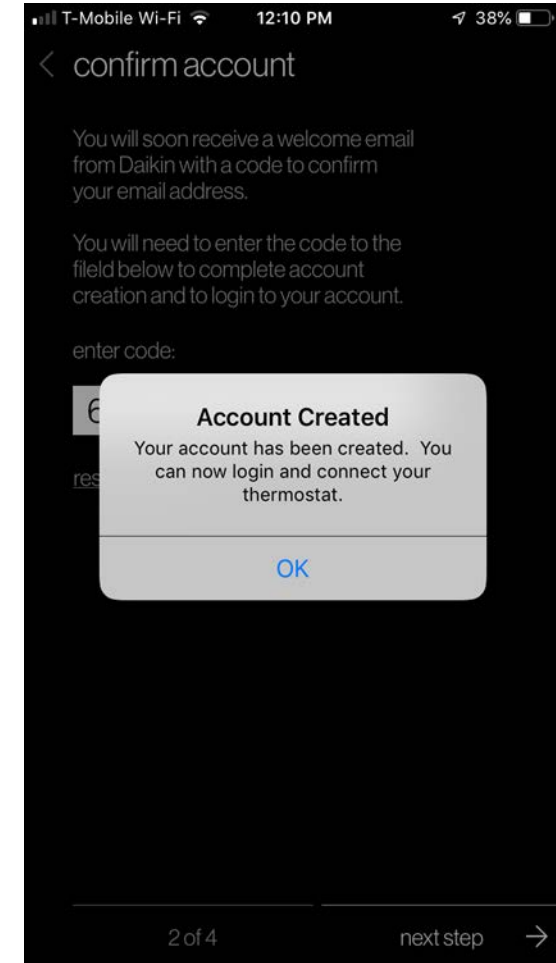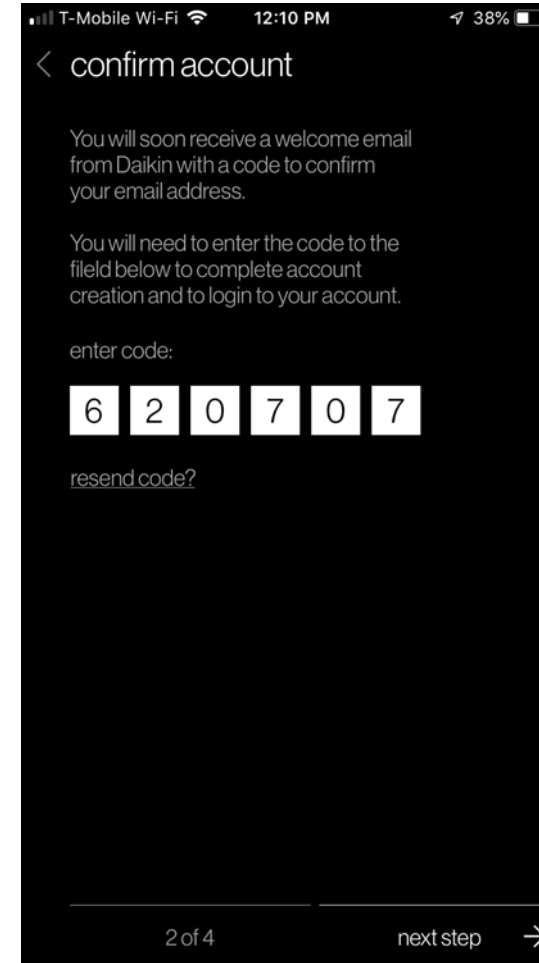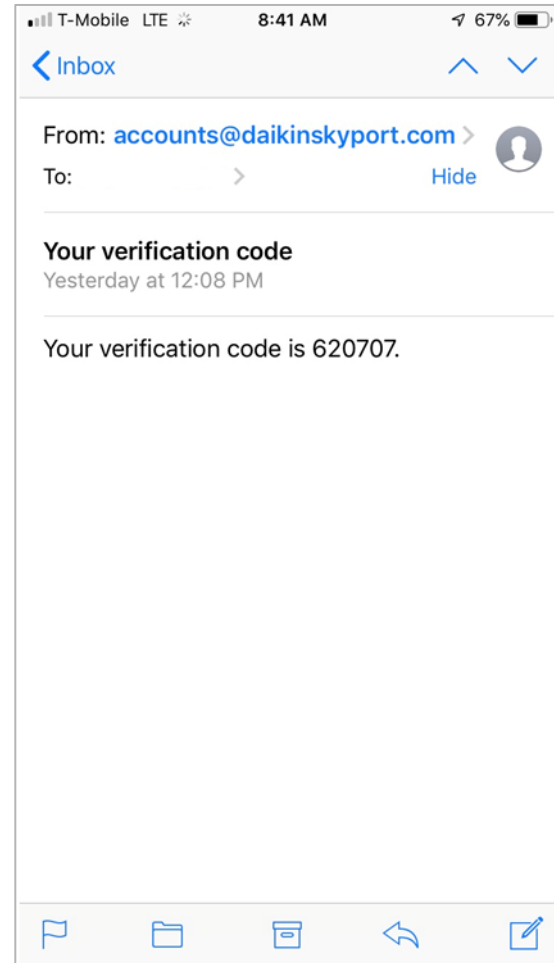

## Step 3 - Adding the thermostats location




- Enter the email and password associated to your mobile account and tap the login button.
  - If you have forgotten your password, tap the forgot password link to recover information via email.
- Type the address of where the thermostat is located to gather accurate information.

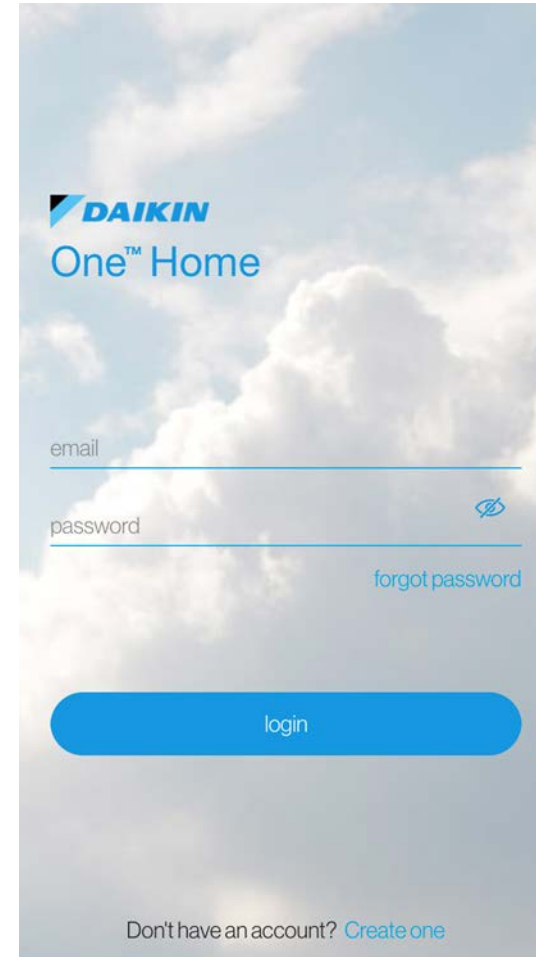



## Step 4 - Connecting the App to the thermostat

- With Wi-Fi enabled on your thermostat, access your account to retrieve the six-digit code.
- Type the six-digit code displayed on your thermostat into the space provided on the mobile app.
- Tap connect to continue and operate the Daikin *One+* from your mobile device.

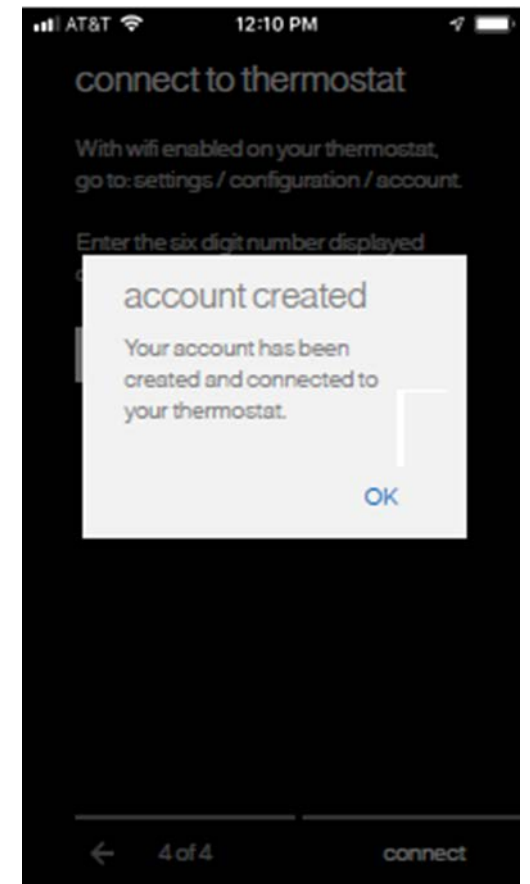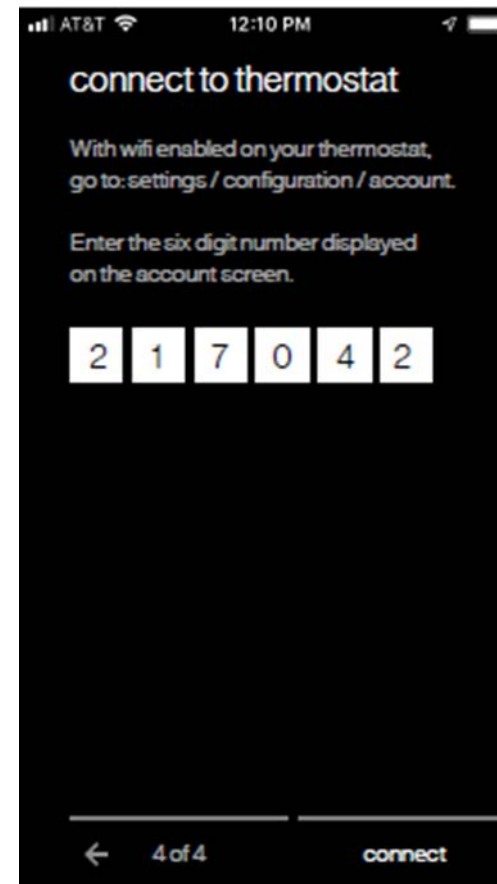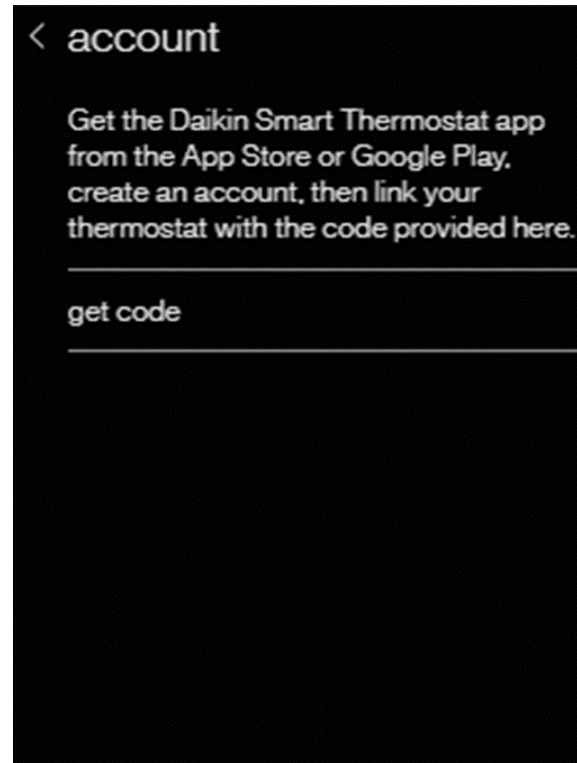

# Mobile Apps



Visit [Daikinone.com](http://Daikinone.com) for additional information



**DAIKIN**

*AIR INTELLIGENCE*