1_	and One Touch Thermostat C	commissioning Me	enu Outline for Mini/N	lulti-split (S21)	equipment, v3.5 softv	vare	I	
Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	Default	Display only?	Conditions
	english							
welcome	español française	(radio buttons)				english		
	use large font (checkbox)					unchecked		
	continue							
equipment type	unitary (radio button)	-				-		
	single/multi-split (S21) (radio button)	cancel continue				unitary		
	VRV, SkyAir, single/multi-split (P1P2) (radio button) continue							
		(to smart thermostat setup						
	begin setup setup options	with 5 main steps below) factory reset						
setup	learn more	firmware (version #) check for update						
	thermostat ID	(2D barcode of DKN number						
	(DKN number)	for cloud commissioning) dismiss						
	equipment type	unitary mini/multi-split (S21)						
		VRV, SkyAir, mini/multi-split				unitary		
		(P1/P2) use wifi						
		networks	(list of available networks) search again					Only appears when "use wifi" selected
I. Communication		internet connected (tickmark)	<u> </u>				Yes	Only appears when connected to acive wifi network.
		Daikin One Cloud connected						Only appears if successfully connect to
		(tickmark)	terms of use	(text)			Yes Yes	internet.
		legal notices	privacy policy end user license agreement	(text) (text)			Yes Yes	
		restart thermostat		(conty)				If internet connected but not cloud
	language	english español				english		
	use large font	française (checkbox)				unchecked		
		(month, day, and year				, interest		set automatically when connect to WiFi.
	date & time	selection) (hour, minute, and am/pm		1				set automatically when connect to WiFi.
		selection) use 24-hour time format		+		disabled		55. Gatomationly which confident to WIFI.
2. Personalization		time zone main room	(list of time zones)			Pacific		set automatically when connect to mobile app
	name	upstairs						
		downstairs hallway	(text entry for other)			main room		
		bedroom kitchen	(text entry for other)			main room		
		other (other name)						
	degree units	fahrenheit				fahrenheit		
	Indoor Unit: (model #)	celsius Indoor Unit: (model #)	(niels from liet)					
		(description based on model number)	(pick from list) edit	(text entry)				
		Serial #:	(text entry)	(text entry)				
			wall-mount unit four-way ceiling cassette					Set automatically when model number selected
		unit type	one-way blow cassette floor-mount unit concealed ducted unit				Maybe	from list. Default allows manual entry, also allowed if manually entered model number.
	Outdoor Unit: (model #)	Outdoor Unit: (model #)	(pick from list)					
		(description based on model number)						
		Serial #	edit (text entry)	(text entry)				
	Standard filter	Number of filters	1, 2 Do you want to remove this			1		
		Remove equipment	equipment?	Yes/No				
	Add Carriage and	Air quality sensor Aux heat source						
	Add Equipment	Filter box HEPA filter						Can only add 1 of each type.
	Indoor air quality sensor		Do you want to remove this	Cancel				
3. Equipment Setup	indoor an quanty sensor		equipment? Aux1	Continue				
		Connection	Aux2		Heat pump lockout enable			
				Heat pump lockout	(checkbox)	disabled		If aux heater added.
					-20°F to 65°F in 5°F steps	15°F		The HP lockout must be at least 10°F < aux
					(-27.5°C to 17.5°C in 2.5°C steps)	(-10°C)		heat lockout.
•					Aux host lookeut enable (-b)	dio obla-l		1
•		Heat Pump is primary heat	Control	Aux heat lockout	Aux heat lockout enable (checkbox) -10°F to 75°F in 5°F increments	disabled 50°F		
•		Heat Pump is primary heat source	Control	Aux heat lockout	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential:	50°F (10°C)		
•			Control		-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps)	50°F		
•	Aux heat source		Control	Aux heat lockout T on / T off	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential:	50°F (10°C) -3°F (-1.5°C)		Must be at least 4°F (2°C) above Ton
•	Aux heat source		Control		-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps)	50°F (10°C) -3°F (-1.5°C)		Must be at least 4°F (2°C) above Ton
•	Aux heat source		Control	T on / T off	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps) Heat pump lockout enable (checkbox)	50°F (10°C) -3°F (-1.5°C) 1°F (0.5°C) disabled		If aux heater added.
•	Aux heat source		Control		-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps) Heat pump lockout enable	50°F (10°C) -3°F (-1.5°C) 1°F (0.5°C) disabled 15°F		
	Aux heat source	source	Control	T on / T off	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps) Heat pump lockout enable (checkbox) -20°F to 65°F in 5°F steps (-27.5°C to 17.5°C in 2.5°C steps) -9°F, -7°F, -5°F, -4°F, or -2°F	50°F (10°C) -3°F (-1.5°C) 1°F (0.5°C) disabled 15°F (-10°C) -2°F		If aux heater added. The HP lockout must be at least 10°F < aux
	Aux heat source	source		T on / T off Heat pump lockout	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps) Heat pump lockout enable (checkbox) -20°F to 65°F in 5°F steps (-27.5°C to 17.5°C in 2.5°C steps) -9°F, -7°F, -5°F, -4°F, or -2°F (-5°C to -1°C in 1°C steps) Turn on temperature differential:	50°F (10°C) -3°F (-1.5°C) 1°F (0.5°C) disabled 15°F (-10°C) -2°F (-1°C) -1°F		If aux heater added. The HP lockout must be at least 10°F < aux
	Aux heat source	source		T on / T off Heat pump lockout Setpoint differential T on differential	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps) Heat pump lockout enable (checkbox) -20°F to 65°F in 5°F steps (-27.5°C to 17.5°C in 2.5°C steps) -9°F, -7°F, -5°F, -4°F, or -2°F (-5°C to -1°C in 1°C steps) Turn on temperature differential: -1 or -2°F (-0.5 or -1.0°C) Turn off temperature differential:	50°F (10°C) -3°F (-1.5°C) 1°F (0.5°C) disabled 15°F (-10°C) -2°F (-1°C) -1°F (-0.5°C)	Yes	If aux heater added. The HP lockout must be at least 10°F < aux
	Aux heat source	Aux is primary heat source	Control Do you want to remove this	T on / T off Heat pump lockout Setpoint differential T on differential T off differential Cancel	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps) Heat pump lockout enable (checkbox) -20°F to 65°F in 5°F steps (-27.5°C to 17.5°C in 2.5°C steps) -9°F, -7°F, -5°F, -4°F, or -2°F (-5°C to -1°C in 1°C steps) Turn on temperature differential: -1 or -2°F (-0.5 or -1.0°C)	50°F (10°C) -3°F (-1.5°C) 1°F (0.5°C) disabled 15°F (-10°C) -2°F (-1°C) -1°F (-0.5°C)	Yes	If aux heater added. The HP lockout must be at least 10°F < aux
	Aux heat source	Aux is primary heat source Remove equipment	Control Do you want to remove this equipment?	T on / T off Heat pump lockout Setpoint differential T on differential T off differential	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps) Heat pump lockout enable (checkbox) -20°F to 65°F in 5°F steps (-27.5°C to 17.5°C in 2.5°C steps) -9°F, -7°F, -5°F, -4°F, or -2°F (-5°C to -1°C in 1°C steps) Turn on temperature differential: -1 or -2°F (-0.5 or -1.0°C) Turn off temperature differential:	50°F (10°C) -3°F (-1.5°C) 1°F (0.5°C) disabled 15°F (-10°C) -2°F (-1°C) -1°F (-0.5°C)	Yes	If aux heater added. The HP lockout must be at least 10°F < aux heat lockout.
	Aux heat source Filter box	Aux is primary heat source Remove equipment Number of filters	Control Do you want to remove this equipment? 1, 2 Do you want to remove this	T on / T off Heat pump lockout Setpoint differential T on differential T off differential Cancel Continue Cancel	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps) Heat pump lockout enable (checkbox) -20°F to 65°F in 5°F steps (-27.5°C to 17.5°C in 2.5°C steps) -9°F, -7°F, -5°F, -4°F, or -2°F (-5°C to -1°C in 1°C steps) Turn on temperature differential: -1 or -2°F (-0.5 or -1.0°C) Turn off temperature differential:	50°F (10°C) -3°F (-1.5°C) 1°F (0.5°C) disabled 15°F (-10°C) -2°F (-1°C) -1°F (-0.5°C) 1°F (0.5°C)	Yes	If aux heater added. The HP lockout must be at least 10°F < aux
		Aux is primary heat source Remove equipment Number of filters	Control Do you want to remove this equipment? 1, 2	T on / T off Heat pump lockout Setpoint differential T on differential T off differential Cancel Continue	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps) Heat pump lockout enable (checkbox) -20°F to 65°F in 5°F steps (-27.5°C to 17.5°C in 2.5°C steps) -9°F, -7°F, -5°F, -4°F, or -2°F (-5°C to -1°C in 1°C steps) Turn on temperature differential: -1 or -2°F (-0.5 or -1.0°C) Turn off temperature differential:	50°F (10°C) -3°F (-1.5°C) 1°F (0.5°C) disabled 15°F (-10°C) -2°F (-1°C) -1°F (-0.5°C) 1°F (0.5°C)	Yes	If aux heater added. The HP lockout must be at least 10°F < aux heat lockout.
		Aux is primary heat source Remove equipment Number of filters Remove equipment Number of filters	Control Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? 1, 2 Do you want to remove this	T on / T off Heat pump lockout Setpoint differential T on differential T off differential Cancel Continue Cancel Continue Cancel	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps) Heat pump lockout enable (checkbox) -20°F to 65°F in 5°F steps (-27.5°C to 17.5°C in 2.5°C steps) -9°F, -7°F, -5°F, -4°F, or -2°F (-5°C to -1°C in 1°C steps) Turn on temperature differential: -1 or -2°F (-0.5 or -1.0°C) Turn off temperature differential:	50°F (10°C) -3°F (-1.5°C) 1°F (0.5°C) disabled 15°F (-10°C) -2°F (-1°C) -1°F (-0.5°C) 1°F (0.5°C)	Yes	If aux heater added. The HP lockout must be at least 10°F < aux heat lockout. If filter box added.
	Filter box	Aux is primary heat source Remove equipment Number of filters Remove equipment Number of filters Remove equipment (date and time of error)	Control Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? 1, 2 1, 2	T on / T off Heat pump lockout Setpoint differential T on differential T off differential Cancel Continue Cancel Continue	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps) Heat pump lockout enable (checkbox) -20°F to 65°F in 5°F steps (-27.5°C to 17.5°C in 2.5°C steps) -9°F, -7°F, -5°F, -4°F, or -2°F (-5°C to -1°C in 1°C steps) Turn on temperature differential: -1 or -2°F (-0.5 or -1.0°C) Turn off temperature differential:	50°F (10°C) -3°F (-1.5°C) 1°F (0.5°C) disabled 15°F (-10°C) -2°F (-1°C) -1°F (-0.5°C) 1°F (0.5°C)	Yes	If aux heater added. The HP lockout must be at least 10°F < aux heat lockout. If filter box added.
	Filter box HEPA filter	Aux is primary heat source Remove equipment Number of filters Remove equipment Number of filters Remove equipment (date and time of error) (code - Indoor Unit #)	Control Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? 1, 2 Do you want to remove this	T on / T off Heat pump lockout Setpoint differential T on differential T off differential Cancel Continue Cancel Continue Cancel	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps) Heat pump lockout enable (checkbox) -20°F to 65°F in 5°F steps (-27.5°C to 17.5°C in 2.5°C steps) -9°F, -7°F, -5°F, -4°F, or -2°F (-5°C to -1°C in 1°C steps) Turn on temperature differential: -1 or -2°F (-0.5 or -1.0°C) Turn off temperature differential:	50°F (10°C) -3°F (-1.5°C) 1°F (0.5°C) disabled 15°F (-10°C) -2°F (-1°C) -1°F (-0.5°C) 1°F (0.5°C)	Yes	If aux heater added. The HP lockout must be at least 10°F < aux heat lockout. If filter box added.
	Filter box	Aux is primary heat source Remove equipment Number of filters Remove equipment Number of filters Remove equipment (date and time of error) (code - Indoor Unit #) (error description) (minor error code)	Control Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? 1, 2 Do you want to remove this equipment?	T on / T off Heat pump lockout Setpoint differential T on differential T off differential Cancel Continue Cancel Continue Cancel Continue	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps) Heat pump lockout enable (checkbox) -20°F to 65°F in 5°F steps (-27.5°C to 17.5°C in 2.5°C steps) -9°F, -7°F, -5°F, -4°F, or -2°F (-5°C to -1°C in 1°C steps) Turn on temperature differential: -1 or -2°F (-0.5 or -1.0°C) Turn off temperature differential:	50°F (10°C) -3°F (-1.5°C) 1°F (0.5°C) disabled 15°F (-10°C) -2°F (-1°C) -1°F (-0.5°C) 1°F (0.5°C)	Yes	If aux heater added. The HP lockout must be at least 10°F < aux heat lockout. If filter box added.
	Filter box HEPA filter Error History	Aux is primary heat source Remove equipment Number of filters Remove equipment Number of filters Remove equipment (date and time of error) (code - Indoor Unit #) (error description) (minor error code) Clear error history?	Control Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? 1, 2 Cancel/Continue -7°F to 7°F in 1°F steps (or)	T on / T off Heat pump lockout Setpoint differential T on differential T off differential Cancel Continue Cancel Continue Cancel	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps) Heat pump lockout enable (checkbox) -20°F to 65°F in 5°F steps (-27.5°C to 17.5°C in 2.5°C steps) -9°F, -7°F, -5°F, -4°F, or -2°F (-5°C to -1°C in 1°C steps) Turn on temperature differential: -1 or -2°F (-0.5 or -1.0°C) Turn off temperature differential:	50°F (10°C) -3°F (-1.5°C) 1°F (0.5°C) disabled 15°F (-10°C) -2°F (-1°C) -1°F (-0.5°C) 1°F (0.5°C)	Yes	If aux heater added. The HP lockout must be at least 10°F < aux heat lockout. If filter box added.
	Filter box HEPA filter	Aux is primary heat source Remove equipment Number of filters Remove equipment Number of filters Remove equipment (date and time of error) (code - Indoor Unit #) (error description) (minor error code) Clear error history? Temperature calibration	Control Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? 7°F to 7°F in 1°F steps (or) 3.5°C to 3.5°C in 0.5°C steps	T on / T off Heat pump lockout Setpoint differential T on differential T off differential Cancel Continue Cancel Continue Cancel Continue	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps) Heat pump lockout enable (checkbox) -20°F to 65°F in 5°F steps (-27.5°C to 17.5°C in 2.5°C steps) -9°F, -7°F, -5°F, -4°F, or -2°F (-5°C to -1°C in 1°C steps) Turn on temperature differential: -1 or -2°F (-0.5 or -1.0°C) Turn off temperature differential:	50°F (10°C) -3°F (-1.5°C) 1°F (0.5°C) disabled 15°F (-10°C) -2°F (-1°C) -1°F (-0.5°C) 1°F (0.5°C)	Yes	If aux heater added. The HP lockout must be at least 10°F < aux heat lockout. If filter box added.
4. System	Filter box HEPA filter Error History	Aux is primary heat source Remove equipment Number of filters Remove equipment Number of filters Remove equipment (date and time of error) (code - Indoor Unit #) (error description) (minor error code) Clear error history?	Control Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? Cancel/Continue -7°F to 7°F in 1°F steps (or) -3.5°C to 3.5°C in 0.5°C steps -15% to 15% in 1% steps suction temp	T on / T off Heat pump lockout Setpoint differential T on differential T off differential Cancel Continue Cancel Continue Cancel Continue	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps) Heat pump lockout enable (checkbox) -20°F to 65°F in 5°F steps (-27.5°C to 17.5°C in 2.5°C steps) -9°F, -7°F, -5°F, -4°F, or -2°F (-5°C to -1°C in 1°C steps) Turn on temperature differential: -1 or -2°F (-0.5 or -1.0°C) Turn off temperature differential:	50°F (10°C) -3°F (-1.5°C) 1°F (0.5°C) disabled 15°F (-10°C) -2°F (-1°C) -1°F (-0.5°C) 1°F (0.5°C)	Yes	If aux heater added. The HP lockout must be at least 10°F < aux heat lockout. If filter box added.
	Filter box HEPA filter Error History	Aux is primary heat source Remove equipment Number of filters Remove equipment Number of filters Remove equipment (date and time of error) (code - Indoor Unit #) (error description) (minor error code) Clear error history? Temperature calibration Humidity calibration	Control Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? 1, 2 Do you want to remove this equipment? Cancel/Continue -7°F to 7°F in 1°F steps (or) -3.5°C to 3.5°C in 0.5°C steps -15% to 15% in 1% steps	T on / T off Heat pump lockout Setpoint differential T on differential T off differential Cancel Continue Cancel Continue Cancel Continue	-10°F to 75°F in 5°F increments (-22.5°C to 22.5°C in 2.5°C steps) Turn on temperature differential: -7°F to -3°F in 1°F steps (-4.0°C to -1.5 to in 0.5°C steps) Turn off temperature differential: -4°F to 1°F in 1°F steps (-2°C to 0.5°C in 0.5°C steps) Heat pump lockout enable (checkbox) -20°F to 65°F in 5°F steps (-27.5°C to 17.5°C in 2.5°C steps) -9°F, -7°F, -5°F, -4°F, or -2°F (-5°C to -1°C in 1°C steps) Turn on temperature differential: -1 or -2°F (-0.5 or -1.0°C) Turn off temperature differential:	50°F (10°C) -3°F (-1.5°C) 1°F (0.5°C) disabled 15°F (-10°C) -2°F (-1°C) -1°F (-0.5°C) 1°F (0.5°C)	Yes	If aux heater added. The HP lockout must be at least 10°F < aux heat lockout. If filter box added.

1	Ctatus	1	I		1	le	
	Status	Out de serverit	heat exchanger temp			Emura only	
		Outdoor unit	electric current flow	<u> </u>		Emura only	
			fan RPM			Emura only	
			liquid pipe temp			Emura only	
			power consumption			Emura only	
			EEV aperture			Emura only	
	cool/heat	min/max setpoints	50°F to 90°F in 1°F steps		50°F to 90°F	heating: 50°F to 86°F (10°C to 30°C)	
			(10°C to 32°C in 0.5°C steps)		(10°C to 32°C)	cooling: 64°F to 90°F (18°C to 32°C)	
			Temperature setpoint dead band:				
			2°F to 9°F in 1°F steps		4°F / 2°C		
		deadband / overcool	(0°C to 5°C in 0.5°C steps)				
5. Preferences		doddodiid / ovoi oooi	Overcooling allowed to dehumidify:				
			0, 1, 2, or 3°F		0°F / 0°C		
			(0, 0.5, 1, or 1.5°C)				
			start timer diff	1, 2, 3, 4°F (0.5, 1, 1.5, 2.0°C)	1°F / 0.5°C		
			forced changeover diff	1, 2, 3, 4°F (0.5, 1, 1.5, 2.0°C)	1°F / 0.5°C		
		changeover settings	changeover timer	15 to 60 min. in 15 min. steps	15	Timer started on heat-to-cool or cool-to-heat transition so doesn't change modes too quickly. Timer is ignored if forced changeover diff is reached.	
	house settings	House size	500 to 10,000 sf in 100 sf steps				
	dealer information	name	(text entry)				
		phone	(text entry)				
		email	(text entry)				
		website	(text entry)				
	reminders	Standard filter	off, 1, 2, 3, 4, 6, or 12 months		off	if added in "add equipment"	
		Filter box	off, 1, 2, 3, 4, 6, or 12 months		off	if added in "add equipment"	
		HEPA filter	off, 1, 2, 3, 4, 6, or 12 months		off	if added in "add equipment"	
		service reminder	off, 1, 2, 3, 4, 6, or 12 months		off		