



Daikin Zoning

Homeowner Guide




Daikin Zoning



Daikin Wireless RHT Sensor

Daikin's wireless RHT sensor is great for applications **where zoning is desired and where running a new wire for an addition zoned thermostat isn't possible**. Using the wireless RHT sensor when paired with a Daikin *ONE+* smart thermostat can give you more zoning options than a traditional wired zoned system.

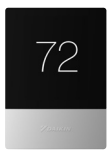


Wired

OR




RHT
Wireless
Sensor

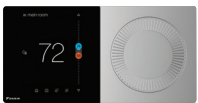

Daikin *ONE+* Smart Thermostat

The Daikin *ONE+* smart thermostat can be a great option for the primary zoning thermostat, allowing you to control wired thermostats and wireless sensors in the other zones.

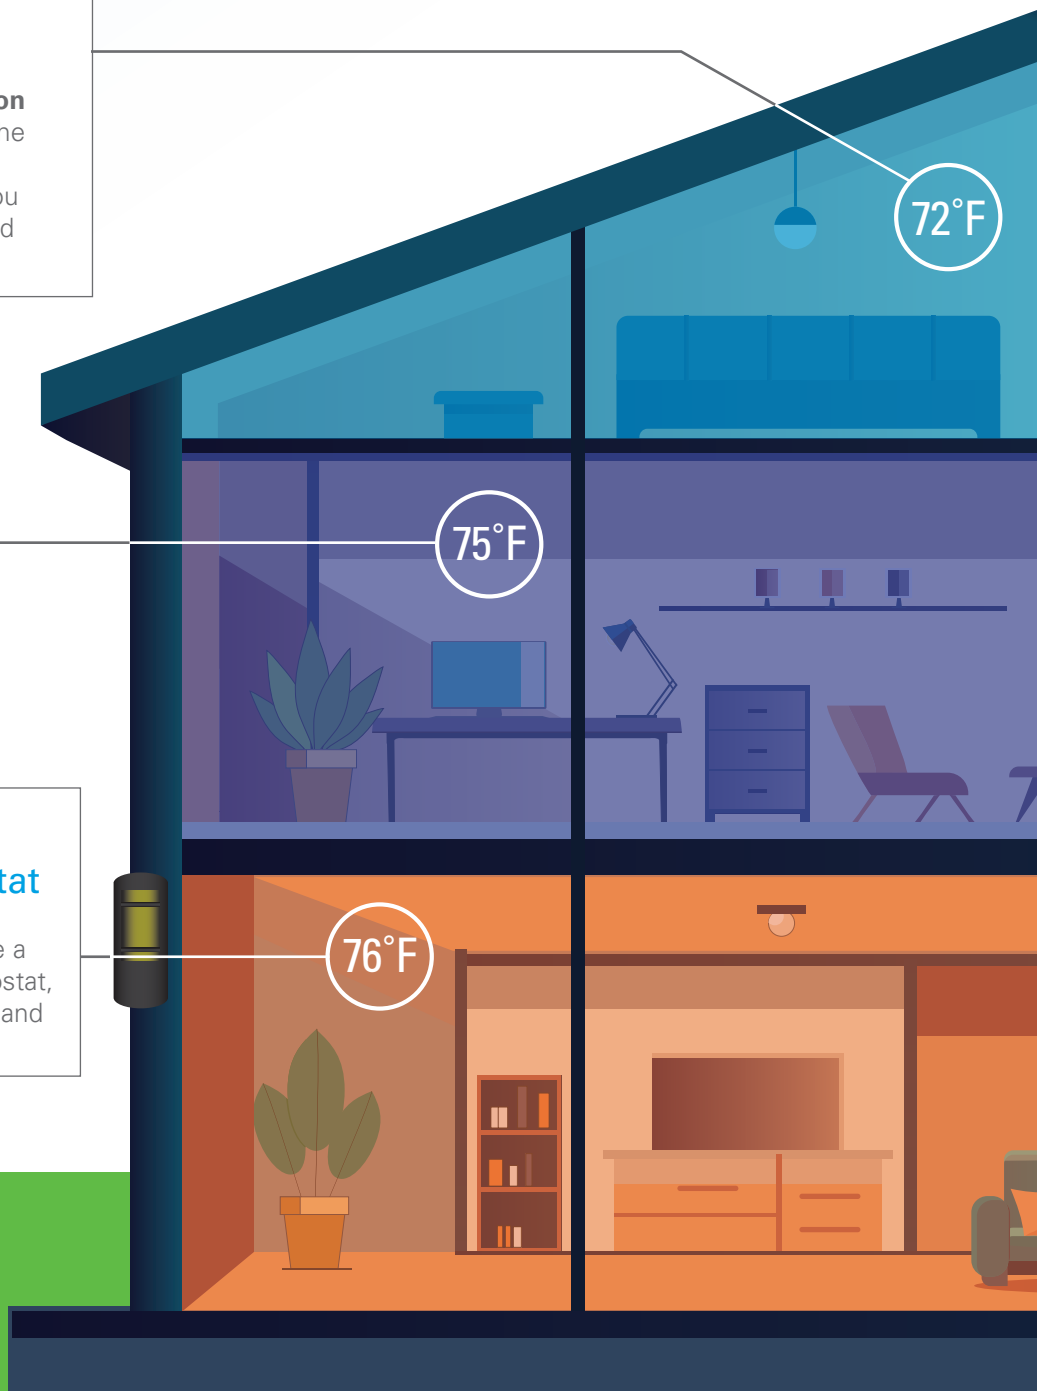


Zoning can be a great way to **customize comfort** where needed or desired within your home.


Daikin zoning can help establish comfort levels for individuals, adjust hot and cold spots within the home, and may also improve energy efficiency.




Thermostat Functions

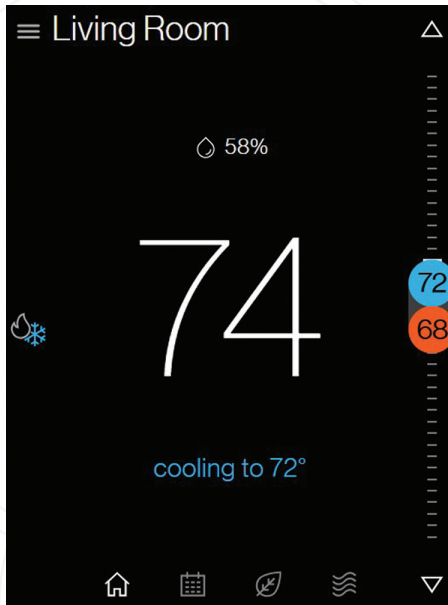


From the **primary zone thermostat**, you can control a zone of your choice from the menu screen in the top left corner.

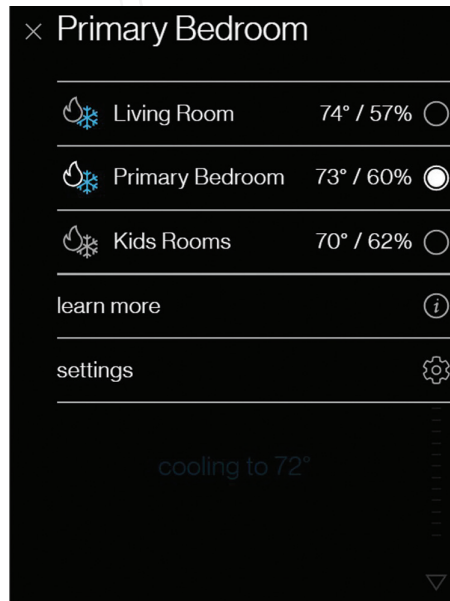


Click on the zone of your choice and it will display the screen for that specific zone.

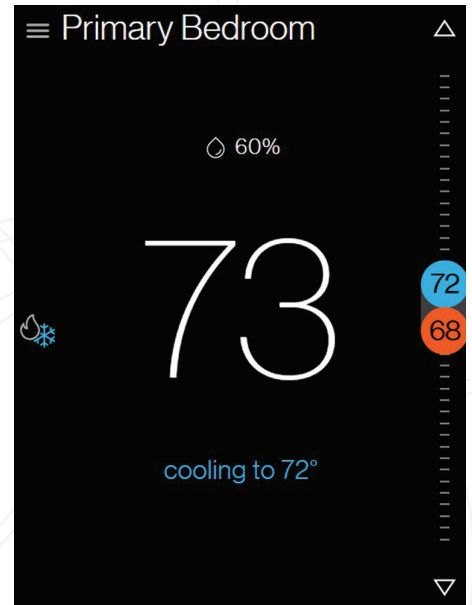


From the **zone screen** you can adjust the temperature for your desired needs using the slider or the up and down arrows.

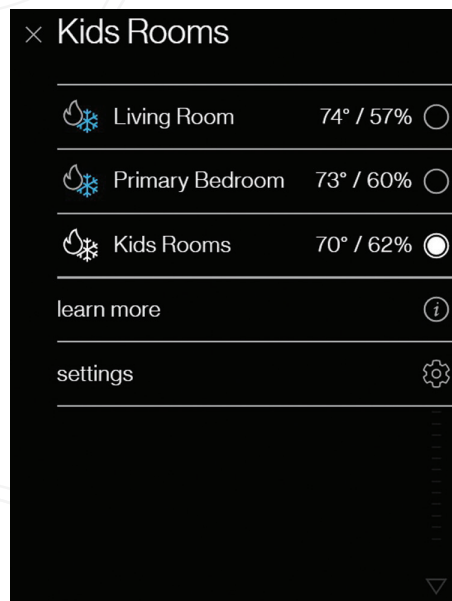


When in an **additional zone**, change the zone settings for that specific zone.

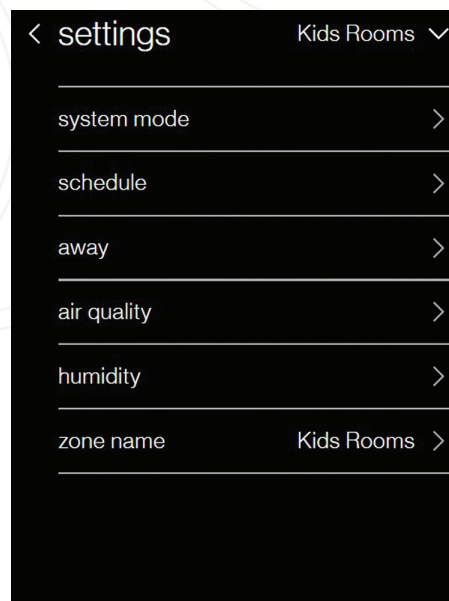


Within the **zone settings** you can change the mode, create or adjust the schedule and change humidity settings.

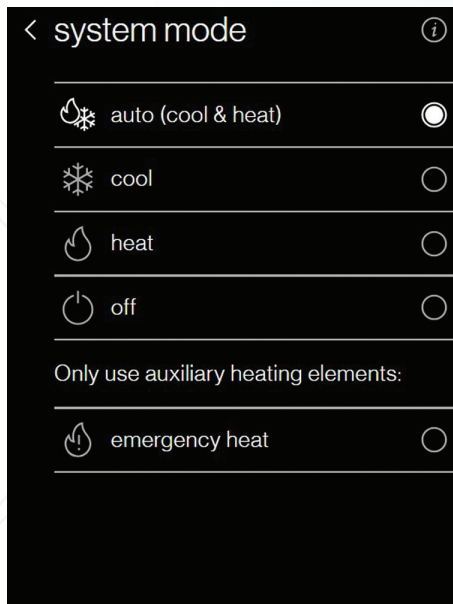


The **System Mode** menu allows you to change between heating, cooling, or auto changeover mode. If **emergency heat** is an option, you will find that here as well.

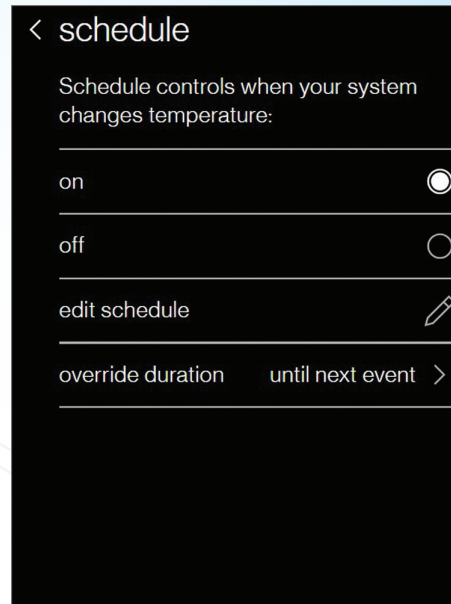

The **Schedule** menu allows you to turn the schedule on/off for this zone. It also allows you to **set up or edit the schedule** for this zone.

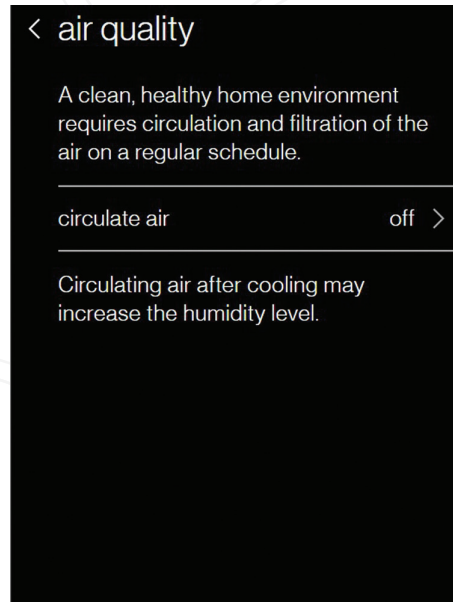



The **Air Quality** menu allows you to turn on the circulate air function for this zone. Demand for heating or cooling will **supercede** the circulate fan call for this zone to provide heating/cooling to the zone in need.

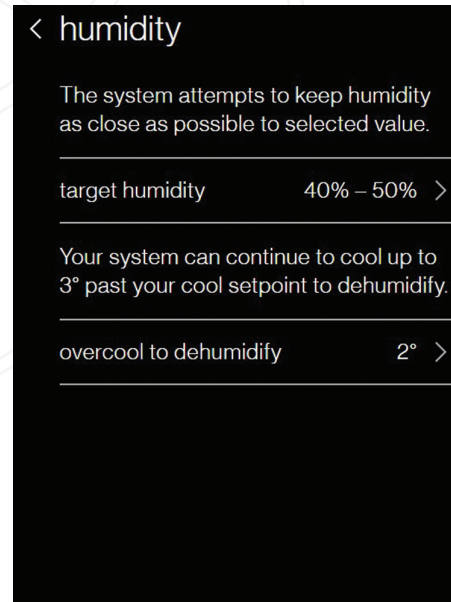

The **Humidity** menu allows you to set the desired humidity setting for this specific zone. You can also allow for **overcool to dehumidify*** by a desired temperature overshoot.

* **Overcool to dehumidify** is overcooling the space in an attempt to reach the desired humidity set point.



SkyportHome Functions

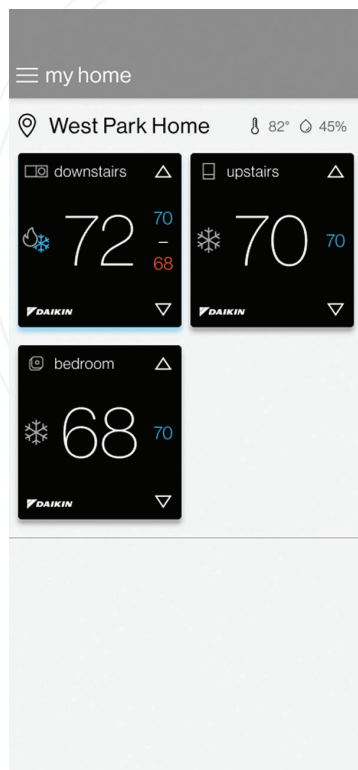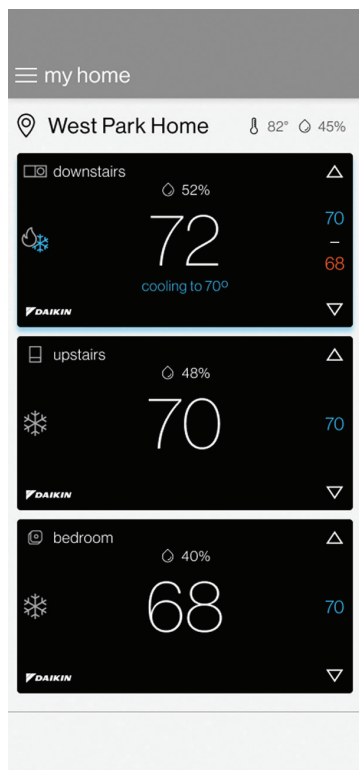

Within **SkyportHome** you can see your zones in your choice of two views — large or small tiles.

The name of the zone and the icon of the device show within each designated tile.

SCAN THE QR CODE TO LEARN MORE ABOUT THE **SKYPORTHOME** APP.

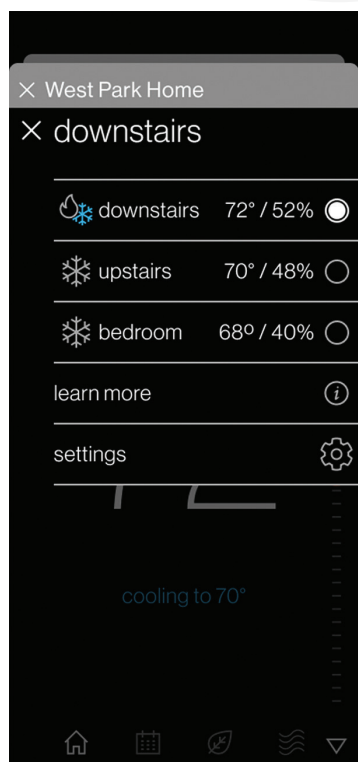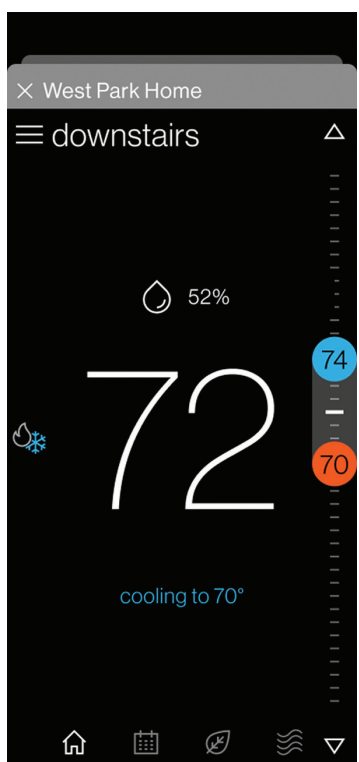

The same functionality of your home thermostat is now in the palm of your hand.

Navigate through each individual tile to control the temperature or use the primary tile to select which thermostat you want to change.

You can go into **settings** and make changes as well.



App Store® is a registered trademark of Apple Inc

Google Play and the Google Play logo are trademarks of Google LLC.





**FOR ADDITIONAL
RESOURCES AND
INSTRUCTIONAL VIDEOS,
SCAN CODE OR VISIT:**

WWW.DAIKINCOMFORT.COM



ADDITIONAL INFORMATION

Before purchasing this appliance, read important information about its estimated annual energy consumption, yearly operating cost, or energy efficiency rating that is available from your retailer.

Google, Google Assistant, and all related logos are trademarks of Google, or its affiliates.
Amazon, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates.



Our continuing commitment to quality products may mean a change in specifications without notice.

© 2026 DAIKIN COMFORT TECHNOLOGIES NORTH AMERICA, INC. · Houston, Texas · USA · www.daikincomfort.com

HG-DKZONING_06-26