


Wired Remote Controller

Operation Manual

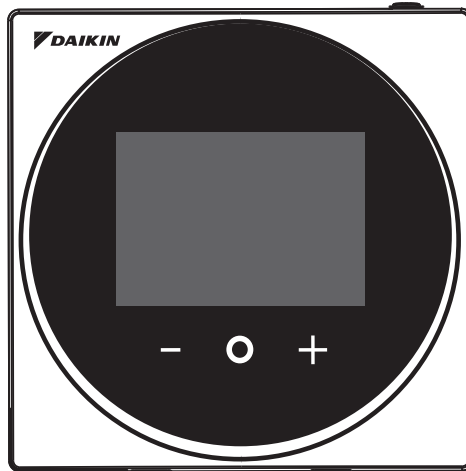

MODEL BRC1H71W

- Thank you for choosing this wired remote controller.
- This manual describes safety measures which should be considered during for using this product.

Please read and understand this manual thoroughly and be sure you are understand the information provided before using the product.

Keep manual where user can be accessible easily.

Contents

Safety Considerations	2
Button Locations and Descriptions	4
Overview of screens	5
Setting screen list	6
Names and Functions	7
Information screen	9
Setpoint	11
User menu	13
Operation mode	14
Fan Speed	16
Airflow	18
Energy Recovery Ventilator (ERV)	21
LED Brightness Light Ring On	23
LED Brightness Light Ring Off	24
Setpoint	25
Fahrenheit/Celsius	26
Administrator menu	27
Backlight brightness/Contrast	28
Clock setting	29
Bluetooth	31
About	34
Administrator password setting	35
Scale reference temperature setting	37
Maintenance	38
How to reset the filter sign	39
Troubleshooting	42

Safety Considerations




The original instructions are written in English. All other languages are translations of the original instructions.

Read these **SAFETY CONSIDERATIONS** carefully before operating the remote controller.


Train the customer to operate and maintain the remote controller.






Inform customers that they should store this Operations Manual with the Installation Manual for future reference.

Meanings of **WARNING**, **CAUTION** and **NOTE** Symbols:

	WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
	CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
	NOTE	Indicates situations that may result in equipment or property-damage accidents only.






- The following pictograms are used in this manual.

	Never do.		Always follow the instructions given.
	Keep water and moisture away.		Keep wet hands away.




 WARNING	
	<ul style="list-style-type: none"> • Do not modify or repair the remote controller. Consult your Daikin dealer for any modification or for repairs.
	<ul style="list-style-type: none"> • Do not relocate or reinstall the remote controller by yourself. Improper installation may result in electric shocks or fire. Consult your Daikin dealer to relocate or for any reinstallation.
	<ul style="list-style-type: none"> • Do not use flammable materials (e.g., hairspray or insecticide) near the remote controller. Do not clean the product with organic solvents such as paint thinner. The use of organic solvents may cause cracking, damaging the product, causing electric shocks, or fire.
	<ul style="list-style-type: none"> • Consult the dealer if the remote controller was submerged under water due to a natural disaster, such as a flood or hurricane. Do not operate the remote controller at this time or a malfunction, electric shock, or fire can occur.

— Items to be Strictly Observed —


CAUTION

	<ul style="list-style-type: none">• Do not allow children to play with the remote controller to avoid causing damage to the product.
	<ul style="list-style-type: none">• Never disassemble the remote controller. Touching the interior parts may result in electric shocks or fire. Consult your Daikin dealer for internal inspections and adjustments.
	<ul style="list-style-type: none">• Do not touch the remote controller buttons with wet fingers. Touching the buttons with wet fingers can cause an electric shock.
	<ul style="list-style-type: none">• Do not wash the remote controller. Doing so may cause electric leakage and result in electric shocks or fire.
	<ul style="list-style-type: none">• Never let the remote controller to get wet. Water can cause damage to the remote controller, and may cause an electric shock or fire.

NOTE

	<ul style="list-style-type: none">• Never press the buttons of the remote controller with a hard and pointed object. The remote controller may be damaged.
	<ul style="list-style-type: none">• Never pull or twist the electric wire of the remote controller. It may cause the unit to malfunction.
	<ul style="list-style-type: none">• Do not wipe the remote controller with benzine, thinner, chemical dustcloth, etc. The remote controller may get discolored or the coating peeled off. If it is heavily dirty, soak a cloth in water-diluted neutral detergent, squeeze it well and wipe the remote controller clean. And wipe it with another dry cloth.

Button Locations and Descriptions

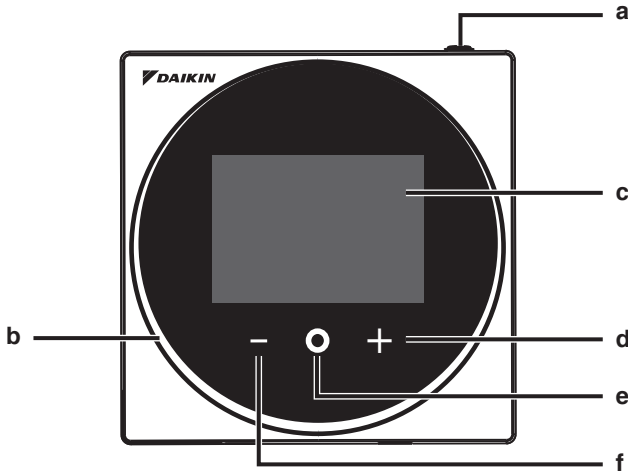

Functions items (i.e., Operation Mode, Fan Speed, and Setpoint) are set from the menu screen.

! NOTICE

- Do not install the remote controller in places exposed to direct sunlight. The LCD may be damaged.
- Do not pull or twist the remote controller cord. The remote controller may be damaged.
- Do not use objects with sharp ends to press the buttons on the remote controller. Damage may result.

a ON/OFF button

- Press this button to turn on the system.
- Press this button again to turn off the system.

b **Status indicator (LED)**

- During operation, the light ring around the display lights up blue/red/green.
Lights up blue: Operating, Blinks red: Error is occurring, Lights up/blinks green: Bluetooth connecting

c **LCD** (Refer to INFORMATION on page 7.)

- Displays the current setpoint and air conditioner operation status.

d NAVIGATE/ADJUST button

- Navigate right.
- Adjust a setting.

e SELECT/ACTIVATE /SET button

- From the home screen, enter the user menu.
- From the user menu, enter one of the submenus.
- From their respective submenu, activate an operation/ventilation mode.


f NAVIGATE/ADJUST button

- Navigate left.
- Adjust the setting.

Overview of screens


How to display the screen

The following is just an example. The items available for setting vary depending on the indoor unit you are using. If there is no button operation for about 10 seconds, the screen returns to the home screen.

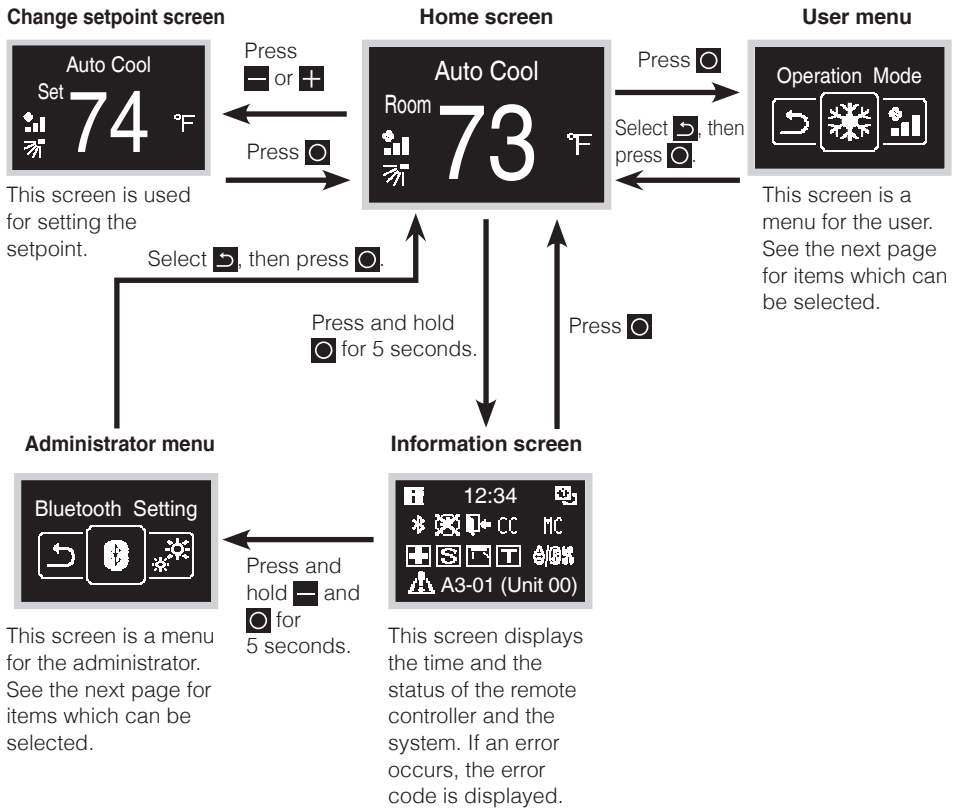


There are 2 screen display modes, text mode and icon mode. Change the mode according to your preference.

* All of the above explanations are shown with screens from text mode.

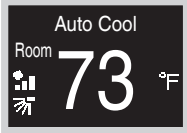













Text mode




Icon mode

Setting screen list


Setting list			User menu	Administrator menu
Icon	Name	Description		
	Operation Mode	Operation mode setting	○	
	Fan Speed	Airflow rate setting	○	
	Airflow Direction	Airflow direction 1 setting	○	
	Vertical Airflow	Airflow direction 2 setting	○	
	Ventilation Mode	Ventilation mode setting	○	
	Ventilation Rate	Ventilation rate setting	○	
	Adjust LED (ON)	LED brightness adjustment when backlight lights up	○	
	Adjust LED (OFF)	LED brightness adjustment when backlight lights up dimly	○	
	Celsius/Fahrenheit	Fahrenheit/Celsius changeover	○	
	Setpoint	Setpoint setting when in auto operation mode	○	
	Sign Reset	Filter sign reset	○	
	Bluetooth Setting	Bluetooth setting		○
	Backlight	Backlight brightness setting		○
	Contrast	Contrast setting		○
	Clock Setting	Clock setting		○
	Standard Temp	Scale reference temperature setting		○
	About	Administrator information		○
	Admin Password	Administrator password setting		○

Names and Functions


Home screen

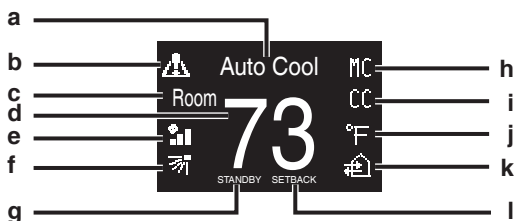


Information screen

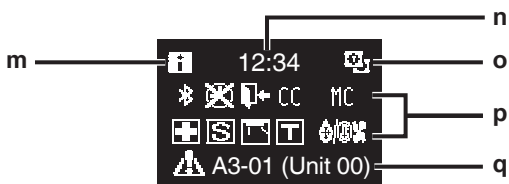

User menu/Administrator menu/Installer menu

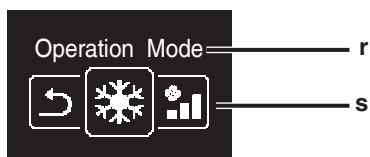

User menu

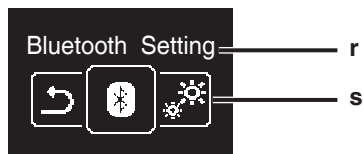

Administrator menu/Installer menu

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and use of such marks by Daikin industries, LTD. is under license. Other trademarks and trade names are those of their respective owners.

Information

Depending on the connected model, some items may not be displayed.

The controller is equipped with a power-saving function that darkens the display if there is no operation for a certain period of time. To make the screen light up again, press one of the buttons. Note that pressing one of the buttons will only make the display bright again, not cause remote controller operation.

* All screens shown are from text mode.
English

Screen display explanation


- a Operation mode/OFF display**
 - Displays the operation status.
- b Error/Filter/Test icon**
 - Error, filter and test icons are displayed.
- c Room/Set**
 - Indicates whether it's a room temperature display (Room) or setpoint display (Set).
- d Room temperature/Set temperature**
 - Displays the current room or setpoint temperature.
- e Fan speed**
 - Displays the set fan speed.
- f Airflow direction**
 - Displays the set airflow direction.
- g STANDBY**
 - Displays during defrost/hot start.
- h Changeover controlled by the master indoor unit**
 - Displayed when another indoor unit on the system has the authority to change the operation mode between cool and heat.
- i Under centralized control**
 - Displayed if the system is under the management of a multi-zone controller (Optional) and the operation of the system through the remote controller is limited.
- j Fahrenheit/Celsius**
 - Depending on the setting, Fahrenheit/Celsius display can be selected.
- k Ventilation operation/Air Purify**
 - Displayed when a Heat Reclaim Ventilator is connected.
- l Setback**
 - Blinks during setback operation.
 - Displayed during setback setting.
- m Information icon**
- n Clock (24 hours time display)**
- o MAIN/SUB remote controller sign**
- p Status**
 - Notifies the status.
- q Error display**
 - If an error occurs, the icon, an error code and unit number are displayed.
- r Settings menu name**
- s Settings menu icon**

Home screen list


There are 4 types of home screen.

The home screen type can be changed by the remote controller setting.


Text mode

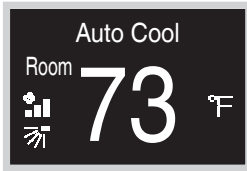


Icon mode

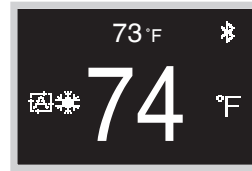

Text mode (Scale screen)

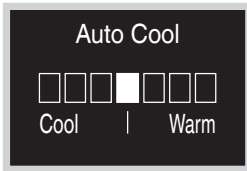

Icon mode (Scale screen)

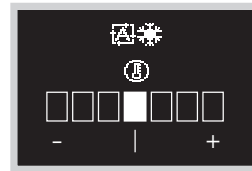

When in the scale screen, the setpoint can be changed in the range of $\pm 3^{\circ}\text{C}/^{\circ}\text{F}$ of the reference temperature.


The reference temperature can be changed from the smartphone application or the remote controller (from the administrator menu).

Information screen

The functions of the connected indoor unit are displayed as icons.

How to display the information screen

Home screen

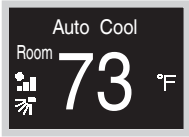


Text mode



Icon mode



Press and hold  on the Home screen for 5 seconds.

Information screen




The screen switches to the Information screen.

How to exit the information screen


















Information screen



Press  or there is no button operation for about 10 seconds, the screen returns to the home screen.

About icons on the information screen

The items displayed vary depending on the indoor unit you are using.

Icon	Name	Description
	Information	Indicates an information screen.
	MAIN/SUB remote controller	Displayed when used as the MAIN/SUB remote controller. 1=main, 2=sub
	Bluetooth*	Indicates that the controller is communicating with a mobile device, for use with the app.
	Clock not set	Indicates that the clock needs to be set again.
	Setback	Indicates that the indoor unit is operating under setback conditions.
	Under centralized control	Indicates that the system is controlled by central control equipment (optional accessory) and that control of the system by the controller is limited.
	Changeover controlled by the master indoor unit	Displayed: The remote controller does not have master control. Unable to select heating/cooling operation. Blinking: None of the remote controllers in the system have master control. Can be set as the master controller during this time. Not Displayed: The remote controller has master control. Able to select heating/cooling operation.
	Backup	Indicates that backup operation is being carried out.
	Energy savings	Indicates that the system's energy consumption is being limited, and that it is running with restricted capacity.
	Individual airflow direction	Indicates that the individual airflow direction setting is enabled.
	Test operation	Indicates that Test Operation mode is active.
	Stand by for Defrost/Hot start	Indicates that the defrost/hot start mode is active.
	Self-cleaning filter operation	Indicates that selfcleaning filter operation is active.
	Inspection	Indicates that the indoor or outdoor unit is being inspected.
	Periodic inspection	Indicates that the indoor or outdoor unit is being inspected.
	Ventilating operation	Indicates that ventilating operation is being carried out.
	Warning	Indicates that an error occurred, or that an indoor unit component needs to be maintained.

* The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and use of such marks by Daikin industries, LTD. is under license. Other trademarks and trade names are those of their respective owners.


Setpoint

The setpoint is the range of the available temperature for the Cooling, Heating, and Auto operation modes.

How to set the setpoint for text mode

Prerequisite: The active operation mode is either “Cooling”, “Heating”, or “Auto”.

Home screen

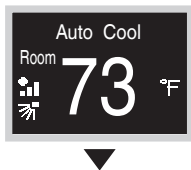


Press **-** or **+**, and the screen will display “Set” and move into setpoint mode.

Be sure to operate with the remote controller turned on.

When operation is stopped, even if **-** or **+** are pressed, the setpoint cannot be changed.

Change setpoint screen

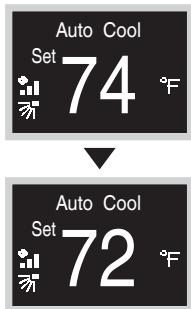

Press **-** or **+** to adjust the setpoint.

When the indoor unit is turned off, even if **-** or **+** are pressed or the have screen, the setpoint dose not change.

Result:

The indoor unit changes temperature equal to the setpoint value.

How to set the setpoint for icon mode

Prerequisite: The active operation mode is either “Cooling”, “Heating”, or “Auto”.

Home screen




The small number above displays the room temperature, and the large number below displays the setpoint.

Be sure to operate with the remote controller turned on.

When operation is stopped, even if **-** or **+** are pressed, the setpoint cannot be changed.

Change setpoint screen

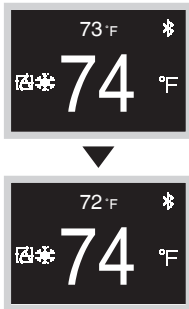


Press **[-]** and **[+]**, and the setpoint will change. When the indoor unit is turned off, even if **[-]** or **[+]** are pressed or the have screen, the setpoint dose not change.

Result:

The indoor unit changes temperature equal to the setpoint value.

When returning to the home screen

Change setpoint screen

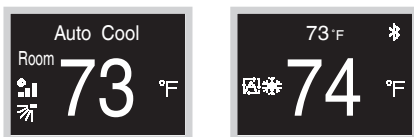

Text mode

Icon mode

Press **[O]**.


If there is no button operation for about 5 seconds, the screen returns to the home screen.

If in icon mode, the setpoint will be confirmed as it is.

User menu

How to display the user menu

Home screen

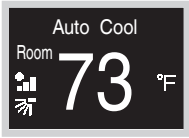

Text mode




Icon mode



Press  on the Home screen.

User menu screen

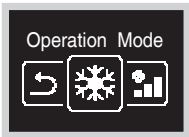

Text mode




Icon mode

The screen switches to the user menu screen.

How to exit the user menu


User menu screen

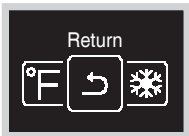

Text mode



Icon mode

Press  or  to select "Return" or "", then press  to apply.

Or if there is no button operation for about 5 seconds, the screen returns to the home screen.

Operation mode


From the home screen, press **○** to enter the user menu. Use **←** and **→** to navigate through the menus. Press **○** again to enter one of the menus.

i INFORMATION

- Depending on the system, this function may not be displayed.
- Available modes are depend on type of indoor unit that user operating.
- In the user menu, the icon for each menu reflects the current active setting or mode. When operating the controller, the menu that navigate through may look different from that represented menus this manual.
- The controller only allows for basic operation of the system. For advanced operation (setback etc.), see in mobile application.

How to set the operation mode

User menu screen

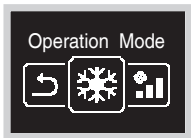

Text mode




Icon mode



Navigate to the operation mode menu.

Operation mode screen

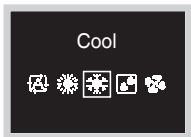

Text mode



Icon mode

Press **←** or **→** to select an operation mode and press **○** to activate.









Operation modes which can be selected vary depending on the system.

Result:

The indoor unit changes its operation mode and the controller returns to the home screen.

About icon list of Operation Modes

The indoor unit can operate in various operation modes.

Icon	Operation mode	Icon	Operation mode
	Auto Icons vary depending on the system.		Fan only
	Cool		Ventilation + Air Clean
	Heat		Ventilation
	Dry		Air Clean

INFORMATION

Available operation mode are depend on indoor unit.

Characteristics of Heat Mode

The system automatically controls the following operating modes to prevent the reduction of heating capacity and space comfort.

Defrost operation

- The system will automatically go into defrost operation to prevent frost accumulation at the outdoor unit and subsequent loss of heating capacity.
- The indoor unit fan will stop, and "**STANDBY**" will be displayed on the remote controller.
- The system will finish the Defrost operation and return to normal usually within six to eight minutes. It won't last for more than ten minutes.

Hot start


- When the system starts heating operation, the indoor unit fan will operate with a delay in order to prevent a cold draft.
(In that case, "**STANDBY**" will be displayed on the remote controller.)

Fan Speed

How to set the fan speed

Prerequisite: The operation mode either “Cooling”, “Heating”, “Auto” or “Fan”.

User menu screen

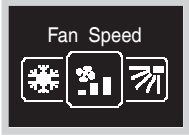


Text mode



Icon mode

Navigate to the fan speed menu.
Depending on the system, this function may not be displayed.

Fan speed screen

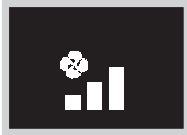

The setting of the fan speeds will vary based upon the indoor unit model.


Press **-** or **+** to adjust the fan speed and **OK** to confirm.

Fan speeds which can be selected vary depending on the system.


2 fan speeds



3 fan speeds

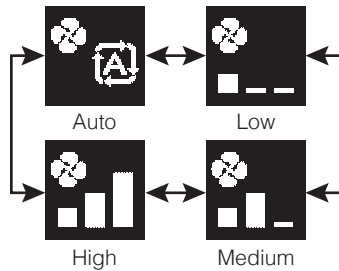

5 fan speeds

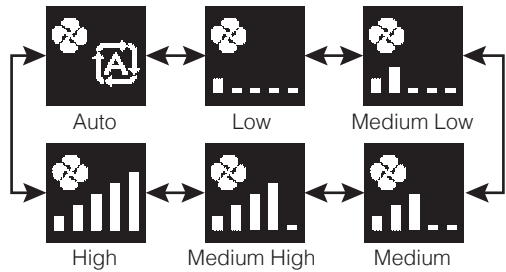

- For mechanical protection purposes, it is possible that the indoor unit switches itself to “Automatic fan speed” mode.
- If fan stops operating, always not mean system failure. The fan can stop operating at any time.
- There may be a delay between the fan speed setting made on the controller and the change actually carried out by the indoor unit.

Result:

Fan speed of indoor unit has changed and the controller returns to the home screen.

Airflow

How to set the airflow direction

User menu screen



Text mode



Icon mode




Navigate to the airflow direction menu. Depending on the system, this function may not be displayed.

Airflow direction screen




Press or to adjust the airflow direction and press to confirm.

Airflow direction setting (up/down)

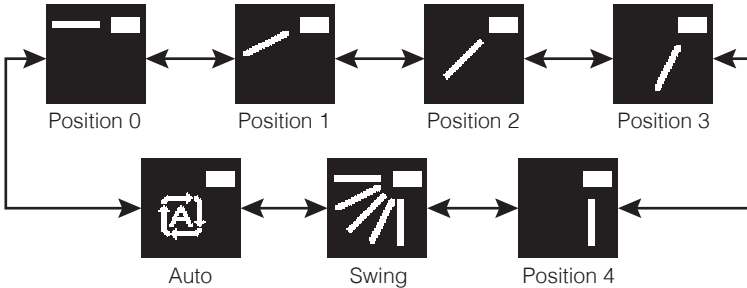

Airflow direction setting (left/right)

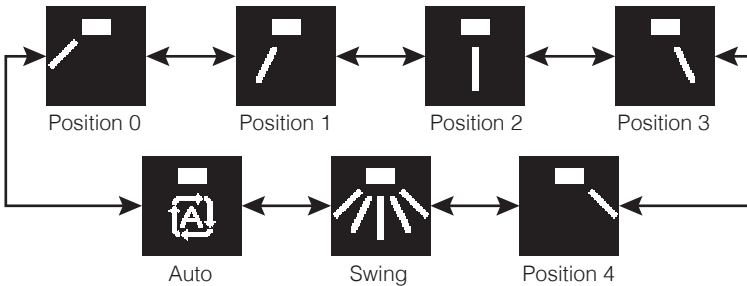

- Depending on the type of indoor unit, and/or on system layout and organization, Auto airflow direction may not be available.
- For some types of indoor units, the airflow direction setting is unavailable.
- If the floor-standing indoor unit does not have vertical airflow, the left and right direction icons are displayed.

Result:

The indoor unit changes its airflow direction and the controller returns to the home screen.

Automatic airflow control

In the following operating conditions, the airflow direction of the indoor units is controlled automatically:

- When the room temperature is higher than the controller's setpoint for Heating operation (including Auto operation).
- When the indoor units run in Heating operation mode, and the Defrost function is active.
- When the indoor units run in Continuous operation, and the airflow direction is horizontal.


How to set the vertical airflow direction

Depending on the system, there may be 2 louvers.

Set louver 1 via the airflow direction menu, and set louver 2 via the vertical airflow menu, as shown here.

During the setting process, decide on a up/down direction via the airflow direction menu and decide on an left/right direction via the vertical airflow menu.

User menu screen

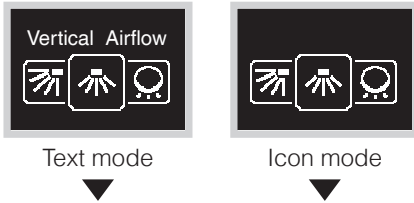


Navigate to the vertical airflow menu.

Vertical airflow screen



Press **-** or **+** to adjust the vertical airflow direction and press **OK** to confirm.

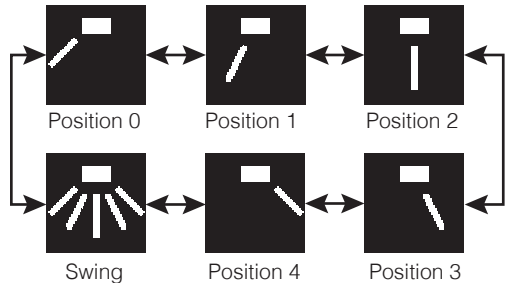


Result:

The indoor unit changes airflow direction and the controller returns to the home screen.


Energy Recovery Ventilator (ERV)

How to set the ventilation mode

User menu screen

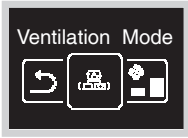

Text mode

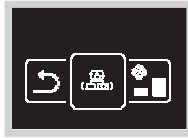

Icon mode



Access to the ventilation mode menu.
Depending on the system, this function may not be displayed.

Ventilation mode screen




Text mode



Icon mode

Press **-** or **+** to adjust the ventilation mode and press **○** to confirm.

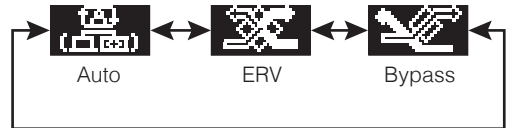


Result:

The ERV changes ventilation mode and the controller returns to the home screen.

How to set the ventilation rate

User menu screen

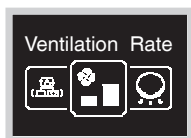


Text mode



Icon mode


Access to the ventilation rate menu.
Depending on the system, this function may not be displayed.

Ventilation rate screen

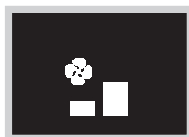

Press **-** or **+** to adjust the ventilation rate and press **○** to confirm.

2 fan speeds

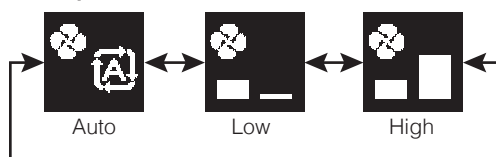

Result:


The indoor unit changes ventilation rate and the controller returns to the home screen.

LED Brightness Light Ring On


Changes the brightness of the LED brightness.

How to set the LED brightness

User menu screen

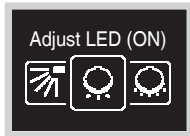


Text mode

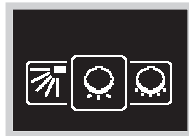


Icon mode




Access to the Adjust LED (ON) menu.

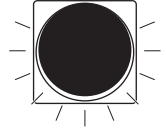

Adjust LED brightness during
backlight ON

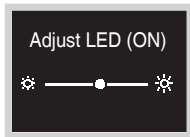

Text mode

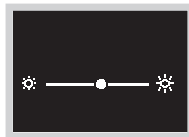

Icon mode

Press **[-]** or **[+]** to adjust the brightness of the ring around the remote controller, then press **[O]** to apply.

Result:


Brightness intensity has changed and the controller returns to the home screen.

LED Brightness Light Ring Off


Changes the brightness of the LED when the power is turned off.

How to set the LED brightness

User menu screen

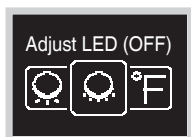


Text mode

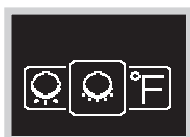


Icon mode




Access to the Adjust LED (OFF) menu.

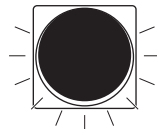

Adjust LED brightness during
backlight OFF

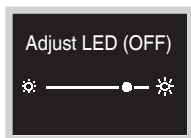

Text mode

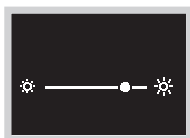

Icon mode

Press **−** or **+** to adjust the brightness of the ring around the remote controller, then press **○** to apply.

Result:


Brightness intensity has changed and the controller returns to the home screen.

Setpoint

Set the cooling and heating setpoint.

How to set the setpoint

User menu screen

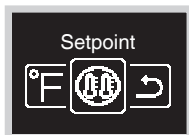


Text mode




Icon mode

Access to the dual setpoint menu.
Depending on the system, this function may not be displayed.

Dual setpoint screen

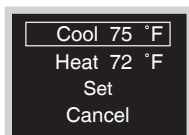


Text mode

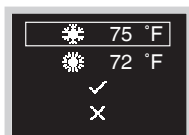


Icon mode

Press **-** or **+** to select the setting items then press **○** to select the item.

Dual setpoint screen

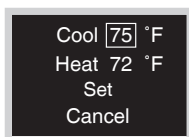


Text mode

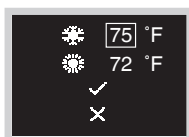


Icon mode

Press **-** or **+** to change the setpoint, then press **○** to apply.

Dual setpoint screen

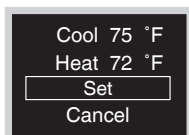

Text mode

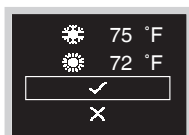

Icon mode

Confirm setting value by select “Set” or “**✓**” and press **○** to apply or select “Cancel” or “**✗**” to cancel setting.


Result:

The indoor unit changes dual setpoint and the controller returns to the home screen.


Fahrenheit/Celsius

How to set Fahrenheit/Celsius

User menu screen

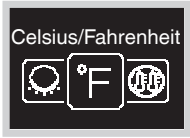

Text mode

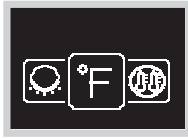

Icon mode



Access to the Fahrenheit/Celsius menu.




Fahrenheit/Celsius screen



Text mode



Icon mode

Press  or  to choose a display method, then press  to apply.


Result:

The temperature is displayed in the measurement selected and the controller returns to the home screen.

Administrator menu


How to display the administrator menu

Information screen

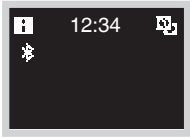


Press and hold **[Left]** and **[Home]** at the same time on the information screen for 5 seconds.

Administrator menu screen

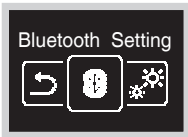

Text mode

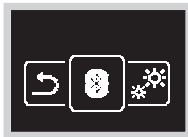


Icon mode


The screen switches to the Administrator menu screen.

How to exit the administrator menu

Administrator menu screen

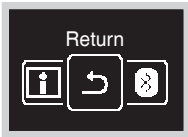

Text mode

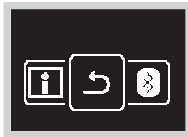


Icon mode

Press **[Left]** or **[Right]** to select "Return" or "[Return]", then press **[Home]** to apply.


Backlight brightness/Contrast

How to set the backlight brightness

Administrator menu screen

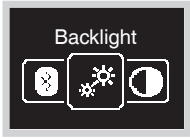

Text mode

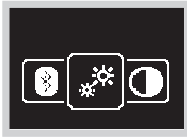


Icon mode




Navigate to the backlight brightness menu.

Backlight brightness screen

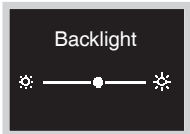

Text mode

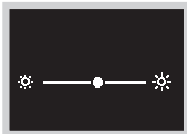

Icon mode


Press **-** or **+** to adjust the backlight brightness level, then press **○** to apply.

Result:

The backlight brightness is changed, and the controller returns to the administrator menu screen.

How to set the contrast

Administrator menu screen

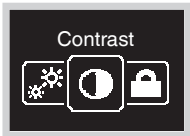


Text mode




Icon mode

Navigate to the contrast menu.

Contrast screen

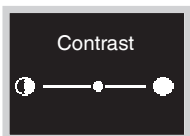

Text mode

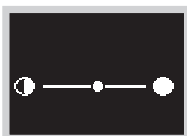

Icon mode

Press **-** or **+** to adjust the contrast level, then press **○** to apply.

Result:


The contrast is changed, and the controller returns to the administrator menu screen.

Clock setting

This function just only allows in basic operation. For advance operation, Please use in mobile application.

How to set the clock

Administrator menu screen

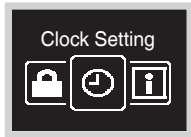

Text mode




Icon mode




Navigate to the clock setting menu.

Clock setting screen

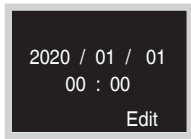

Text mode

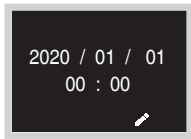

Icon mode




When changing the date, if **+** button is pressed, the year will be selected.

Clock setting screen




Press **-** or **+** button, set the year, then press **○** to move to the next field.

Clock setting screen

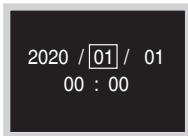


Press **-** or **+** button, set the month, then press **○** to move to the next field.

Clock setting screen

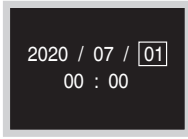


Press **-** or **+** button, set the day, then press **OK** to move to the next field.

Clock setting screen

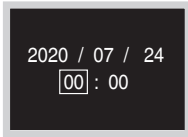


Press **-** or **+** button, set the hour, then press **OK** to move to the next field.

Clock setting screen

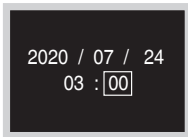


Press **-** or **+** button, set the minute, then press **OK** to move to the next field.

Clock setting screen

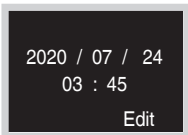

Text mode

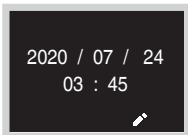

Icon mode

When every setting from the year to the minute is complete, "Edit" or "✎" will be displayed. Press **OK** button to save the setting and return to the previous screen.

Result:

The date and time will be set, the controller return to the menu screen.

Bluetooth


How to make a Bluetooth connection

Prerequisite: Application on mobile device is installed and running.
Your mobile device should support Bluetooth version 4.2.


Open mobile application and follow the instructions from the app.

The remote controller will not process the bluetooth bonding information if it is connecting to the device for the first time.

Administrator menu screen

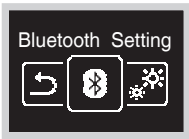

Text mode

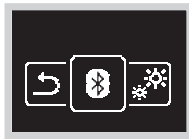


Icon mode



Access to the Bluetooth setting menu.

Bluetooth setting screen

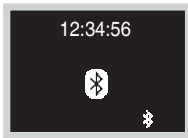

Press the **+** button and connection will start.




Before Bluetooth communication




Bluetooth communication in progress

Bluetooth setting screen

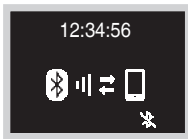


If connection is successful, the screen on the left figure will be displayed momentarily, then it will change to the numeric comparison screen.

Numeric comparison screen

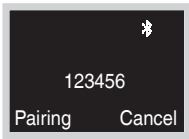

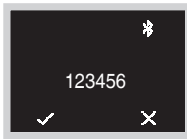

Text mode



Icon mode

The 6-digit numeric comparison figure will be displayed.

Confirm that the same figure is displayed on the smartphone, if both numeric number or remote and smartphone are same, press the  button.


If the  button is pressed, the controller returns to the home screen without bonding. If bonding is not successful, please try again from the beginning.

Result:


When setting is complete, if operation is in progress the status indicator (LED) lights up green (stopped it blinks green) and the controller returns to the home screen.

The remote controller remembers the bluetooth bonding information, because the device has been connected with Bluetooth in the last 24 hours

Administrator menu screen

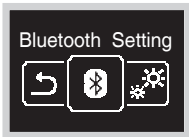


Text mode

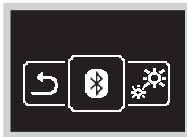

Icon mode

Access to the Bluetooth setting menu.

Bluetooth setting screen

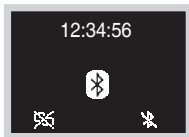

Press the  button and connection will begin.



Before Bluetooth communication





Bluetooth communication in progress

Bluetooth setting screen



If connection is successful, the status indicator (LED) blinks green (lights up green during operation).

Press the  button and the controller returns to the menu screen.


Press the  button and the bonding information is deleted. If Bluetooth connection was not successful, please delete the bonding information once and then try connecting again.

In such a case, it is also necessary to delete the bonding information saved in the smartphone.


About

How to displaying the administrator information screen

Administrator menu screen

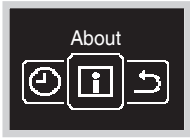

Text mode

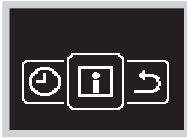

Icon mode

Access to the about menu.

Administrator about screen



Remote controller information is appeared.

The Administrator about screen has 2 pages.

Press the **+** button to scroll through the pages.

Press the **○** button to return.

Result:

The controller returns to the administrator menu screen.

About the information menu

The meaning of data that show in the information menu.

Information	Description
SW1	Controller software ID
Ver	Controller software version
SW2	Bluetooth module MAC address
---:---:---:---:---	Bluetooth module software ID


Administrator password setting

Password setting for access to administrator screen.

- It is recommended to set a 4-digit password so that users cannot enter the Administrator menu easily when starting to use this remote controller.
- Be sure to keep the set password secure so that you do not forget it. Also, manage the password so that it is kept secret from others.

How to setting the password

Installer menu screen

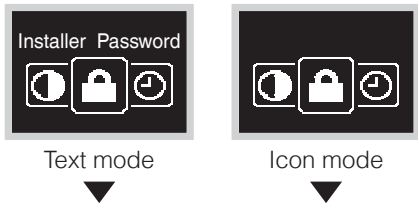


Press **←** or **→** button, for move to “**🔒**”.

If Bluetooth is connected, performing field setting from the remote controller side is impossible.

Disconnect Bluetooth, or perform field setting from the mobile application.


Sub-menu screen

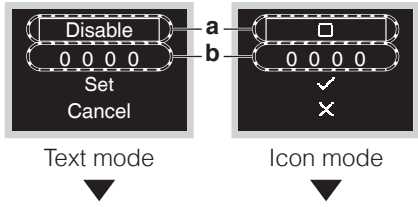

Press **+** or **-** button, select Enable/Disable, and press **⊙** to perform password enable/disable setting.

a Enable/Disable
b Password


Sub-menu screen

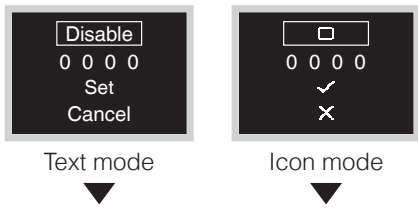

Press **+** or **-** button, change the password to enable/disable, and press **⊙** button.


Select “**Enable**” or “**☑**” to enable the password and select “**Disable**” or “**☐**” to disable the password.

Sub-menu screen

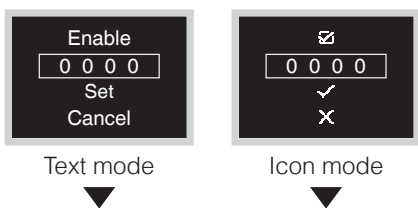


Press **←** or **→** button, to select Password and press **⊙** button.

Sub-menu screen

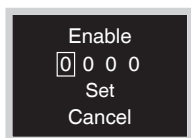

Text mode

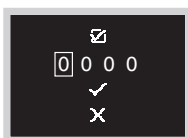

Icon mode



Press **+** or **-** button, set any password, and then press **OK** button.

Each time **OK** button is pressed, the digit place will change. When the 4th digit on the right end is reached, press **OK** button to return to the previous screen.

Sub-menu screen



Text mode



Icon mode



Press **+** or **-** button, select "Set" or "**✓**", and then press **OK** button to return to the installer menu.

If Enable/Disable is set to Enable, the set 4-digit password will be enabled.

If set to Disable, the password will be disabled.

Sub-menu screen



Text mode




Icon mode

Press **-** or **+** button, move to "Cancel" or "**✗**", and then press **OK** button to return to the installer menu.


Scale reference temperature setting

Set the reference temperature when setting the scale screen.

User menu screen

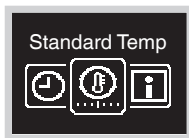

Text mode

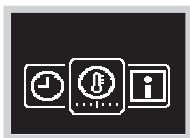


Icon mode




Access to the scale reference temperature menu.

Depending on the system, this function may not be displayed.

Dual setpoint screen

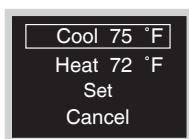

Text mode

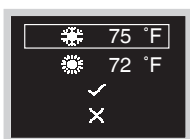


Icon mode




Press **-** or **+** to select the setting items then press **○** to select the item.

Dual setpoint screen

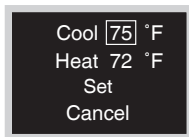

Text mode

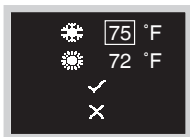


Icon mode




Press **-** or **+** to change the setpoint, then press **○** to apply.

Dual setpoint screen

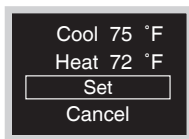

Text mode

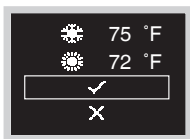

Icon mode

Confirm setting value by select “Set” or “**✓**” and press **○** to apply or select “Cancel” or “**✗**” to cancel setting.

Result:

The indoor unit changes dual setpoint and the controller returns to the home screen.

Maintenance

Maintaining the Unit and LCD Display


- Clean the LCD and surface of the remote controller by dry cloth.
- If the dry cloth cannot remove the dirty, use a damp cloth to clean the display. Squeeze out excess liquid from the cloth before using. After cleaning, use a dry cloth to remove any moisture.


! NOTICE

Do not use any paint thinner, organic solvent, or strong acid.


Indoor unit error code

Home screen

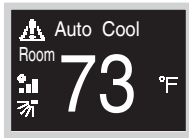

When the indoor unit is in error, the controller will display  on the home screen.

Information screen

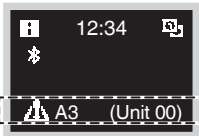

Press and hold  on the Home screen for 5 seconds.

The unit number and error code will be displayed at the bottom of the information screen.


For error code description, please refer to the indoor unit manual.

How to reset the filter sign

How filter sign is displayed

When filter cleaning or replacement is necessary, this icon is displayed on the user menu screen.

Home screen

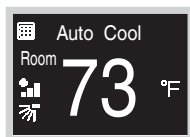

Text mode




Icon mode



If the filter sign icon is displayed on the Home screen, filter maintenance is necessary.

User menu screen

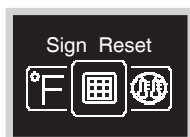

Text mode




Icon mode




Access to the filter sign menu.

User menu screen

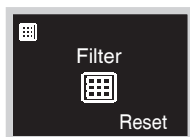

Text mode

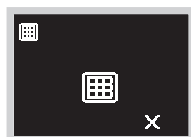

Icon mode

The icons are displayed as of the following 4 types.

Follow the instruction remove sign.

Depending on the connected system, certain icons may not be displayed.



Filter sign



Element sign



Dust Box sign




Filter Change sign

Filter sign/element sign

Wash, clean, or replace the filter or element.

For details, refer to the operation manual supplied with the indoor unit.

Filter sign screen

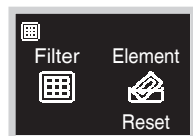

Text mode




Icon mode

Reset the filter indicator when the filter or element is cleaned or replaced.

Press **+** to apply.

Filter sign screen (When there is only a filter)

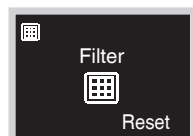

Text mode



Icon mode

Filter sign screen (When there is only an element)



Text mode



Icon mode

Result:

The filter sign will disappear and the controller returns to the home screen.

Dust box sign

Remove the dust in the dust box.

For maintenance, see the indoor unit operation manual.

Dust Box sign screen



Text mode



Icon mode

Reset the filter indicator when the dust box is emptied.

Press **+** to apply.

Result:


The filter sign will disappear and the controller returns to the home screen.

Filter change sign

Replace the filter.

For maintenance, see the indoor unit operation manual.

Filter Change sign screen

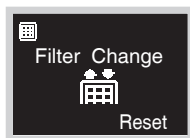

Text mode



Icon mode

Reset the filter indicator when the filter is replaced.

Press **+** to apply.

Result:

The filter sign will disappear and the controller returns to the home screen.

Troubleshooting

The following cases do not indicate a malfunction.

Cause and action
<ul style="list-style-type: none"><li data-bbox="69 220 1012 328">• If you change the operation mode to Cooling, Heating or Auto when the power is first turned on, communication between the MAIN remote controller and the SUB remote controller occurs, so the SUB remote controller cannot be operated for about 10 seconds. This does not occur at the 2nd and subsequent changes.<li data-bbox="69 328 1012 408">• During setback operation, it is not possible to stop operation from the SUB remote controller. Operation may stop for a short time, but then operation will start again or stop depending on the setback state.

After-sale Service

Warning

- **Do not relocate or reinstall the remote controller by yourself.**
Improper installation may result in electric shocks or fire.
Consult your Daikin dealer.



■ **Advise your Daikin Dealer of the following items**

- Model name
- Date of installation
- Failure conditions: As precise as possible.
- Your address, name, and telephone number

■ **Repairs after Warranty Period**

Consult your Daikin dealer.

■ **Inquiry about After-sale Service**

Contact your Daikin dealer.

Our continuing commitment to quality products may mean a change in specifications without notice.

© 2020 **DAIKIN NORTH AMERICA LLC** · Houston, Texas · USA · www.daikincomfort.com

DAIKIN INDUSTRIES, LTD.

Head office:

Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

Tokyo office:

JR Shinagawa East Bldg., 2-18-1, Konan,
Minato-ku, Tokyo, 108-0075 Japan