


Service Manual

Navigation Remote Controller (Wired Remote Controller) BRC1E73

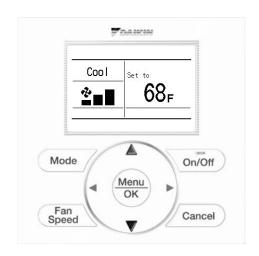

Navigation Remote Controller (Wired Remote Controller) BRC1E73

	1	. Introduction	
Part 1	Remot	e Controller	1
	2 3 4	Features 1.1 Selectable Screen Display 1.2 Functions 1.3 Dimensions Button Locations and Descriptions Names and Functions of the Liquid Crystal Display Mode Access Operation Basic Screen Operation	
Part 2	Main M	lenu	13
		. Main Menu List . Details for Each Menu Item 2.1 Airflow Direction 2.2 Individual Airflow Direction 2.3 Ventilation 2.4 Schedule 2.5 Off Timer 2.6 Filter Auto Clean 2.7 Maintenance Information 2.8 Configuration 2.9 Current Settings 2.10 Clock & Calendar 2.11 Daylight Saving Time 2.12 Language 2.13 Reset Filter Indicator	
Part 3	Servic	e Settings	43
		Service Settings Menu List Details for Each Menu Item	45 45

		2.3	Field Settings	47
		2.4	Energy Saving Options	50
		2.5	Prohibit Function	5∠
		2.6	Min Setpoints Differential	56
		2.7	Group Address	57
		2.8	Indoor Unit AIRNET Address	61
		2.9	Outdoor Unit AIRNET Address	62
		2.10) Error History	63
		2.11	I Indoor Unit Status	64
		2.12	2 Outdoor Unit Status	65
		2.13	B Forced Fan ON	65
		2.14	4 Switch Main Sub Controller	66
		2.15	5 Filter Indicator	66
		2.16	6 Test Filter Auto Clean	67
		2.17	7 Brush / Filter Ind	67
		2.18	3 Disable Filter Auto Clean	68
Part 4	Mainte	nand	ce Menu	69
	1	Main	ntenance Menu List	70
			ails for Each Manu Itam	79
		Deta	ails for Each Menu Item	
		Deta 2.1	Model Name	72
		Deta 2.1 2.2	Model Name Operation Hours	72 73
		Deta 2.1 2.2 2.3	Model Name Operation Hours Indoor Unit Status	72 73
		Deta 2.1 2.2 2.3 2.4	Model Name Operation Hours Indoor Unit Status Outdoor Unit Status	
		Deta 2.1 2.2 2.3 2.4 2.5	Model Name Operation Hours Indoor Unit Status Outdoor Unit Status Forced Defrost	
		Deta 2.1 2.2 2.3 2.4 2.5 2.6	Model Name Operation Hours Indoor Unit Status Outdoor Unit Status Forced Defrost Error Display	
		Deta 2.1 2.2 2.3 2.4 2.5 2.6 2.7	Model Name Operation Hours Indoor Unit Status Outdoor Unit Status Forced Defrost Error Display	
Part 5	2.	Deta 2.1 2.2 2.3 2.4 2.5 2.6 2.7 2.8	Model Name Operation Hours Indoor Unit Status Outdoor Unit Status Forced Defrost Error Display Swap Unit No. Addressed Sensor Value	
Part 5	2.	Deta 2.1 2.2 2.3 2.4 2.5 2.6 2.7 2.8	Model Name Operation Hours Indoor Unit Status Outdoor Unit Status Forced Defrost Error Display Swap Unit No.	

Introduction SiUS721424EB

1. Introduction

1.1 Safety Precautions

Read the safety precautions attentively for the correct use of the product.

■ The precautions described herein are classified as WARNING and CAUTION.

They both contain important information regarding safety. Be sure to observe all precautions without fail.

Note:	A "note" provides information that is not indispensable, but may nevertheless be valuable to the reader, such as tips and tricks.
• Warning	Failure to follow these instructions properly may result in personal injury or loss of life.
Caution	Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.

■ The following pictograms are used in this manual.

\Diamond	Never do.	0	Always follow the instructions given.
•	Be sure to ground the unit.		Absolutely keep wet hands away.
	Absolutely keep water and moisture away.		

1.1.1 About Remote Controller

• Warning	
■ Do not install the remote controller by yourself. Improper installation may result in electric shocks or fire. Consult your Daikin dealer.	0
■ Do not modify or repair the remote controller. This may result in electric shocks or fire. Consult your Daikin dealer.	0
■ Do not relocate or reinstall the remote controller by yourself. Improper installation may result in electric shocks or fire. Consult your Daikin dealer.	0
■ Do not use flammable materials (e.g., hairspray or insecticide) near the product. Do not clean the product with organic solvents such as paint thinner. The use of organic solvents may cause crack damage to the product, electric shocks, or fire.	0

SiUS721424EB Introduction

<u> Caution</u>	
■ Do not play with the unit or its remote controller. Accidental operation by a child may result in impairment of bodily functions and can be harmful to human health.	0
■ Never disassemble the remote controller. Touching the interior parts may result in electric shocks or fire. Consult your Daikin dealer or authorized contractor for internal inspections and adjustments.	\Diamond
■ To avoid electric shocks, do not operate with wet hands.	
■ Do not wash the remote controller. Doing so may cause electric leakage and result in electric shocks or fire.	
■ Do not leave the remote controller wherever there is a risk of wetting. If water gets into the remote controller there is a risk of electrical leakage and damage to electronic components.	

1.1.2 Indoor Unit and Outdoor Unit

• Warning	
■ Be aware that prolonged, direct exposure to cool or warm air from the air conditioner, or to air that is too cool or too warm can be harmful to your physical condition and health.	0
■ Do not place objects, including rods, your fingers, etc., in the air inlet or outlet. Injury may result due to contact with the air conditioner's high-speed fan blades.	0
■ Contact professional personnel about attachment of accessories and be sure to use only accessories specified by the manufacturer. If a defect results from your own workmanship, it may result in water leaks, electric shock or fire.	0
■ Do not use the product in an atmosphere contaminated with oil vapor, such as cooking oil or machine oil vapor. Oil vapor may cause crack damage, electric shocks, or fire.	0

Introduction SiUS721424EB

№ Warning	
■ Do not use the product in places with excessive oily smoke, such as cooking rooms, or in places with flammable gas, corrosive gas, or metal dust. Using the product in such places may cause fire or product failures.	0
■ Beware of fire in case of refrigerant leakage. If the air conditioner is not operating correctly, i.e. not generating cool or warm air, refrigerant leakage could be the cause. Consult your dealer for assistance. The refrigerant within the air conditioner is safe and normally does not leak. However, in the event of a leakage, contact with a naked burner, heater or cooker may result in generation of noxious gas. Do not use the air conditioner until a qualified service person confirms that the leakage has been repaired.	0
■ In the case of using a load breaker provided with a fuse, make sure that the capacity of the fuse is correct. Use of an ordinary conductive wire may cause malfunctions or fire.	0
■ Do not start or stop operating the air conditioner with the power supply breaker turned ON or OFF. Otherwise, fire or water leakage may result. Furthermore, the fan will rotate abruptly if power failure compensation is enabled, which may result in injury.	\Diamond
■ Be sure to earth the unit. Do not earth the unit to a utility pipe, lightning conductor or telephone earth lead. Imperfect earthing may result in electric shocks or fire. A high surge current from lightning or other sources may cause damage to the air conditioner.	•
■ When the air conditioner is malfunctioning (giving off a burning odour, etc.) turn OFF power to the unit and contact your local dealer. Continued operation under such circumstances may result in a failure, electric shocks or fire hazards.	0
Consult your local dealer regarding what to do in case of refrigerant leakage.	
When the air conditioner is to be installed in a small room, it is necessary to take proper measures so that the amount of any leaked refrigerant does not exceed the concentration limit in the event of a leakage. Otherwise, this may lead to an accident due to oxygen depletion.	0
■ Be sure to install an earth leakage breaker. Failure to install an earth leakage breaker may result in electric shocks or fire.	0
■ Consult the dealer if the air conditioner submerges owing to a natural disaster, such as a flood or typhoon. Do not operate the air conditioner in that case, or otherwise a malfunction, electric shock, or fire may result.	0
■ Be sure to use a dedicated power supply for the air conditioner. The use of any other power supply may cause heat generation, fire, or product failures.	0


SiUS721424EB Introduction

<u> Caution</u>	
■ After prolonged use, check the unit stand and its mounts for damage. If left in a damaged condition, the unit may fall and cause injury.	0
■ Do not allow a child to mount on the outdoor unit or avoid placing any object on it. Falling or tumbling may result in injury.	0
■ Do not block air inlets nor outlets. Impaired airflow may result in insufficient performance or trouble.	\bigcirc
■ To avoid injury, do not touch the air inlet or aluminium fins of the unit.	0
■ Do not remove the outdoor unit's fan guard. The guard protects against the unit's high speed fan, which may cause injury.	\bigcirc
■ Do not place objects that are susceptible to moisture directly beneath the indoor or outdoor units. Under certain conditions, condensation on the main unit or refrigerant pipes, air filter dirt or drain blockage may cause dripping, resulting in fouling or failure of the object concerned.	0
■ Do not place water containers (flower vases, etc.) on the unit, as this may result in electric shocks or fire.	0
■ Do not use the air conditioner for purposes other than those for which it is intended. Do not use the air conditioner for cooling precision instruments, food, plants, animals or works of art as this may adversely affect the performance, quality and/or longevity of the object concerned.	0
■ Do not place appliances that produce naked flames in places exposed to the airflow from the unit as this may impair combustion of the burner.	0
■ Do not place heaters directly below the unit, as resulting heat can cause deformation.	\bigcirc

Introduction SiUS721424EB

Caution	
■ Be sure that children, plants or animals are not exposed directly to airflow from the unit, as adverse effects may ensue.	0
■ Do not put flammable containers, such as spray cans, within 1m from the blow-off mouth. The containers may explode because the warm air output of the indoor or outdoor unit will affect them.	0
■ Do not install the air conditioner at any place where there is a danger of flammable gas leakage. In the event of a gas leakage, build-up of gas near the air conditioner may result in fire hazards.	0
Do not sit or stand on any unstable base at the time of operating or maintaining the air conditioner. The base may topple down and injury may result.	0
■ Do not touch the motor at the time of filter replacement. The motor operates at high temperatures and a burn may result.	0
■ Do not wash the air conditioner with water, as this may result in electric shocks or fire.	
■ Perform ventilation from time to time. Be careful when using the air conditioner with other heating equipment. Insufficient ventilation may result in oxygen deficiency.	0
Always stop the operation of the air conditioner and turn OFF the breaker at the time of cleaning. Failure to do so may result in an electric shock or injury.	0
■ Do not wash the interior of the indoor and outdoor units by yourself. Always consult your Daikin dealer. The use of an incorrect washing method or incorrect detergent may damage the resin parts of the indoor unit or cause water leakage. Moreover, malfunctions, smoke generation, or ignition may result if the electric parts or motor in the indoor unit are wet with detergent.	0
■ Do not place objects in direct proximity of the outdoor unit and do not let leaves and other debris accumulate around the unit. Leaves are a hotbed for small animals which can enter the unit. Once in the unit, such animals can cause malfunctions, smoke or fire when making contact with electrical parts.	0

SiUS721424EB Introduction

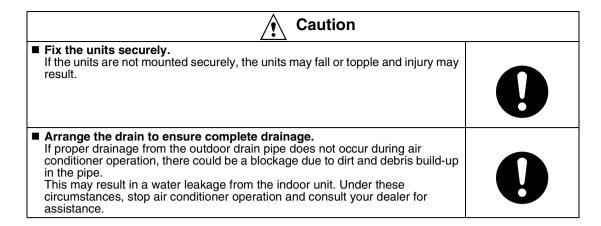


Part 1 Remote Controller

1.	⊢eat	ures	2
	1.1	Selectable Screen Display	2
		Functions	
	1.3	Dimensions	4
2.	Butto	on Locations and Descriptions	5
3.	Nam	es and Functions of the Liquid Crystal Display	7
4.	Mod	e Access Operation	10
5.	Basi	c Screen Operation	12

SiUS721424EB Features

1. Features

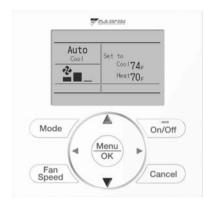

BRC1E73

· Selectable Screen Display	. 3 types of displays are available; Standard, Detailed and Simple.
· Clear Display	. Equipped with backlight and large sized character display and
	buttons.
· Stylish	. Basic tone is white and arrow keys are located at the center.
· Simple Operation	. Simple operation used with arrow keys and menu-driven method.
· Multilingual Display	. Available for selection of 3 languages to display arbitrarily.
· Convenient Features	Schedule function and Daylight Saving Time function are
	improved.

1.1 Selectable Screen Display

- · Thanks to dot LCD, 3 different displays can be selected to meet various customers.
- · New Simple display helps the customers to use easily.
- · In Auto mode, the actual operation mode (Cool or Heat) is newly displayed.

Detailed display Standard display Simple display











- ·Larger room temperature display
- $\cdot \text{Layout to fill the entire screen}$

Note: CENTRAL CONTROLLED , and

This function is not available are not displayed.

Features SiUS721424EB

1.2 Functions


Category	Function BRC1E73		
	Drawing display	Full dot LCD	
Basic Functions	Operation method	Menu selection	
	Backlight function	0	
	Clock function (time display)	0	
	Display selection	O *1	
Convenient Functions	Keylock function	0	
	Daylight saving time function	0	
	Schedule (weekly) timer	0	
	Model name display	O *2 *3 *5	
Maintenance/Services	Contact dealer display	O *3 *4	
iviainteriance/Services	Operation time display	O *2	
	Operational data display	O *2	

O: Possible


- *1 Used for setting Standard Display mode, Detailed Display mode or Simple Display mode.
- *2 Can display for some model only.
- *3 When an error occurs, the error code blinks and the contact address and model names appear.
- *4 The contact address must be registered when the controller is installed.
- *5 For some models, model codes are displayed instead of model names.

SiUS721424EB Features

1.3 Dimensions

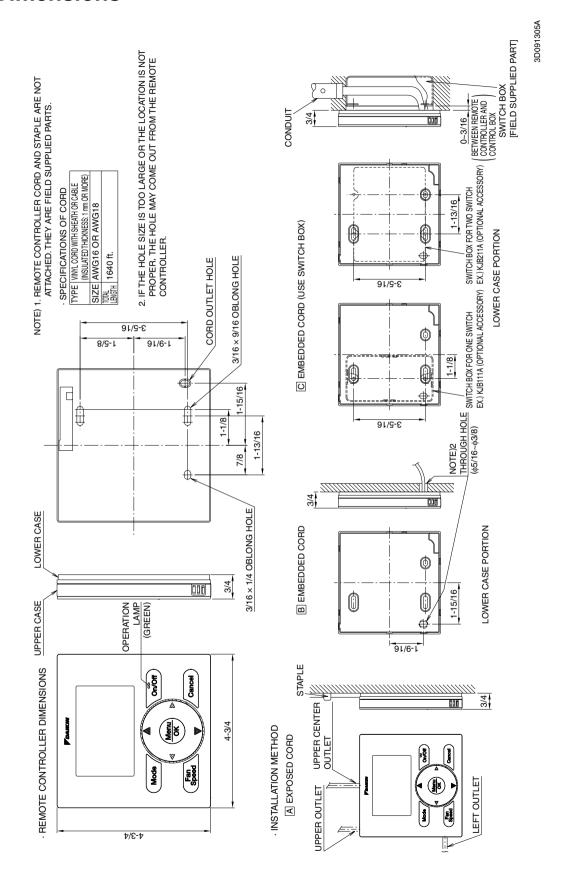

2. Button Locations and Descriptions

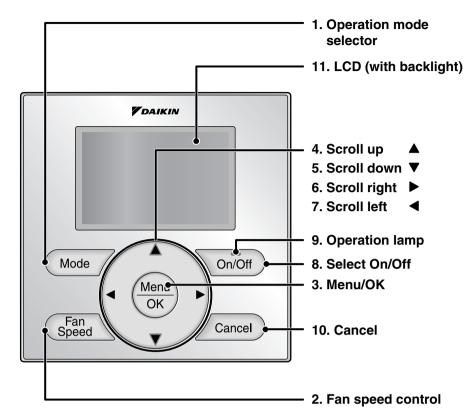

Functions other than basic operation items (i.e., On/Off, Operation Mode, Fan Speed, and Setpoints) are set from the menu screens.



- Never install the remote controller in places exposed to direct sunlight or the LCD will be damaged.
- Never pull or twist the remote controller cord or the remote controller may be damaged.
- Never use objects with sharp ends to press the buttons on the remote controller or damage may result.

1. Operation mode selector

- Press this button to select the operation mode of your preference.
 - * Available modes vary with the indoor unit model.

2. Fan speed control

- Press this button to select the fan speed of your preference.
 - * Available fan speeds vary with the indoor unit model.

3. Menu/OK

- Used to enter the main menu.
- Used to enter the selected item.

4. Scroll up ▲

- Used to increase the setpoint.
- The item above the current selection will be highlighted.
 (The highlighted items will be scrolled continuously when the button is pressed continuously.)
- Used to change the selected item.

5. Scroll down ▼

- Used to decrease the setpoint.
- The item below the current selection will be highlighted.

 (The highlighted items will be scrolled continuously when the button is pressed continuously.)
- Used to change the selected item.

6. Scroll right ▶

- Used to highlight the next item on the right-hand side.
- Items are scrolled through in the right-hand direction.

7. Scroll left ◀

- Used to highlight the next item on the left-hand side.
- Items are scrolled through in the left-hand direction.

8. Select On/Off

- Press to start the unit(s).
- Press this button again to stop the system.

9. Operation lamp

- This lamp is lit solid green during normal operation.
- This lamp blinks if an error occurs.

10. Cancel

■ Used to return to the previous screen.

11.LCD (with backlight)

- The backlight will be illuminated for approximately 30 seconds by pressing any button.
- If two remote controllers are used to control a single indoor unit, whichever controller is accessed first will have backlight functionality at that time.

Maintaining the Unit and LCD Display

- Wipe the LCD and surface of the remote controller with a dry cloth when they become dirty.
- If the dirt on the surface cannot be removed, soak the cloth in neutral detergent diluted with water, squeeze the cloth tightly, and clean the surface. Wipe the surface with a dry cloth.


Note

• Do not use any paint thinner, organic solvent, or strong acid.

3. Names and Functions of the Liquid Crystal Display


- Three variations of the display mode (Standard, Detailed, and Simple) are available.
- Standard display is set by default.
- Detailed and Simple displays may be selected in the main menu.

Standard display

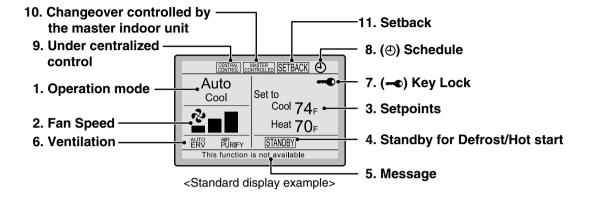


Detailed display

Airflow direction, clock, and selectable items appear on the Detailed display screen in addition to the items appearing on Standard display.

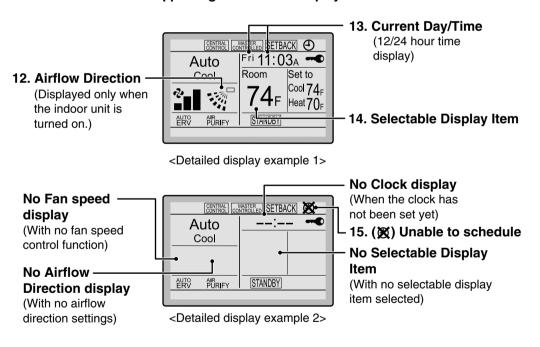

Simple display

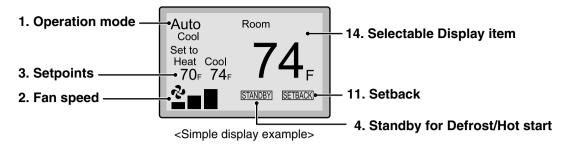

Note for all display modes

Depending on the field settings, while the indoor unit is stopped, OFF may be displayed instead of the operation mode and/or the setpoint may not be displayed.

1. Operation mode

- Used to display the current operation mode: Cool, Heat, Vent, Fan, Dry or Auto.
- In Auto mode, the actual operation mode (Cool or Heat) will be also displayed.
- Operation mode cannot be changed when OFF is displayed.
 Operation mode can be changed after starting operation.

2. Fan Speed

- Used to display the fan speed that is set for the indoor unit.
- The fan speed will not be displayed if the connected model does not have fan speed control functionality.

3. Setpoints

- Used to display the setpoint for the indoor unit.
- Use the Celsius/Fahrenheit item in the main menu to select the temperature unit (Celsius or Fahrenheit).

4. Standby for Defrost/Hot start " STANDBY "

If ventilation icon is displayed in this field:

Indicates that an Energy Recovery Ventilator (ERV) is connected. For details, refer to the Operation Manual of the ERV.

5. Message

The following messages may be displayed.

"This function is not available"

- Displayed for a few seconds when an Operation button is pressed and the indoor unit does not provide the corresponding function.
- In a remote control group, the message will not appear if at least one of the indoor units provides the corresponding function.

"Error: Push Menu button"

"Warning: Push Menu button"

Displayed if an error or warning is detected.

"Time to clean filter"

"Time to clean element"

"Time to clean filter & element"

■ Displayed as a reminder when it is time to clean the filter and/or element.

6. Ventilation

- Displayed when an Energy Recovery Ventilator is connected.
- Ventilation Mode icon "AUTO ERV, ERV, BYPASS "

These icons indicate the current ventilation mode (ERV only).

■ Air Purify icon " AIR PURIFY "

This icon indicates that the air purifying unit (Optional) is in operation.

7. Key Lock

■ Displayed when the key lock is set.

8. Schedule

■ Displayed if the Schedule or Off timer is enabled.

9. Under Centralized control " CENTRAL "

■ Displayed if the system is under the management of a multi-zone controller (Optional) and operation of the system through the remote controller is limited.

10. Changeover controlled by the master indoor unit " [MRV only)

■ Displayed when another indoor unit on the system has the authority to change the operation mode between cool and heat.

11. Setback " SETBACK "

■ The setback icon flashes when the unit is turned on by the setback control.

12. Airflow Direction ".""

- Displayed when the airflow direction and swing are set.
- If the connected indoor unit model does not include oscillating louvers this item will not be displayed.

13. Current Day/Time (12/24 hour display)

- Displayed if the clock is set.
- If the clock is not set, "--: -- " will be displayed.
- 12 hour format is displayed by default.
- Select 12/24 hour display option in the main menu under Clock & Calendar.

14. Selectable Display Item

■ Room temperature is selected by default.


15. X Unable to Schedule

- Displayed when the clock needs to be set.
- The schedule function will not work unless the clock is set.

4. Mode Access Operation

On power-up, the message "Checking the connection. Please standby." will be displayed on the remote controller screen temporarily and then the basic screen will be displayed. To access a mode from the basic screen, refer to the figure below.

When any of the operation buttons is pressed, the backlight will come on and remain lit for about 30 seconds. Be sure to press a button while the backlight is on.

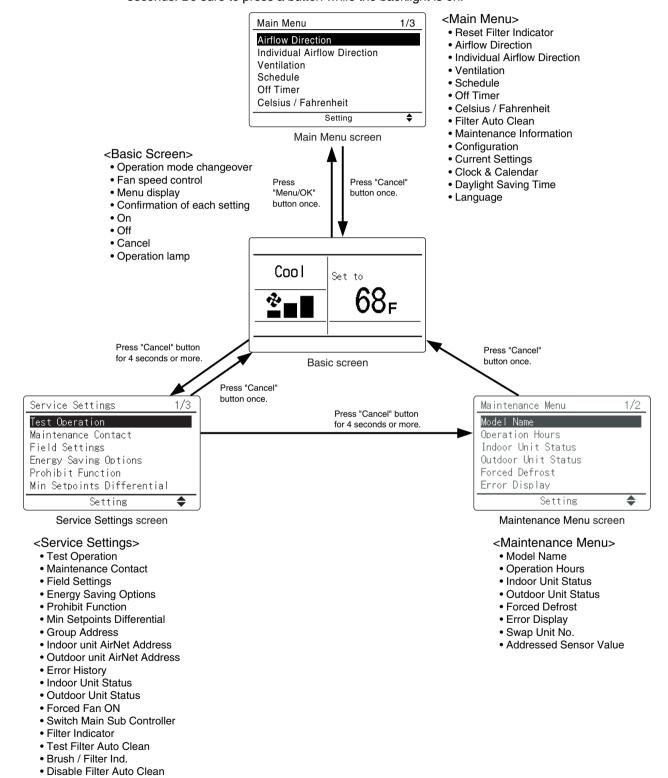

Mode Access Operation SiUS721424EB

Display when an error or warning occurs

(1) When an error occurs:

The Operation lamp (green) will start to flash. The message "Error: Push Menu button" will be displayed at the bottom of the screen. \rightarrow Press the "Menu/OK" button to see the error details.

(2) When a warning occurs:

The Operation lamp (green) will remain on. The message "Warning: Push Menu button" will be displayed at the bottom of the screen. → Press the "Menu/OK" button to see the warning details.

Contact your Daikin dealer in the following cases.

Operation





 If an error occurs, either one of the following items will flash in the basic screen.

Error: Push Menu button

- *The Operation lamp will flash.
- *For Simple display, the message is not displayed, and only the Operation lamp flashes.

Warning: Push Menu button

- *The Operation lamp will not flash.
- *For Simple display, the message is not displayed, and the Operation lamp does not flash, either.



Press Menu/OK button.





- The error code will flash and the service contact and model name or code may be displayed.
- Notify your Daikin dealer of the Error code and model name or code.

Basic Screen Operation

5. Basic Screen Operation

On power-up, the basic screen will be displayed.

The following operations can be performed directly from the basic screen.

Item		Operation Procedures	
1. Start operation		Press the "On/Off" button. The Operation lamp (green) will come on and the unit will start operating.	
2. Stop operation		Press the "On/Off" button while the unit is operating. The Operation lamp (green) will go out and the unit will stop.	
Switch between operation modes		Each time the "Operation mode selector" button is pressed, the operation mode will change, in the order shown below: (1) Fan \rightarrow (2) Dry (*) \rightarrow (3) Auto (*) \rightarrow (4) Cooling \rightarrow (5) Heating (*) \rightarrow (6) Ventilation/Purifying (*) \rightarrow (7) Ventilation (*) \rightarrow (8) Purifying (*) \rightarrow Return to (1). The operation modes marked with an * are not displayed if the system is not equipped to perform the corresponding function.	
4. Change the fan speed mode		Each time the "Fan speed control" button is pressed, the fan speed will change, in the order shown below: (1) Low \rightarrow (2) Medium (*) \rightarrow (3) High \rightarrow (4) Auto The fan speed mode marked with an * is not displayed if the system is not equipped to perform this function.	
5. Change the set temperature		Use the "▲/▼(Up/Down)" buttons to set the desired temperature.	
6. Access each mode	To select the Main Menu	Press the "Menu/OK" button once to access the Main Menu.	
	To select the Service settings mode	Press and hold the "Cancel" button for 4 seconds or more to access the Service Settings mode.	
	To select the Maintenance Menu mode	While in the Service Settings mode, press and hold the "Cancel" button for 4 seconds.	

Part 2 Main Menu


1.	Main	Menu List	14
2.	Deta	ils for Each Menu Item	16
	2.1	Airflow Direction	16
	2.2	Individual Airflow Direction	18
	2.3	Ventilation	20
	2.4	Schedule	22
		Off Timer	
	2.6	Filter Auto Clean	29
		Maintenance Information	
	2.8	Configuration	33
	2.9	Current Settings	36
		Clock & Calendar	
	2.11	Daylight Saving Time	39
	2.12	Language	41
		Reset Filter Indicator	

SiUS721424EB Main Menu List

1. Main Menu List

Use the following steps to access the Main Menu from the basic screen.

Pressing the "Cancel" button while the Main Menu screen is displayed takes you back to the basic screen.

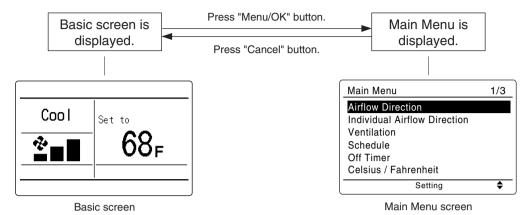

■ Main menu list

Menu	ı item	Description
Airflow Direction (This function is not indoor unit models.)		Used to configure airflow direction settings. ■ The airflow direction louver is automatically operated up and down (left and right). ■ The fixed airflow directions are configurable for five positions.
Individual Airflow Direction	Louver Setting	Set the airflow direction individually for each of the 4 louvers. Maximum 16 units (unit 0 to 15).
(depends on indoor unit model)	Louver Setting List	Setting table for louver.
	Reset All Louvers Position	Reset all louvers to factory default setting.
Ventilation	Ventilation Mode	Used to set "Auto", "ERV", or "Bypass".
(Ventilation operation settings		
for Energy Recovery Ventilator	Ventilation Rate	Used to set "Low" or "High".
Schedule	Daily Patterns	■ Day settings are selected from four patterns, i.e., "7Days", "Weekday/Sat/Sun", "Weekday/Weekend", and "Everyday".
	Settings	 Set the startup time and operation stop time. ON: Startup time, cooling and heating temperature setpoints can be configured. OFF: Operation stop time, cooling and heating setback temperature setpoints can be configured. (: Indicates that the setback function is disabled for this time period.) Indicates that the temperature setpoint and setback temperature setpoint for this time period is not specified. The last active setpoint will be utilized. Up to five actions can be set for each day.
Off Timer		Used to set the run-time for the indoor unit using this controller. ■ Possible to set in 10 minutes increments from 30 to 180 minutes.
Celsius / Fahrenhe	eit	■ Used to select whether temperature values will be displayed in Celsius or Fahrenheit.
Filter Auto Clean		Set the time when the filter needs to be automatically cleaned. For the detailed operation refer to the Operation Manual of the self cleaning decoration panel.
Maintenance Infor	mation	Used to display maintenance information.

Main Menu List SiUS721424EB

Menu item		Description	
(Only available with		Draft prevention function can be enabled or disabled . When enabled, the occupant sensor will adjust the louver's position to prevent air blowing directly on an occupant.	
	Contrast Adjustment	Used to make LCD contrast adjustment.	
	Display	Used to set the display mode. ■ Standard, Detailed, or Simple display ■ Detailed and Simple displays provide the selectable display item among Room Temp, System, None or Outside Air Temp.	
Current Settings		■ Used to display a list of current settings for available items.	
Clock & Calendar	Date & time	Used to configure date and time settings and corrections. ■ The default time display is 12H. ■ The clock will maintain accuracy to within ±30 seconds per month. ■ If there is a power failure for a period not exceeding 48 hours, the clock will continue working with the built-in backup power supply.	
	12H/24H Clock	The time can be displayed in either a 12 hour or a 24 hour format.	
Daylight Saving T	ime	Used to adjust the clock in observance of Daylight Saving Time.	
Language		The display language can be selected from English , Français , or Español .	

Note: Available setting items vary with the indoor unit model.

Sub Remote Controller Menu Items	
If two remote controllers are connected to a single indoor unit, the following menu items are not set in the sub remote controller. In this case, the following items should be configured in the main remote controller.	Indoor unit
■ Individual Airflow Direction ■ Schedule ■ Off timer ■ Setback ■ Draft Prevention	Outdoor unit Two remote controllers in control

2. Details for Each Menu Item

This section provides information about how to use each item in the Main Menu.

2.1 **Airflow Direction**

■ Configuring Airflow direction

Operation






• Display the main menu screen.









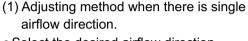



 Select the desired airflow direction from Position 0, Position 1,

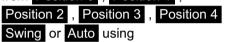

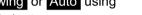



 Press Menu/OK button to confirm the settings and to return to the basic screen.



Airflow direction setting (up/down)



Airflow direction setting (left/right)


• The airflow directions appear on the screen as follows:



Notice

These operations and screens are examples of single airflow direction type indoor units.

Airflow Direction

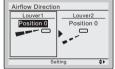

When front/back direction is selected



When left/right direction is selected

- (2) Adjusting method for selecting dual airflow directions.
- Press ◀▶ buttons, to select front/back or left/right direction setting.




Notice

These operation and screen are example of dual airflow directions type indoor unit (Single flow cassette model).


Details for Each Menu Item SiUS721424EB



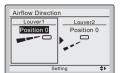






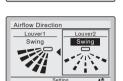


• Select the desired airflow direction

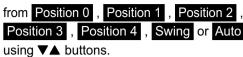

- Selecting Swing will cause the airflow direction louver to swing position 0 to 4.
- Setting Auto is not available when left/ right direction is selected.
- Press Menu/OK button to confirm the settings and return to the basic screen.



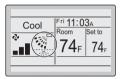

Basic screen (Detailed display) • If dual airflow directions are set, then the dual airflow direction icons are displayed in the basic screen.

Individual Airflow Direction 2.2

■ Louver Setting

Operation






- Display the main menu screen.
- Select Individual Airflow Direction and press Menu/OK button.





 Select Louver Setting and press Menu/OK button.




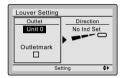

 Use ▼▲ buttons to select the unit and outlet mark.



 Maximum 16 units for each group (unit 0 to 15) may be selected.

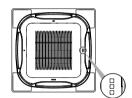


Note

In case of four outlets (cassette type), you can control each one of the four louvers individually (the following marks are beside each air outlet: o, oo, ooo, ooo).





- Press ◀▶ button to select the airflow direction.
- Use ▼▲ buttons to change the airflow direction to the following:

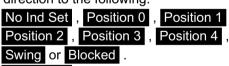




No Ind Set: No Individual Louver Setting.

Blocked: Individual airflow is blocked.

• Press Menu/OK button to confirm the settings and to return to the basic screen.

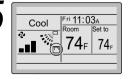

Basic screen (Detailed display) If individual airflow direction is set, then the individual airflow direction icon is displayed in the basic screen.

Details for Each Menu Item SiUS721424EB


■ Louver Setting List

Operation






 Display the individual airflow direction screen.

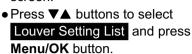



Louver Setting List		
Unit 0		
Outletmark	Direction	Indiv.
	Position 0	OFF
	Position 0	OFF
000	Position 0	OFF
0000	Position 0	OFF
•		

• A table shows the current settings. Press ▼▲ buttons to go to the next unit.

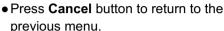



■ Reset All Louvers Position

Operation






 Display the individual airflow direction screen.



 Press ▼▲ buttons to select Reset All Louvers Position and press Menu/OK button.



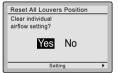

- Press ◀▶ buttons to select Yes .
- Press Menu/OK button to confirm the reset and to return to the basic screen.






Operational Details and Functions

There are two types of airflow direction settings.


Airflow direction swing

The louvers automatically oscillate up and down.

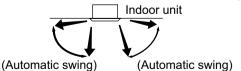

Airflow direction

You can select from one of five fixed directions. (This has no relation to the angle of the louvers.)

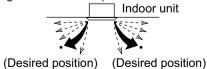

Movement of airflow direction louver

Under the operating conditions shown above, airflow direction is controlled automatically. Actual operation may be different than what is displayed on the remote controller.

Ventilation 2.3

■ Ventilation screen display properties

menu screen.)

Operation



- Display the main menu screen.
- Press ▼▲ buttons to select Ventilation on the main menu screen. (For models with no ventilation function. Ventilation will not be displayed on the main




Press Menu/OK button to display the ventilation screen.

■ Changing the ventilation rate

Operation



- Navigate to the ventilation screen (see above).
- Press ▼▲ buttons to select Ventilation Rate on the ventilation

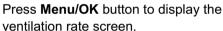



ventilation rate screen.



 Press ▼▲ buttons to toggle between the Low and High settings.



 Selecting and confirming the desired ventilation rate will take you back to the basic screen.




(Pressing Cancel button takes you back to the previous screen without changing the ventilation rate.)

Details for Each Menu Item SiUS721424EB

■ Changing the ventilation mode

Operation



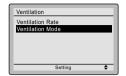

- Display the ventilation screen.
- Press ▼▲ buttons to select
 Ventilation Mode on the ventilation screen.

Press **Menu/OK** button to display the ventilation mode screen.



2




 Pressing ▼▲ buttons cycles through the settings in the order shown below.





*Only modes that can be set are displayed.

3

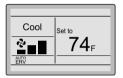

 Selecting and confirming the desired ventilation mode will take you back to the basic screen.



(Pressing **Cancel** button takes you back to the previous screen without changing the ventilation mode.)

Ventilation Mode

Auto mode Using information from the indoor unit (cool, heat, fan, and

setpoint) and the energy recovery ventilator unit (indoor and outdoor temperatures), the ventilation mode is automatically

changed between ERV and Bypass.

ERV modeOutside air is passed through the ERV core and is supplied to the

conditioned space.

Bypass mode Outside air is supplied to the conditioned space without passing

through the ERV core.

Details for Each Menu Item

2.4 **Schedule**

■ Setting the schedule

Operation The schedule will disappear when a multi-zone controller is connected, but can be re-enabled by field setting.





• Display the main menu screen.



 Press ▼▲ buttons to select Schedule Press Menu/OK button to display the schedule screen.







- Before setting the schedule, the clock must be set.
- If the clock has not been set, a screen like the one on the left will appear. Press **◄** buttons to select Yes and press Menu/OK button.
- The date & time screen will appear.
- Set the current year, month, day, and
- *Refer to section 2.10 Clock & Calendar.









 Press ▼▲ buttons to select the desired function on the schedule screen and press Menu/OK button.



Details for Each Menu Item SiUS721424EB

■ Daily Patterns

Operation





- The schedule screen will appear.
- Press ▼▲ buttons to select Daily Patterns on the schedule



The daily patterns screen will appear when Menu/OK button is pressed.





 Press ▼▲ buttons to select 7 Days, Weekday/Sat/Sun Weekday/Weekend or Everyday on the daily patterns screen.

The confirmation screen will appear when Menu/OK button is pressed.





 Press ◀► buttons to select Yes on the confirmation screen.



Pressing Menu/OK button enters the daily patterns in the schedule and takes you back to the main menu screen.

Details for Each Menu Item

■ Settings

Operation

1



- The schedule screen will appear.
- Press ▼▲ buttons to select Settings on the schedule screen.

The settings screen will appear when **Menu/OK** button is pressed.



2



- Press ▼▲ buttons to select the day to be set.
- *It cannot be selected in the case of EVDY .



3





- Input the time for the selected day.
- Press ◀► buttons to move the highlighted item and press ▼▲ buttons to input the desired operation start time.
 Each press of ▼▲ buttons moves the numbers by 1 hour or 1 minute.





4





- Press ◀▶ buttons to move the highlighted item and press ▼▲ buttons to configure ON/OFF/-- settings.
 --, ON, or OFF changes in sequence
- --, ON, or OFF changes in sequence when **▼**▲ buttons are pressed.



ON: Temperature setpoints can be configured.

OFF: Setback temperature setpoints can be configured.

 - -: Temperature setpoints and setback temperature setpoints become disabled.



- Cooling and heating temperature setpoints for both ON and OFF (Setback) are configured.
 - __: Indicates that the temperature setpoint and setback temperature setpoint for this time period are not specified. The last active setpoint will be utilized.
- --: Indicates that the setback function is disabled for this time period.

Details for Each Menu Item SiUS721424EB

5



Schedule

Time Act Cool Heat
Mon 6:00.0 ND 75F 70F
8:00.0 6F8 5F 50F





A maximum of five actions per day can be set.


 Press Menu/OK button when settings for each day are completed. The confirmation screen will appear.




To copy the settings for the previous day, press **Mode** button so that the existing settings will be copied.

Example: The contents for Monday are copied by pressing **Mode** button after selecting Tuesday.



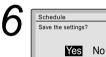

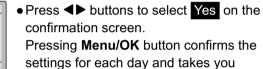

back to the basic screen.






Details for Each Menu Item



Enabling or disabling the schedule

Operation



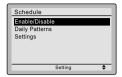

• Display the schedule screen.

Press ▼▲ buttons to select
 Enable/Disable on the schedule
 screen.

Press **Menu/OK** button to display the enable/disable screen.



2



 Press ▼▲ buttons to select Enable or Disable on the enable/disable screen.


Press **Menu/OK** button after selecting the item. The confirmation screen is displayed.



3



 Press ◀► buttons to select Yes on the confirmation screen.

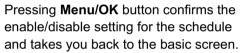



Details for Each Menu Item SiUS721424EB

2.5 Off Timer

■ Configuring and Confirming the Off Timer settings

Operation






- Display the main menu screen.
- Press ▼▲ buttons to select the
 Off Timer on the main menu screen.
 Press Menu/OK button to display the off timer screen.



2

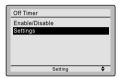


Press ▼▲ buttons to select
 Settings on the off timer screen.
 Press Menu/OK button to display the configuration screen.



3



 Use ▼▲ buttons to set the time from operation start until the unit automatically stops.
 Selections can be made in increments

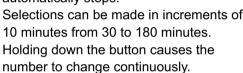


 Select the desired time and press Menu/ OK button.

The confirmation screen will appear.





 Press ◀▶ button to select Yes on the confirmation screen.

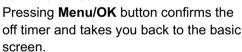






Details for Each Menu Item



Enabling or disabling the off timer

Operation



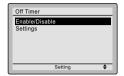

- Navigate to the off timer screen.
- Press ▼▲ buttons to select Enable/Disable on the off timer screen. Press Menu/OK button to display the enable/disable screen.





 Press ▼▲ buttons to select Enable or Disable on the enable/disable screen. Press Menu/OK button after selecting the item. Then the confirmation screen is displayed.







 Press ◀▶ button to select Yes on the confirmation screen.



Pressing Menu/OK button confirms the enable/disable for the off timer and takes you back to the basic screen.



2.6 Filter Auto Clean

■ Filter Auto Clean Setting

Air conditioning operation of the product will come to a stop while the product is performing filter auto cleaning. Specify the desired period from eight periods.

NOTE

- The correct clock settings are necessary.
- The product will perform filter auto-cleaning from 12:00A to 3:00A (as factory default) if the period for filter auto cleaning is not specified.
- The product will perform filter auto-cleaning at non-prescribed time if clock settings are not made.

■ Method of Specifying Start Time

Operation Method



- Display the main menu screen.
- Press ▼▲ buttons to select the Filter Auto Clean on the main menu screen and press Menu/OK button.



2



* Clock settings are required to set the start time of filter auto-cleaning.



If the clock has not been set, a screen like the one on the left will appear.




Press ◀▶ buttons to select Yes and press Menu/OK button. Set the current year, month, day, and time.



* Refer to section 2.10 Clock & Calendar.

Details for Each Menu Item

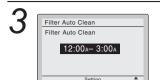

 The period will change whenever ▼▲ buttons are pressed in the Clock setting screen for filter auto-cleaning.





Select the desired period from the ones displayed.

Press Menu/OK button.

The settings confirmation screen will appear.





SiUS721424EB



 Press ◀▶ button to select Yes on the settings confirmation screen.

Press Menu/OK button to set the filter auto clean and return to the basic screen.





NOTE

The filter auto clean function takes around 10 minutes.

Execution of the cleaning function, always during the scheduled time slot of 0 to 3 hours, will start as soon as possible considering the following conditions:

- · during the first hour
- the cleaning function will only be performed during thermostat OFF intervals or when the unit is not operating;
- during the second hour same condition as during first hour or when cooling or heating demand is rather low;
- · during the third hour
 - the unit forces execution of the cleaning function, even when the unit is operating. After completion of the cleaning function, the unit will start normal operation again.

The unit will try to perform the cleaning function during the next scheduled time slot of 3 hours in case it was not executed.

If the unit, in case of VRV, could not perform the cleaning function after elapse of 2 consecutive scheduled time slots of 3 hours, error code AH09 displays on the remote controller. The error code remains displayed as long as the function is not completed, but the unit can operate normally at all times.

■ Filter Auto-Cleaning

The product has the following two operation modes, any one of which can be set for filter auto-cleaning.

Operation mode	Description	Clock setting	Availability for designating time to start filter auto- cleaning
Scheduled timer operation	Performs filter auto-cleaning during the designated period selected from eight periods. (Factory default setting (12:00a-3:00a))	0	0
Auto control operation	Performs filter auto-cleaning according to the control reference.	×	X or O

PREPARATION

- To designate a period for filter auto-cleaning, avoid selecting the periods of time when the product is in air conditioning operation as much as possible.
 - If the period for filter auto-cleaning overlaps with that for the air conditioning operation of the product, the product may stop air-conditioning forcibly and start filter auto-cleaning.
- If the message "Set clock from menu" appears, make clock settings again so that the filter auto-cleaning will be performed during the designated period.

NOTE

- * The product will be set to auto control operation mode unless clock settings are made again if the clock is reset for some reason (e.g., no power is supplied to the product for 48 hours or longer).
- The product may generate a little noise when the filter rotates or the dust is scraped with the brush.
- The fan rotates automatically during filter auto-cleaning.


■ Resetting Dust Collection Sign

Operation Method





Basic screen

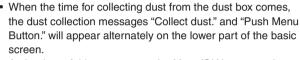



 At the time of this state, press the Menu/OK button on the basic screen.






- An illustration of vacuuming dust from the dust collection inlet will appear.
- After understanding the method of dust collection, press the Menu/OK button at the time of this state.







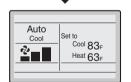

- After vacuuming the dust in the dust box, press ◀▶ buttons on the collection confirmation screen and select Yes.
- Press the Menu/OK button to reset the dust collection sign.
- The messages "Collect dust." and "Push Menu Button." appearing alternately on the basic screen will disappear.
 - * If the dust in the dust box is not vacuumed at all or properly, the dust collection sign will appear soon.





2.7 Maintenance Information

■ Displaying service contact and model information

Operation





• Display the main menu screen.



 Press ▼▲ buttons to select
 Maintenance Information on the main menu screen and press Menu/OK button.



2



- The phone number for the contact is displayed at the top of the screen.
 (If it has not yet been entered, it will not be displayed.)
- The model information of the indoor and outdoor units for your product will be displayed on the bottom of the screen. (For some models the product code may be displayed.)
 - *The model name will not be displayed if the indoor unit PCB has been replaced.
 - *Error code history may also be displayed. If the operation lamp is not flashing, the unit is working properly.



The error code history is no longer displayed if you press **On/Off** button for more than 4 seconds.

2.8 Configuration

■ Draft Prevention

Operation





- Display the main menu screen.
- Press ▼▲ buttons to select Configuration and press Menu/OK button.





 Press ▼▲ buttons to select **Draft Prevention and press** Menu/OK button.





 Press ▼▲ buttons to select Enable or Disable.



• The confirmation screen will appear when Menu/OK button is pressed.






- Press ◀▶ buttons to select Yes .
- Press Menu/OK button to confirm the settings and to return to the basic screen.



■ Contrast Adjustment

Operation



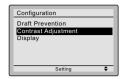


- Navigate to the configuration screen.
- Press ▼▲ buttons to select
 Contrast Adjustment on the configuration screen.
 Press Menu/OK button to display the contrast adjustment screen.



2



On the contrast adjustment screen press
 ▼▲ buttons until you reach the desired contrast.

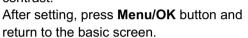



■ Display Display Mode

Operation





- Navigate to the configuration screen.
- Press ▼▲ buttons to select
 Display on the configuration screen.
 Press Menu/OK button to display the display screen.



2



Press ▼▲ buttons to select
 Display Mode on the display screen.
 Press Menu/OK button to display the display mode screen.



G




- Press ▼▲ buttons to select Standard
 Detailed or Simple on the display screen.
- Press Menu/OK button to confirm the settings and return to the basic screen.
 - *Refer to **Display Item** to change the selectable display item for Detailed and Simple display modes.



Display Item

Operation



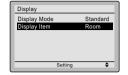


Navigate to the display screen.

 Press ▼▲ buttons to select Display Item on the display screen. Press Menu/OK button to display the display item screen.





Pressing ▼▲ buttons displays the following.

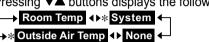



• Be sure to read the following notes regarding display of room temperature and outdoor air temperature.

Room Temp

...... The temperature at the remote controller.

> The temperature that is detected may be affected by the location of the remote controller.

Outside Air Temp

.......... The temperature at the outdoor unit. The temperature that is detected may be affected by factors such as the location of the unit (for example, if it is in direct sunlight) and unit operation during defrosting.

• After setting, press Menu/OK button to confirm settings and return to the basic screen.



2.9 Current Settings


■ Confirming the current settings

Operation





• Display the main menu screen.

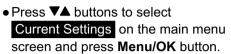



2



 A list showing the current setting status will appear.



Press **◄** buttons to go to the next item.

 Pressing Cancel button takes you back to the main menu screen.



Airflow Direction Off Timer
Ventilation Rate Display Mode
Ventilation Mode Display Item
Schedule Filter Auto Clean

*Display items may differ depending on the model. Only the items that can be set are displayed.

2.10 Clock & Calendar

■ Date & Time

Operation

1



- Display the main menu screen.
- Press ▼▲ buttons to select
 Clock & Calendar on the main menu

Press **Menu/OK** button to display the clock & calendar screen.



2



Press ▼▲ buttons to select Date & Time on the clock & calendar screen.
 Press Menu/OK button to display the date & time screen.



3



Select Year with ◀▶ buttons.
 Change the year with ▼▲ buttons.
 Holding down the button causes the number to change continuously.



4



Select Month with ◀▶ buttons.
 Change the month with ▼▲ buttons.
 Holding down the button causes the number to change continuously.



5



Select Day with ◀▶ buttons.
 Change the day with ▼▲ buttons.
 Holding down the button causes the number to change continuously.
 Days of the week change automatically.









Select Hour with ◀▶ buttons.
 Change the hour with ▼▲ buttons.
 Holding down the button causes the number to change continuously.



7




Select Minute with ◀▶ buttons.
 Change the minute with ▼▲ buttons.
 Holding down the button causes the number to change continuously.

• Press **Menu/OK** button.

The confirmation screen will appear.

Note:


The date can be set between January 1, 2015 and December 31, 2099.

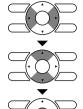






 Press ◀► button to select Yes on the confirmation screen.

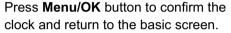

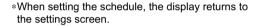





■ 12H/24H CLOCK

Operation





- Display the clock & calendar screen.
- ◆ Press ▼▲ buttons to select 12H/24H Clock on the clock & calendar screen.

The 12H/24H clock screen will appear when **Menu/OK** button is pressed.





5



By default, the time display is set to the 12H format.

- Press ▼▲ buttons to select 12H 24H on the 12H/24H clock screen.
- The confirmation screen will appear when **Menu/OK** button is pressed.









 Press ◀▶ buttons to select Yes on the confirmation screen.

Pressing **Menu/OK** button confirms the 12H or 24H and takes you back to the basic screen.





2.11 Daylight Saving Time

■ How to display Daylight Saving Time

Operation





- Display the main menu screen.
- Press ▼▲ buttons to select Daylight Saving Time on the main menu screen. Press Menu/OK button to display the daylight saving time screen.




■ Enabling or disabling Daylight Saving Time

Operation

1



- Display the daylight saving time screen.
- Press ▼▲ buttons to select Enable/Disable on the daylight saving time screen.

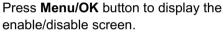



2




- ◆ Press ▼▲ buttons to select Enable or Disable on the enable/disable screen.
- Press Menu/OK button to display the setting confirmation screen.



3



 Press ◀► buttons to select Yes on the setting confirmation screen.

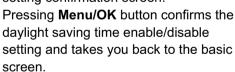





■ Setting the date

Operation





Display the daylight saving time screen.



Press ▼▲ buttons to select
 DST Dates on the daylight saving time screen. Press Menu/OK button to display the duration setting screen.



2



 Press ▼▲ buttons to select the start month and the end month.



Press ◀▶ buttons to select a week.
 Press ▼▲ buttons to select the start week and the end week.





 After setting the Start and End dates, press Menu/OK button to display the setting confirmation screen.







 Press ◀► buttons to select Yes on the setting confirmation screen.



Pressing **Menu/OK** button confirms the Daylight Saving Time settings and takes you back to the basic screen.



When Daylight Saving Time is enabled


When the time in the remote controller reaches 2:00 a.m. on the specified start date, the clock is automatically set forward by one hour. When the time in the remote controller reaches 2:00 a.m. on the end date, the clock is automatically set back by one hour.

2.12 Language


■ Selectable Languages

Operation



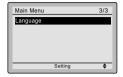

• Display the main menu screen.

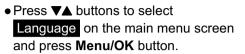



2



Press ▼▲ buttons to select the preferred of language on the language screen.
 English/Français/Español are available.




 Press Menu/OK button to confirm the settings and return to the basic screen.



2.13 Reset Filter Indicator

Operation

1

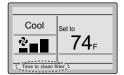

 When it is time to clean or replace the filter, one of the following messages will be displayed on the bottom of the basic screen.

Time to clean filter

Time to clean filter & element

Time to clean element

*This is not displayed when Simple display is set.

 Wash, clean, or replace the filter or element.

For details, refer to the operation manual supplied with the indoor unit.

2

- Reset the filter indicator when the filter or element is cleaned or replaced.
- Press Menu/OK button.
 The main menu screen will be displayed.




3



 Press ▼▲ buttons to select
 Reset Filter Indicator on the main menu screen and press Menu/OK button.



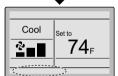


 The displayed message "Time to clean filter" is no longer displayed on the basic screen when the filter sign is reset.

Part 3 Service Settings

1.	Serv	ice Settings Menu List	44
2.	Deta	ils for Each Menu Item	45
		Test Operation	
	2.2	Maintenance Contact	46
	2.3	Field Settings	47
	2.4	Energy Saving Options	50
	2.5	Prohibit Function	54
	2.6	Min Setpoints Differential	56
	2.7	Group Address	57
	2.8	Indoor Unit AIRNET Address	61
	2.9	Outdoor Unit AIRNET Address	62
	2.10	Error History	63
	2.11	Indoor Unit Status	64
	2.12	Outdoor Unit Status	65
	2.13	Forced Fan ON	65
	2.14	Switch Main Sub Controller	66
	2.15	Filter Indicator	66
	2.16	Test Filter Auto Clean	67
	2.17	Brush / Filter Ind	67
	2.18	Disable Filter Auto Clean	68

1. Service Settings Menu List

The remote controller allows you to change the settings for individual functions of a whole system or individual indoor/outdoor units. It can also provide various display functions. Follow the steps below to use the setting and display functions.

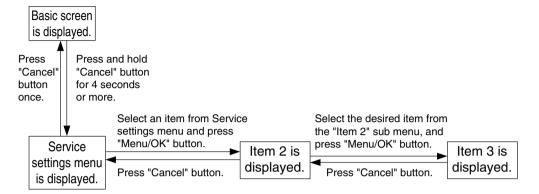

■ Service Settings Menu List

Service settings menu	Item 2	Item 3
2.1 Test Operation		
2.2 Maintenance Contact	None	
	Maintenance Contact	—, 0 to 9 (in order)
2.3 Field Settings	Indoor Unit No., Mode No., First Code No., Second Code No.	
2.4 Energy Saving Options	Setpoint Range Limitation	Temperature
	Setback Configuration	Recovery Differential
	Auto-setback by Sensor	Enable/Disable, Settings
	Auto-off by Sensor	Enable/Disable, Auto-off in (hours)
2.5 Prohibit Function	Prohibit Buttons	Up/Dwn, Left, Right, On/Off, Mode, Fan Speed
	Prohibit Mode	Fan, Cool, Heat, Auto, Dry, Vent Clean
2.6 Min Setpoints Differential	Temperature	
2.7 Group Address	Group Address (Group)	
	Group Address (Unit)	
2.8 Indoor unit AirNet Address		
2.9 Outdoor unit AirNet Address	Unit No., Address Set	
2.10 Error History	RC Error History	Unit No., Error, Date, Time
	Indoor unit Error History	Unit No., Error, Date, Time
2.11 Indoor Unit Status	Unit No., Th temperature	
2.12 Outdoor Unit Status	Unit No., Th temperature	
2.13 Forced Fan ON	Unit No.	
2.14 Switch Main Sub Controller		
2.15 Filter Indicator		
2.16 Test Filter Auto Clean		
2.17 Brush/Filter Ind.		
2.18 Disable Filter Auto Clean		


2. Details for Each Menu Item

2.1 Test Operation


The following procedure allows you to start a test operation. "Test operation" will be displayed at the bottom of the screen when the test operation function is ON. Test operation starts when the "On/Off" button is pressed within 10 seconds after the test operation is turned ON.

An error code will be displayed at the bottom of the screen if an error has occurred during the test operation. After the test operation is complete, be sure to turn the test operation function back OFF.

<Turning the test operation function ON>

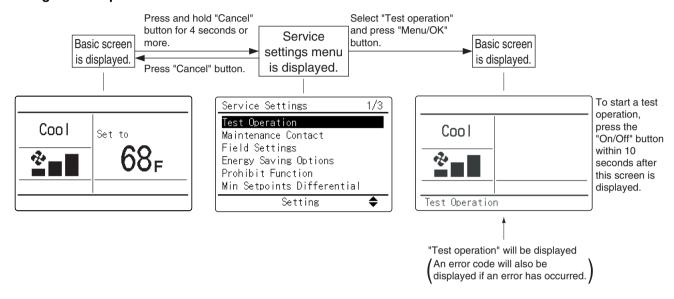


<Turning the test operation function OFF>

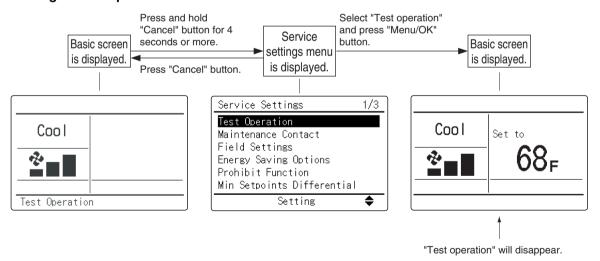

* The test operation function will turn OFF automatically 30 minutes after it is turned ON.

2.2 Maintenance Contact

The contact phone numbers to call when service is necessary can be registered. (Accessing the Main Menu allows you to view the registered contact information.)

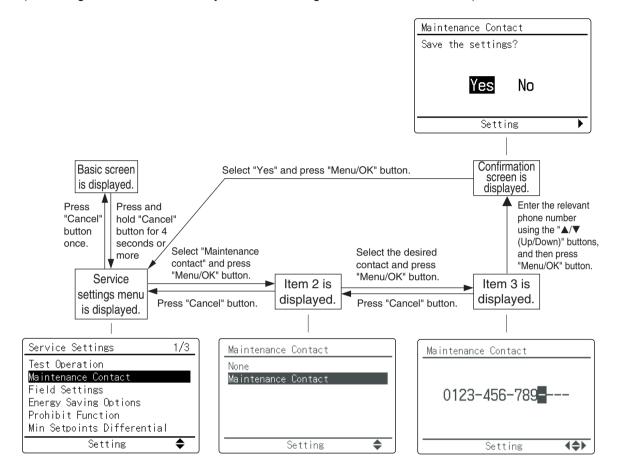


Service settings menu	Item 2	Item 3
Maintenance Contact	None	
	Maintenance Contact	—, 0 to 9 (in order)

2.3 Field Settings


The menu item "Field Settings" is especially convenient when specifying multiple settings for a given mode, or when checking the current settings.

<Individual setting for indoor units>

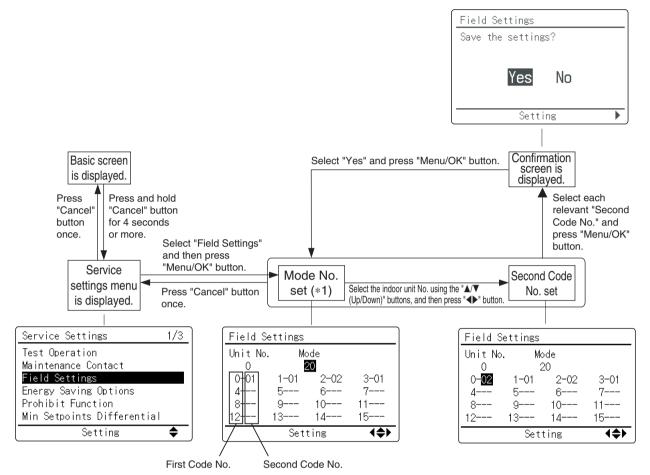


*1: Selecting any Mode number from 20 to 29 allows you to set field settings per indoor unit.

<Group batch setting>

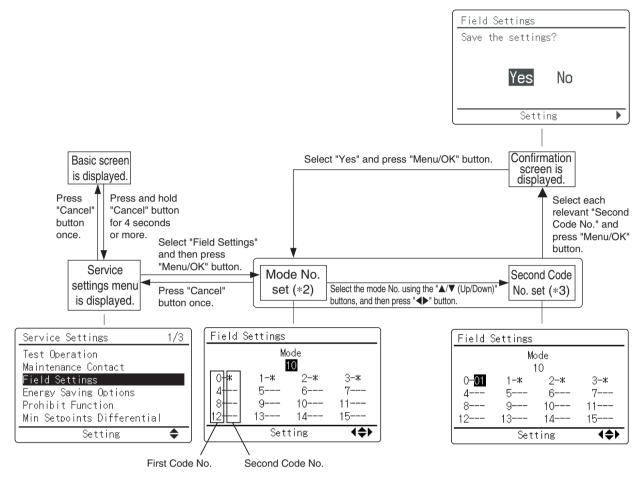

- *2: When any Mode number from 10 to 19 is selected, all the Second Code No. that can be set will be displayed with an asterisk (*). Replace each * mark with the desired number.
- *3: When "-" is displayed for a particular Second Code No., that number is not available for setting.

<Remote controller setting>

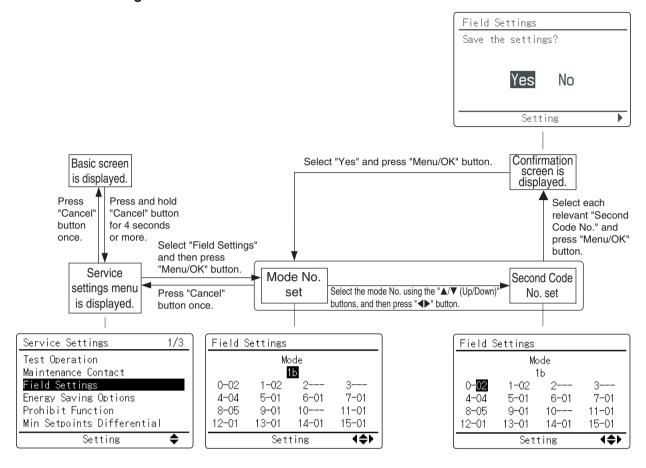


2.4 Energy Saving Options


The remote controller can limit the settable temperature range and set the temperature at which setback function stops operating. The set temperature range may be disabled when centralized control equipment is connected.

Service settings menu	Item 2	Item 3
Energy Saving Options	Setpoint Range Limitation	Temperature
	Setback Configuration	Recovery Differential
	Auto-setback by Sensor	Enable/Disable, Settings
	Auto-off by Sensor	Enable/Disable, Auto-off in (hours)


2.4.1 Setpoint Range Limitation

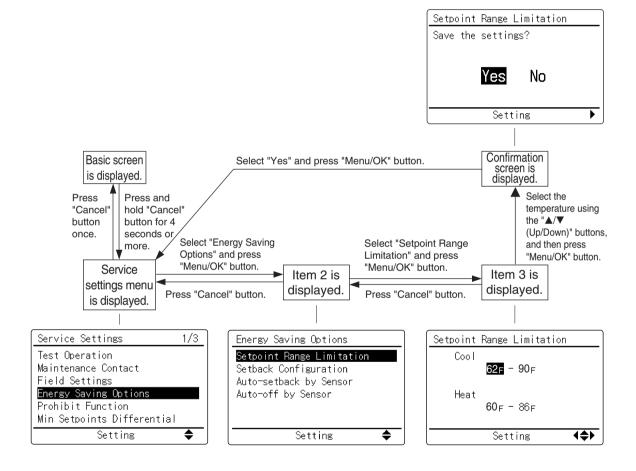


2.4.2 Setback Configuration

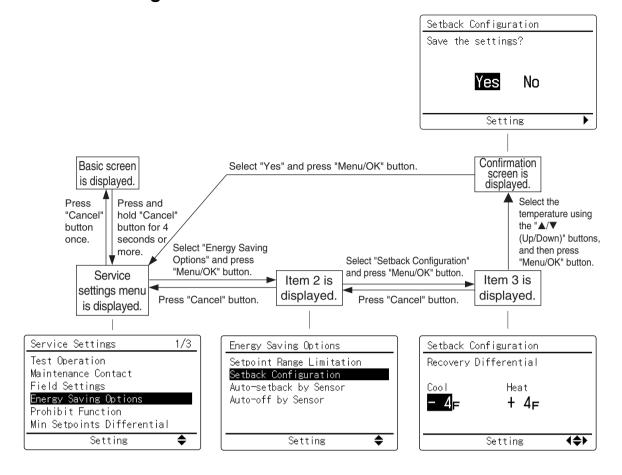

2.4.3 Auto-setback by Sensor

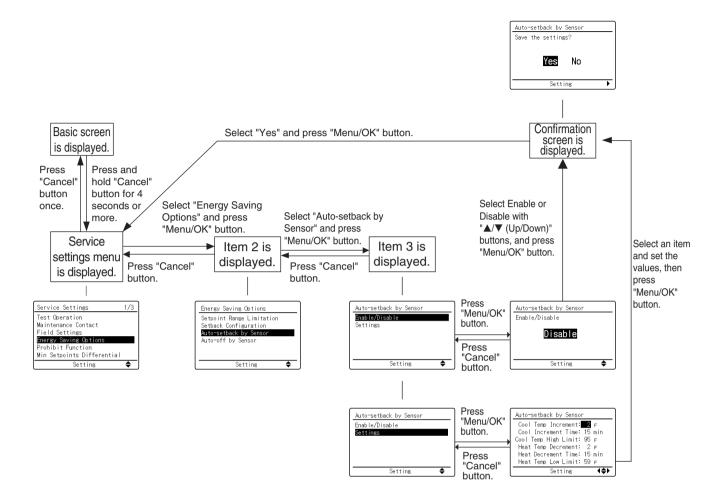

2.4.4 Auto-off by Sensor

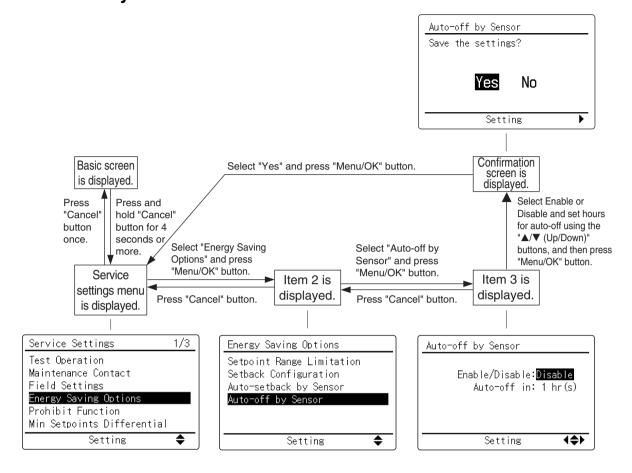


Details for Each Menu Item

2.5 Prohibit Function

This function prevents the user from operating buttons. Buttons can be enabled or disabled individually.

2.5.1 Setting method

<Prohibit buttons>

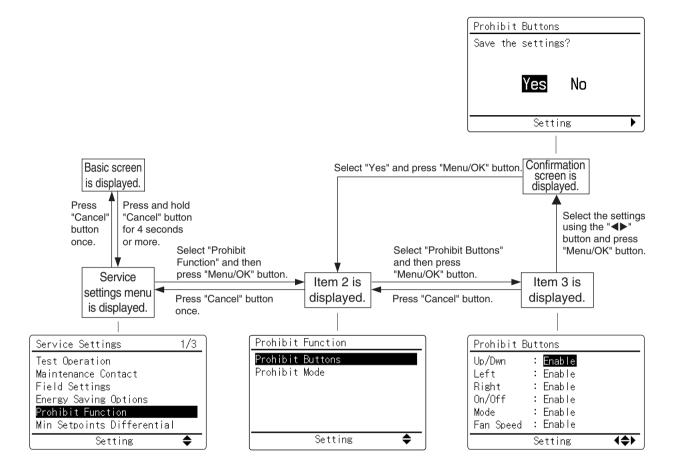


1 Enable settings


- Hold down the "▶" button while the basic screen is displayed.
- 2. While still holding down the "▶" button, press the "Mode", "Fan Speed", and "Cancel" buttons at the same time.

2 Disable settings

- Hold down the "▶" button while the basic screen is displayed.
- 2. While still holding down the "▶" button, press the "Mode", "Fan Speed", and "Cancel" buttons at the same time.

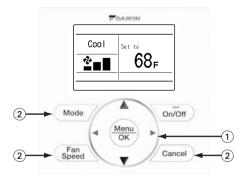


<Prohibit mode>

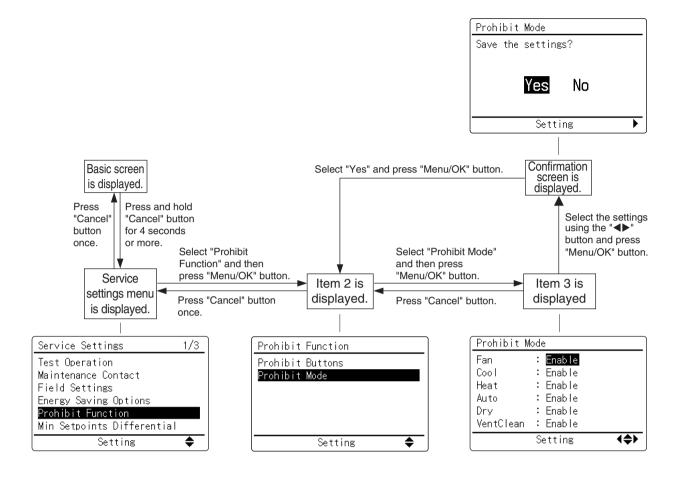

Service settings menu	Item 2	Item 3
Prohibit Function	Prohibit Buttons	Up/Dwn, Left, Right, On/Off, Mode, Fan Speed
	Prohibit Mode	Fan, Cool, Heat, Auto, Dry, Vent Clean

2.6 Min Setpoints Differential

This function defines the minimum difference between the set heating and cooling temperatures. This function is disabled when a centralized remote controller is connected.

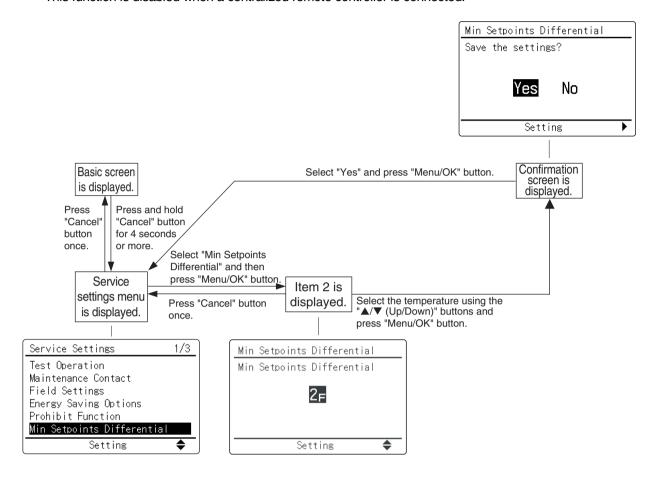


Service settings menu	Item 2
Min Setpoints Differential	Temperature

2.7 Group Address


2.7.1 Group Address (Group)

< When initializing Group Address>

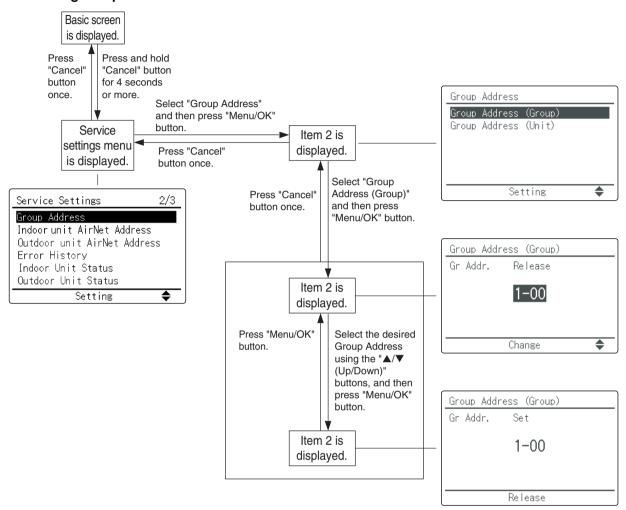


Service settings menu	Item 2	■ Description
Group Address	Group Address (Group)	This menu is used to make group address setting for centralized control equipment.
	Group Address (Unit)	It is also used to make group address setting via the indoor unit.

< When changing or canceling Group Address>

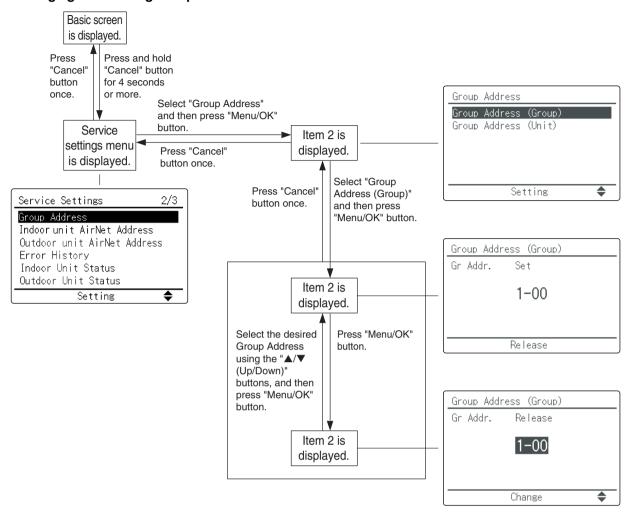


2.7.2 Group Address (Unit)

< When initializing Group Address>

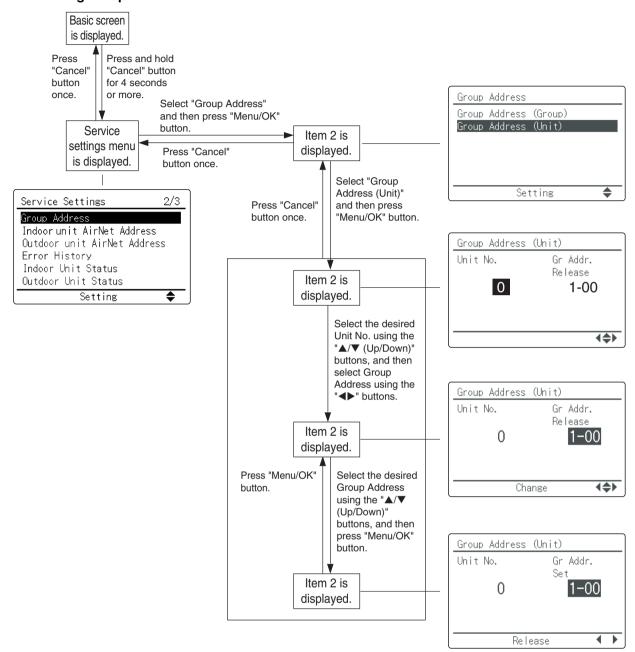


< When changing or canceling Group Address>

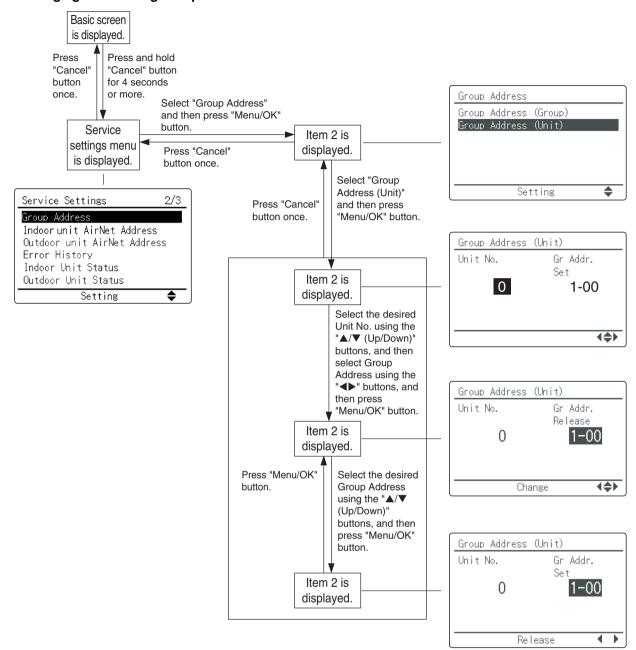


2.8 Indoor Unit AIRNET Address

< When initializing AIRNET Address>

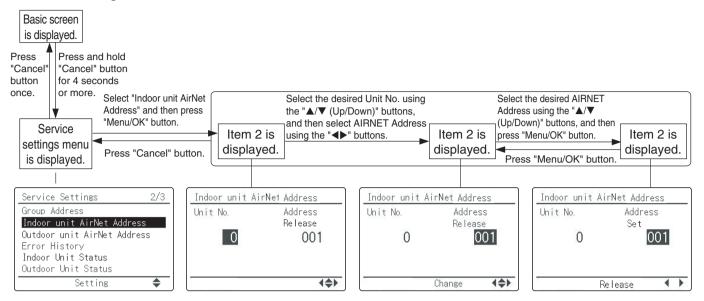


<When changing or canceling AIRNET Address>

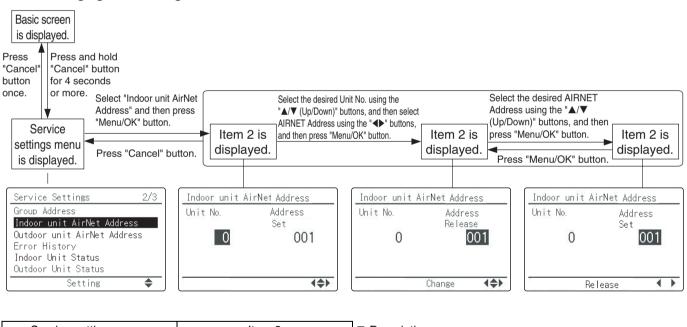


Service settings menu Item 2 ■ Description
Indoor unit AirNet Address Indoor unit AirNet Address Indoor unit AirNet Address


2.9 Outdoor Unit AIRNET Address

< When initializing AIRNET Address>

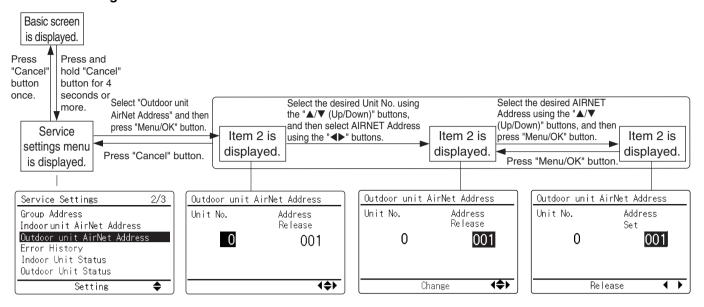


<When changing or canceling AIRNET Address>

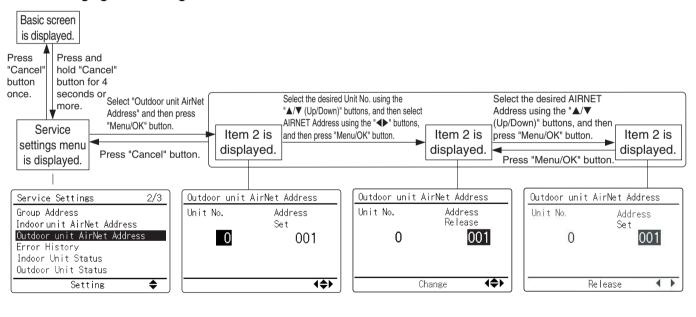

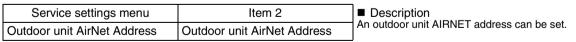


2.10 Error History

<How to check the remote controller history>

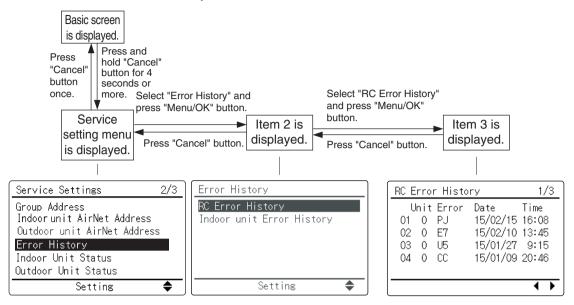

<How to check the indoor unit history>

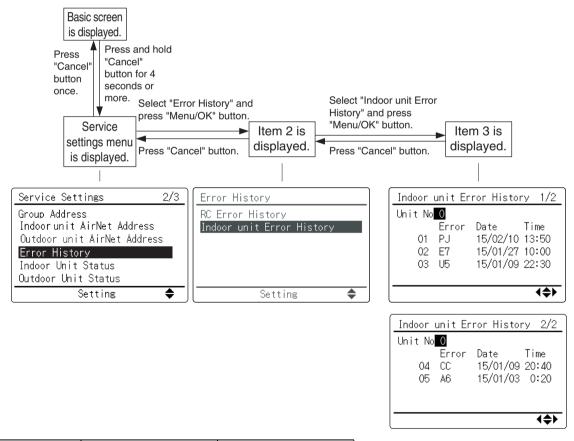

Service settings menu	Item 2	Item 3
Error History	RC Error History	Unit, Error, Date, Time
	Indoor unit Error History	Unit No., Error, Date, Time

■ Description


<RC Error History>

Up to 10 errors received by the remote controller can be displayed.

<Indoor unit Error History>

Up to 5 errors from the indoor unit error history can be displayed.

2.11 Indoor Unit Status

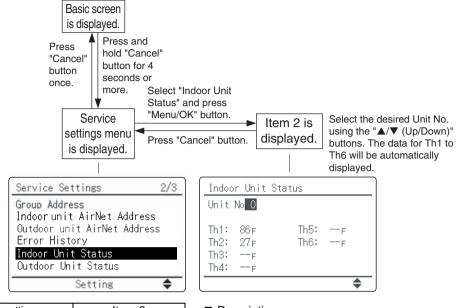


Service settings menu	
Indoor Unit Status	Unit No., Th1, Th2, Th3, Th4, Th5, Th6

■ Description

Th1:	Suction air thermistor	
Th2:	Heat exchanger liquid pipe thermistor	
Th3:	Heat exchanger gas pipe thermistor	
Th4:	Discharge air thermistor	
Th5:	*	
Th6:	*	


^{*} Thermistor name varies depending on the connected indoor unit.

2.12 Outdoor Unit Status

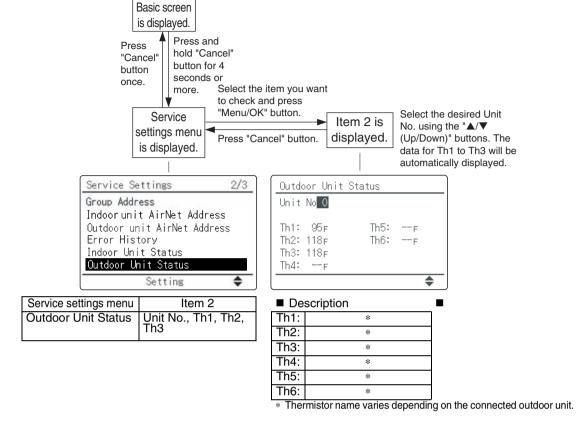


2.13 Forced Fan ON

Fans on individual indoor units can be forced ON.

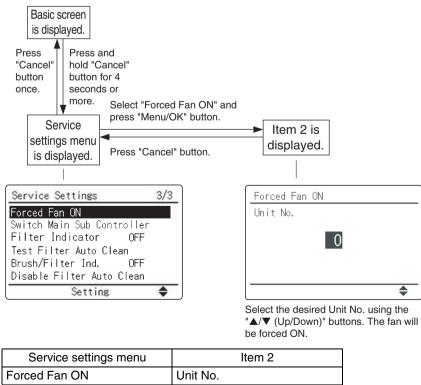


2.14 Switch Main Sub Controller

The designation of the main and sub remote controllers can be swapped. Note that this change requires turning the power OFF and then ON again.

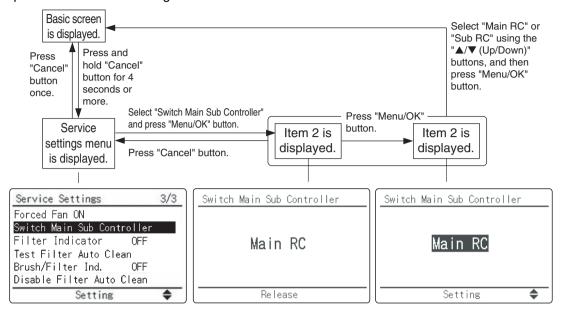


Service settings menu	Item 2
Switch Main Sub Controller	Main RC Sub RC

2.15 Filter Indicator

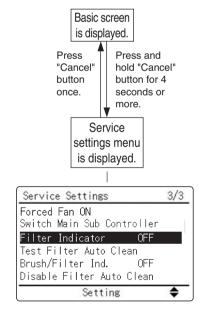


Service settings menu	Item 2
Filter Indicator	Sign ON Sign OFF

2.16 Test Filter Auto Clean

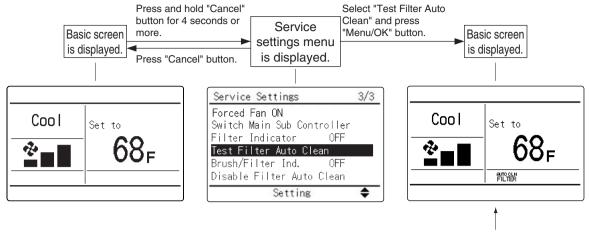


"AUTO CLN FILTER" will be displayed.

2.17 Brush / Filter Ind.

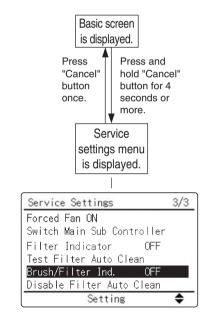

Service settings menu	Item 2
Brush/Filter Ind.	Sign ON Sign OFF

2.18 Disable Filter Auto Clean

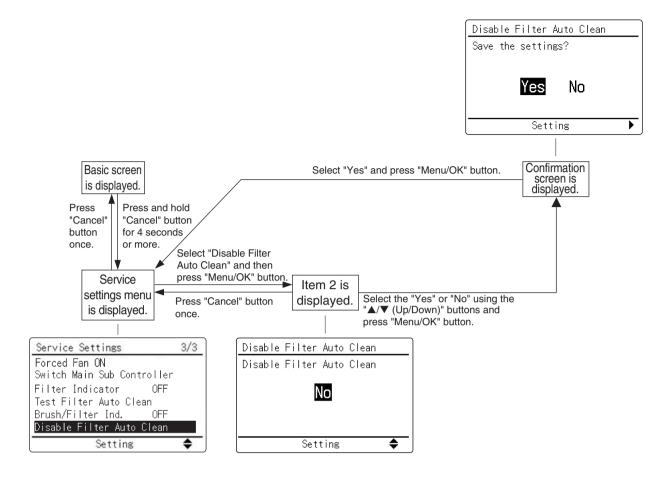

Service settings menu	Item 2
Disable Filter Auto Clean	Yes No


Part 4 Maintenance Menu

1.	Mair	laintenance Menu List70		
2.	Details for Each Menu Item7			
	2.1	Model Name	72	
	2.2	Operation Hours	73	
	2.3	Indoor Unit Status	74	
	2.4	Outdoor Unit Status	75	
	2.5	Forced Defrost	76	
		Error Display		
		Swap Unit No		
	2.8	Addressed Sensor Value	79	

SiUS721424EB Maintenance Menu List

1. Maintenance Menu List

Operating the remote controller allows service data to be acquired and various services to be set.

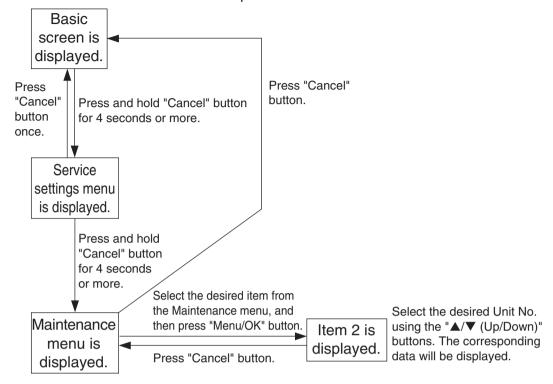

Maintenance Menu	Item 2	Remarks
2.1 Model Name	1. Unit No.	Select the Unit No. you want to check.
	2. Indoor unit	
	3. Outdoor unit	
2.2 Operation Hours	1. Unit No.	Select the Unit No. you want to check.
	2. Indoor unit operating time	All of these are displayed in hours.
	3. Indoor fan operation	
	4. Indoor unit energized time	
	5. Outdoor unit operating time	
	6. Outdoor unit fan 1 operation	
	7. Outdoor unit fan 2 operation	
	8. Outdoor comp. 1 operation	
	9. Outdoor comp. 2 operation	
2.3 Indoor Unit Status	1. Unit No.	Select the Unit No. you want to check.
	2. FAN	Fan tap
	3. FLAP	Swing, fixed
	4. Speed	Fan speed (rpm)
	5. EV	Degree that electronic expansion valve is open (pulse)
	6. MP	Drain pump ON/OFF
	7. EH	Electric heater ON/OFF
	8. Hu	Humidifier ON/OFF
	9. TBF	Anti-freezing control ON/OFF


Maintenance Menu List SiUS721424EB

Maintenance Menu	Item 2	Remarks
2.3 Indoor Unit Status	10.FLOAT	
	11.T1/T2	
	12.Unit No.	Select the Unit No. you want to check.
	13.Th1	Suction air thermistor
	14.Th2	Heat exchanger liquid pipe thermistor
	15.Th3	Heat exchanger gas pipe thermistor
	16.Th4	Discharge air thermistor
	17.Th5	*
	18.Th6	*
2.4 Outdoor Unit Status	1. Unit No.	Select the Unit No. you want to check.
	2. FAN step	Fan tap
	3. COMP	Compressor power supply frequency (Hz)
	4. EV1	Degree that electronic expansion valve is open (pulse)
	5. SV1	Solenoid valve ON/OFF
	6. Th1	*
	7. Th2	*
	8. Th3	*
	9. Th4	*
	10.Th5	*
	11.Th6	*
2.5 Forced Defrost	1. Forced defrost ON	Enables the forced defrost operation.
	2. Forced defrost OFF	Disables the forced defrost operation.
2.6 Error Display	1. Display Error ON	Displays the error on the screen.
	2. Display Error OFF	Displays neither errors nor warnings.
	3. Display Warning ON	Displays a warning on the screen if an error occurs.
	4. Display Warning OFF	No warning is displayed.
2.7 Swap Unit No.	1. Current Unit No.	A unit No. can be transferred to another.
	2. Transfer Unit No.	
2.8 Addressed Sensor	O Unit No.: 0 - 15	Select the Unit No. you want to check.
Value	O Code 00: 01: 02: 03: 04: 05: 06: 07: 08: 09:	Remote controller thermistor (°F) Suction air thermistor (°F) Heat exchanger liquid pipe thermistor (°F) Heat exchanger gas pipe thermistor (°F) Indoor unit address No. Outdoor unit address No. Branch Selector unit address No. Zone control address No. Cooling/Heating batch address No. Demand/low-noise address No.
	O Data	The corresponding data will be displayed, based on the Unit No. and Code selected.

^{*}Thermistor name varies depending on the connected indoor or outdoor unit.


2. Details for Each Menu Item

2.1 Model Name

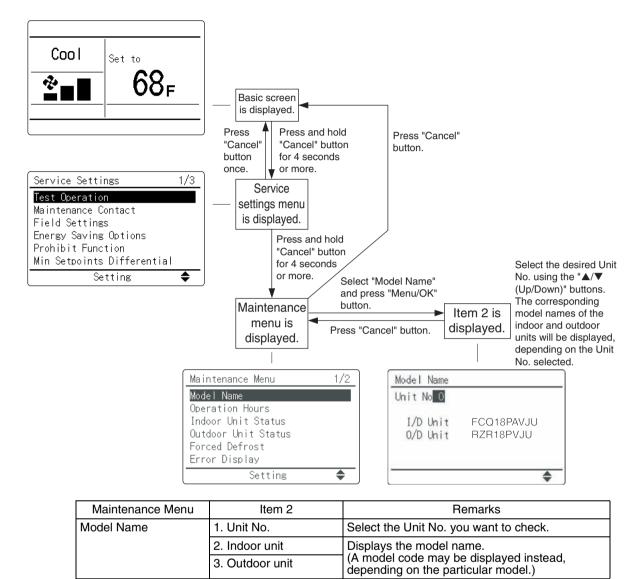


[★]When the PCB has been replaced for repair or other reasons, the model data will not be displayed.

2.2 Operation Hours

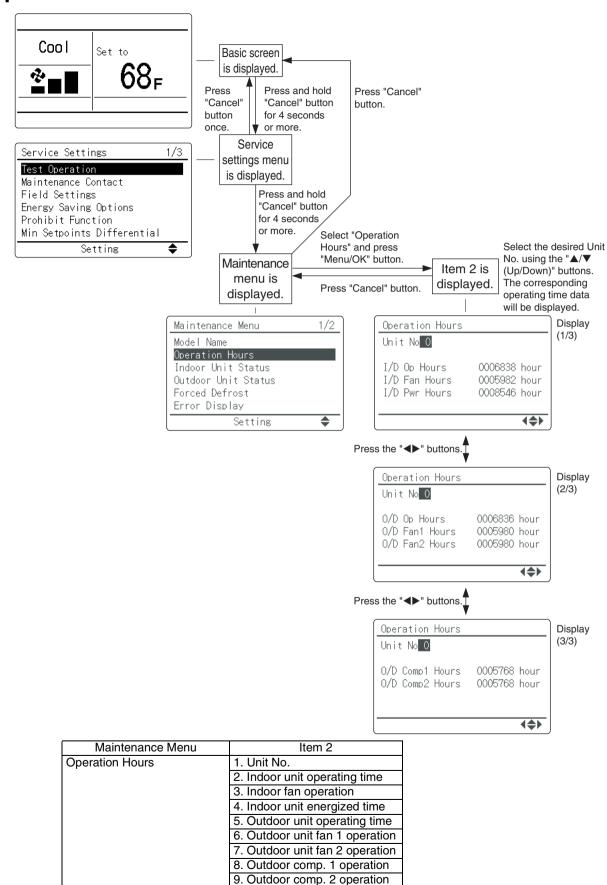


2.3 Indoor Unit Status

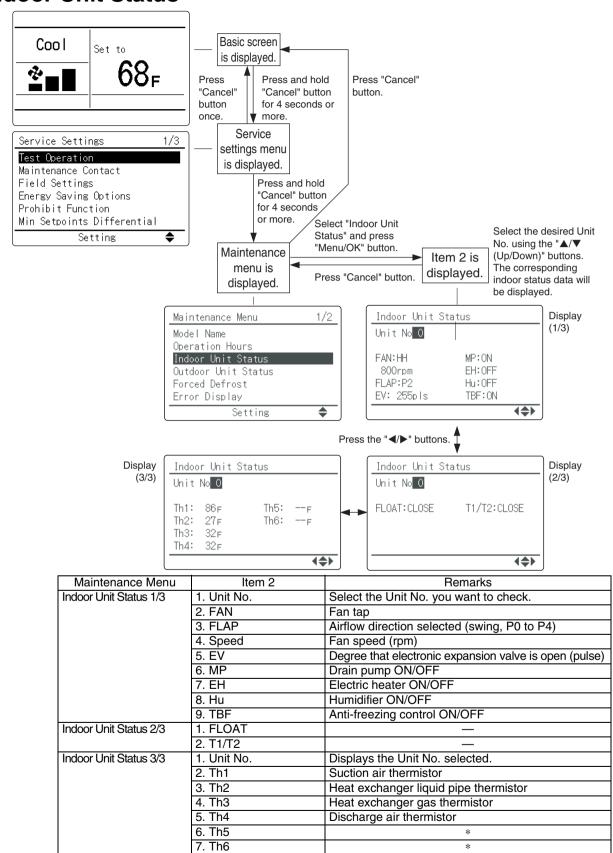

^{*}Thermistor name varies depending on the connected indoor unit.


2.4 Outdoor Unit Status

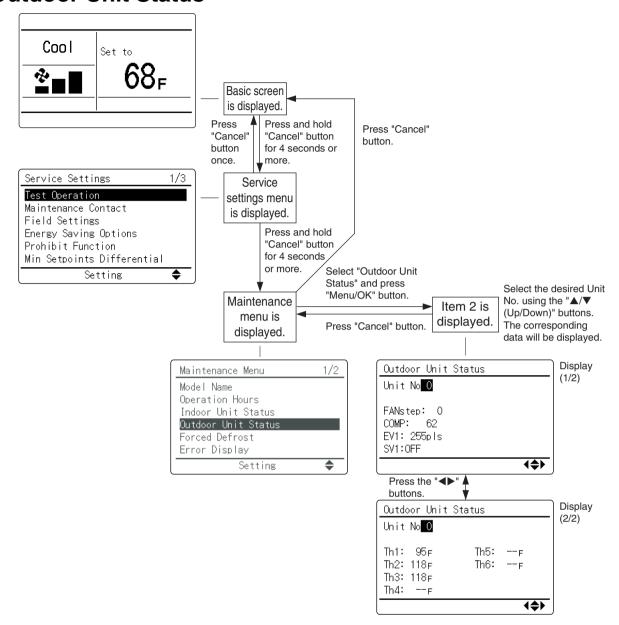

Maintenance Menu	Item 2	Remarks
Outdoor Unit Status	1. Unit No.	Check the Unit No. you want to check.
	2. FAN step	Fan tap
	3. COMP	The unit varies depending on the model connected to the system (e.g. Hz, rps).
	4. EV1	Degree that electronic expansion valve is open (pulse)
	5. SV1	Solenoid valve ON/OFF
	6. Th1	*
	7. Th2	*
	8. Th3	*
	9. Th4	*
	10.Th5	*
	11.Th6	*


^{*}Thermistor name varies depending on the connected outdoor unit.

2.5 Forced Defrost

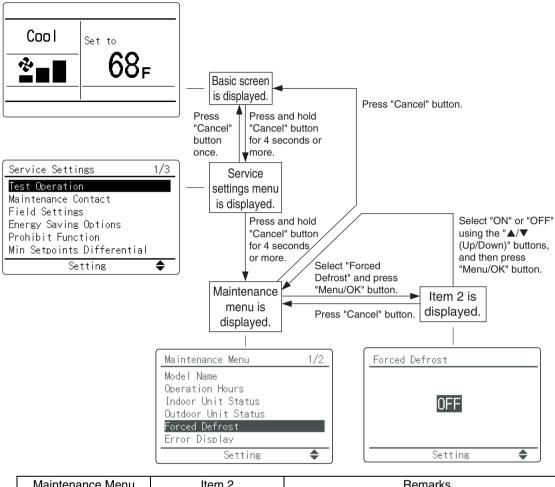


Maintenance Menu	Item 2	Remarks
Forced Defrost	Forced Defrost ON	Enables forced defrost operation.
	2. Forced Defrost OFF	Disables forced defrost operation.

2.6 Error Display

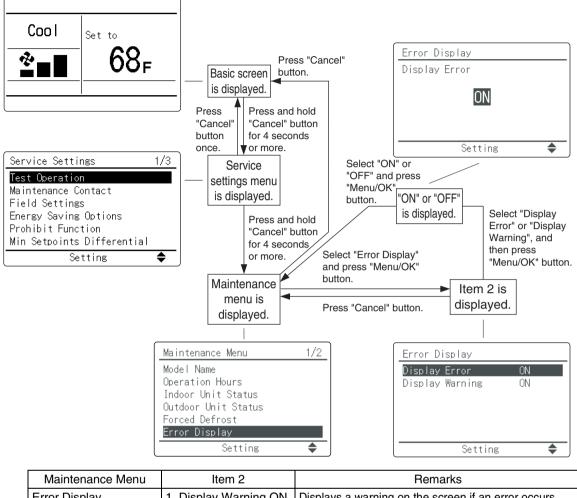


Maintenance Menu	Item 2	Remarks
Error Display	1. Display Warning ON	Displays a warning on the screen if an error occurs.
	2. Display Warning OFF	No warning is displayed.
	3. Display Error ON	Displays the error on the screen.
	4. Display Error OFF	Displays neither errors nor warnings.

2.7 Swap Unit No.

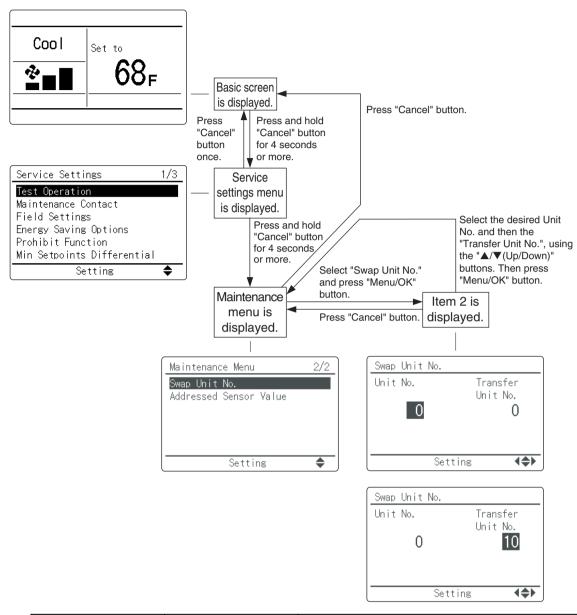

Maintenance Menu	Item 2	Remarks
Swap Unit No.	1. Current Unit No.	A Unit No. can be transferred to another.
	2. Transfer Unit No.	

2.8 Addressed Sensor Value

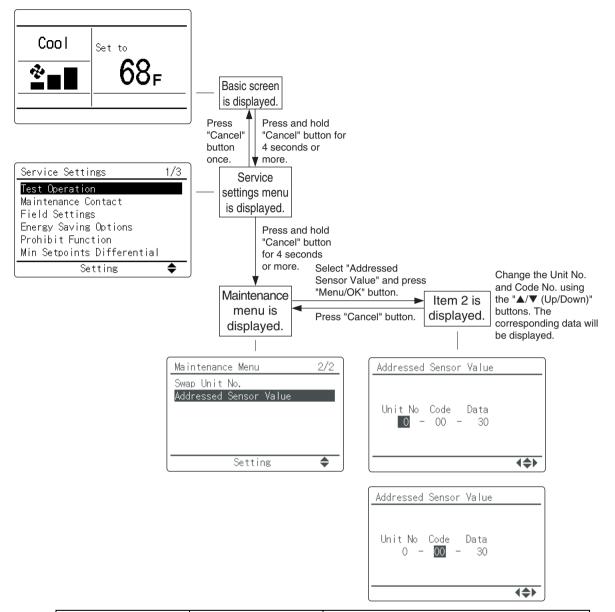

Maintenance Menu	Item 2		Remarks	
Addressed Sensor	O Unit No.:0) to 15	Select the Unit No. you want to check.	
Value	O Code			
	00	:	Remote controller thermistor (°F)	
	01	:	Suction air thermistor (°F)	
	02	:	Heat exchanger liquid pipe thermistor (°F)	
	03	:	Heat exchanger gas pipe thermistor (°F)	
	04	:	Indoor unit address No.	
	05	:	Outdoor unit address No.	
	06	:	Branch Selector unit address No.	
	07	:	Zone control address No.	
	08	:	Cooling/heating batch address No.	
	09	:	Demand/low-noise address No.	
	10 and over :		Differs depending on the connected indoor/	
			outdoor unit.	
	O Data		The corresponding data will be displayed, based on the Unit No. and Unit Code selected.	

Part 5 Troubleshooting


۱.	Checking Error	Codes	8.	1
----	----------------	-------	----	---

Troubleshooting 80

Checking Error Codes SiUS721424EB

1. Checking Error Codes

The following will be displayed on the screen when an error (or a warning) occurs during operation. Check the error code and take the corrective action specified for the particular model.

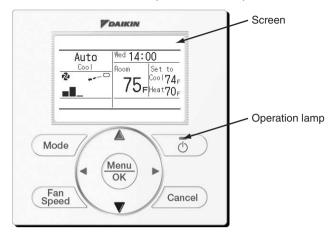

(1) Checking an error or warning

	Operation Status	Disp	blay
Abnormal shutdown	The system stops operating.	The operation lamp (green) starts to blink. The message "Error: Push Menu button" will appear and blink at the bottom of the screen.	Cool Set to 68F (Error: Push Menu button)
Warning	The system continues its operation.	The operation lamp (green) remains on. The message "Warning: Push Menu button" will appear and blink at the bottom of the screen.	Cool Set to 68 F (Warning: Push Menu button)

(2) Taking corrective action

· Press the "Menu/OK" button to check the error code.



· Take the corrective action specific to the model.

81 Troubleshooting

Revision History

Month / Year	Version	Revised contents
03 / 2015	SiUS721424E	First edition
05 / 2015	SiUS721424EA	Correction of description
11 / 2015	SiUS721424EB	Addition of information regarding Filter Auto-Cleaning, etc.



- Daikin products are manufactured for export to numerous countries throughout the world. Prior to purchase, please confirm with your local authorised importer, distributor and/or retailer whether this product conforms to the applicable standards, and is suitable for use, in the region where the product will be used. This statement does not purport to exclude, restrict or modify the application of any local legislation.
- Ask a qualified installer or contractor to install this product. Do not try to install the product yourself.
 Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Use only those parts and accessories supplied or specified by Daikin. Ask a qualified installer or contractor to install those parts and accessories. Use of unauthorised parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.
- Read the user's manual carefully before using this product. The user's manual provides important safety instructions and warnings. Be sure to follow these instructions and warnings.

If you have any enquiries, please contact your local importer, distributor and/or retailer.

Cautions			

- 1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
- If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided. If you need to install the outdoor unit close to the sea shore, contact your local distributor.

	Dealer		
		© All rights reserved	
		WAII TIGHTS TESETVEG	
\			/