


WIRED REMOTE CONTROLLER

OPERATION MANUAL

English

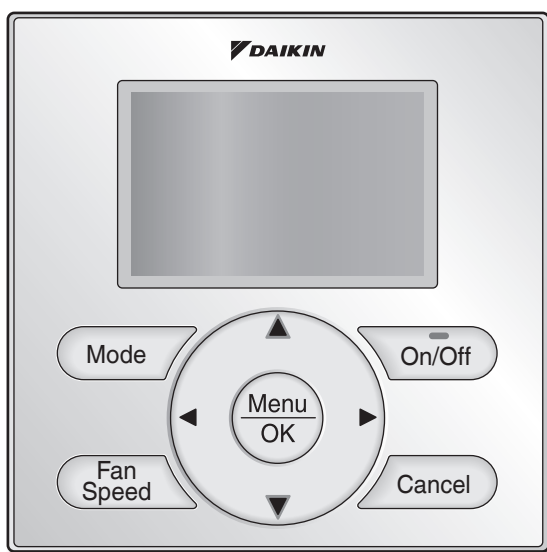

MODEL BRC1NRV72

- Thank you for purchasing the wired remote controller.
- This manual describes safety measures which should be considered during the use of the product.
Read this manual carefully and be sure you understand the information provided before using the product.

Keep this manual where it is readily accessible to all current and future operators.

- Nous vous remercions pour votre achat de la télécommande câblée.
- Ce manuel décrit les précautions de sécurité à respecter lors de l'utilisation du produit.
Lisez soigneusement ce manuel et veillez à bien comprendre les renseignements fournis avant d'utiliser le produit.

Conserver ce manuel dans un endroit accessible à tous les opérateurs actuels et futurs.

- Gracias por su compra del control remoto alámbrico.
- Este manual describe las consideraciones de seguridad que deben ser observadas durante el uso del producto.
Lea cuidadosamente este manual y asegúrese de comprender la información provista antes de intentar usar el producto.

Guarde este manual en un lugar fácilmente accesible para los usuarios actuales y futuros.

Contents

Notices	Safety Considerations Items to be Strictly Observed	2
	Button Locations and Descriptions	4
	Names and Functions	6

Basic Operation	Cool/Heat/Auto/Fan Operation	10
	Dehumidification Cooling Mode	13
	Dry Mode	15
	Setback	16
	Ventilation Mode	17
	Setting the Cool / Heat Changeover Master	18
	Key Lock	21

Quick Reference	Main Menu Items	22
------------------------	-----------------------	----

Menu Options	Navigating the Main Menu Screen	25
	CO2 Monitoring	26
	Humidity	27
	Airflow Direction	28
	Individual Airflow Direction	30
	Active Circulation	34
	Ventilation	35
	Schedule	37
	Override	42
	Dehumid Cool Level	44
	Optimum Start/Stop	45
	Maintenance Information	46
	Configuration	47
	Current Settings	51
	Clock & Calendar	51
	Daylight Saving Time	54
	Language	57

Maintenance	Reset Filter Indicator	57
	Maintaining the Unit and LCD Display	58

Reference Information	Error Code Display	59
	After-sale Service	60

Safety Considerations

The original instructions are written in English. All other languages are translation of the original instructions.

Read these **SAFETY CONSIDERATIONS** carefully before operating the remote controller.

Train the customer to operate and maintain the remote controller.

Inform customers that they should store this Operations Manual with the Installation Manual for future reference.

Meanings of **WARNING** and **CAUTION** Symbols:

 WARNING	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.
 NOTE	Indicates situations that may result in equipment or property-damage accidents only.

- The following pictograms are used in this manual.

	Never do.		Always follow the instructions given.
	Keep water and moisture away.		Keep wet hands away.


 WARNING	
	• Do not modify or repair the remote controller. Consult your Daikin dealer for any modification or for repairs.
	• Do not relocate or reinstall the remote controller by yourself. Improper installation may result in electric shocks or fire. Consult your Daikin dealer to relocate or for any reinstallation.
	• Do not use flammable materials (e.g., hairspray or insecticide) near the remote controller. Do not clean the product with organic solvents such as paint thinner. The use of organic solvents may cause cracking, damaging the product, causing electric shocks, or fire.
	• Consult the dealer if the remote controller was submerged under water due to a natural disaster, such as a flood or hurricane. Do not operate the remote controller at this time or a malfunction, electric shock, or fire can occur.

—Items to be Strictly Observed—

 CAUTION	
	• Do not allow children to play with the remote controller to avoid causing damage to the product.
	• Never disassemble the remote controller. Touching the interior parts may result in electric shocks or fire. Consult your Daikin dealer for internal inspections and adjustments.
	• Do not touch the remote controller buttons with wet fingers. Touching the buttons with wet fingers can cause an electric shock.
	• Do not wash the remote controller. Doing so may cause electric leakage and result in electric shocks or fire.
	• Never let the remote controller to get wet. Water can cause damage to the remote controller, and may cause an electric shock or fire.

 NOTE	
	• Never press the button of the remote controller with a hard and pointed object. The remote controller may be damaged.
	• Never pull or twist the electric wire of the remote controller. It may cause the unit to malfunction.
	• Do not wipe the remote controller with benzine, thinner, chemical dustcloth, etc. The remote controller may get discolored or the coating peeled off. If it is heavily dirty, soak a cloth in water-diluted neutral detergent, squeeze it well and wipe the remote controller clean. And wipe it with another dry cloth.

Button Locations and Descriptions

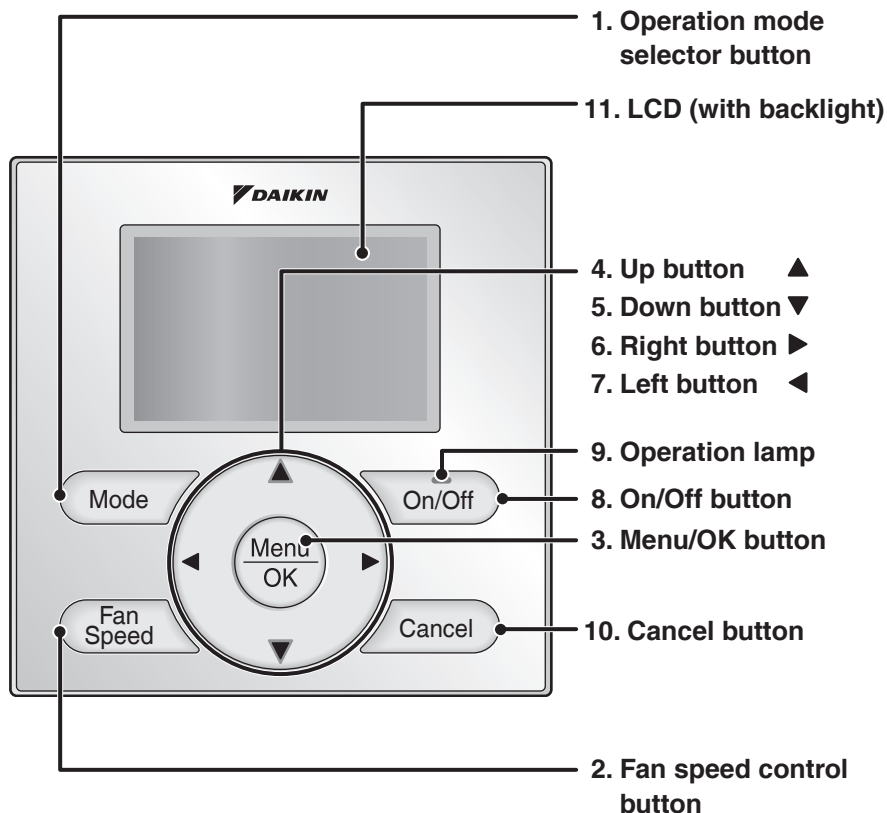

Functions other than basic operation items (i.e., On/Off, Operation Mode, Fan Speed, and Setpoint) are set from the menu screen.

NOTE

- Do not install the remote controller in places exposed to direct sunlight, the LCD will be damaged.
- Do not pull or twist the remote controller cord, the remote controller may be damaged.
- Do not use objects with sharp ends to press the buttons on the remote controller, damage may result.

1. Operation mode selector button

- Press this button to select the operation mode of your preference. **(See page 10.)**
* Available modes vary with the model of unit.

2. Fan speed control button

- Press this button to select the fan speed of your preference. **(See page 11.)**
* Available fan speeds vary with the model of unit.

3. Menu/OK button

- Used to enter the main menu.
(See page 22 for the menu items.)
- Used to enter the selected item.

4. Up button ▲

- Used to raise the setpoint.
- The item above the current selection will be highlighted.
(The highlighted items will be scrolled continuously when the button is continuously pressed.)
- Used to change the selected item.

5. Down button ▼

- Used to lower the setpoint.
- The item below the current selection will be highlighted.
(The highlighted items will be scrolled continuously when the button is continuously pressed.)
- Used to change the selected item.

6. Right button ►

- Used to highlight the next items on the right-hand side.
- Each screen is scrolled in the right-hand direction.

7. Left button ◀

- Used to highlight the next items on the left-hand side.
- Each screen is scrolled in the left-hand direction.

8. On/Off button

- Press this button and system will start.
- Press this button again to stop the system.

9. Operation lamp

- This lamp illuminates solid green during normal operation.
- This lamp flashes if an error occurs.

10. Cancel button

- Used to return to the previous screen.

11. LCD (with backlight)

- The backlight will be illuminated for approximately 30 seconds by pressing any button.
- If two remote controllers are used to control a single unit, only the controller accessed first will have backlight functionality.

Names and Functions

Liquid Crystal Display

- Three types of display mode (Standard, Detailed and Simple) are available.
- Standard display is set by default.
- Detailed and Simple displays can be selected in the main menu. (See page 49.)

Standard display

10. Changeover controlled by the master indoor unit

9. Under centralized control

1. Operation mode

2. Fan Speed

6. Ventilation

11. Setback

8. (⌚) Scheduled or Override


7. (🔒) Key Lock

3. Setpoint

4. Stand by for Defrost/ Hot start/Oil return

17. Lockout

5. Message

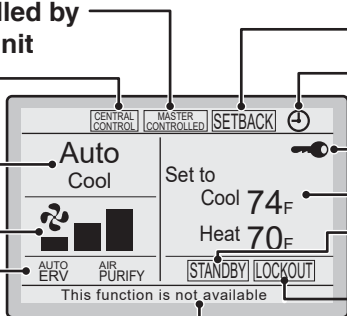

<Standard display example>

Detailed display


- The airflow direction, clock, and selectable item appear on Detailed display screen in addition to the items appearing on Standard display.

12. Airflow Direction

(Displayed only when the indoor unit is turned on.)

13. Current Day/Time (12/24 hour time display)

14. Selectable Display Item

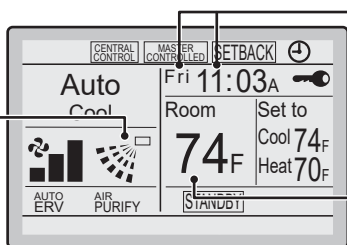

<Detailed display example 1>

No Fan speed display (with no fan speed control function)


No Airflow Direction display (with no airflow direction settings)

16. Optimum Start/Stop

No Clock display (when the clock has not been set yet)


15. (⊗) Unable to schedule

No Selectable Display Item (with no selectable display item selected)

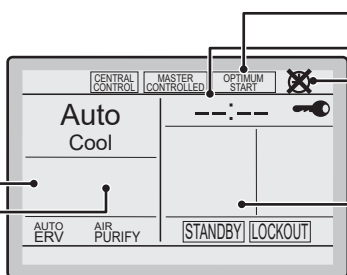

<Detailed display example 2>

Simple display

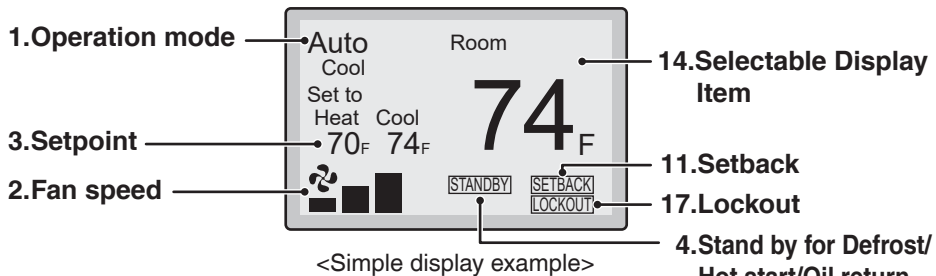

Note for all display modes

- Depending on the field settings, while the unit is stopped, OFF may be displayed instead of the operation mode and/or the setpoint may not be displayed.

Names and Functions

1. Operation mode

- Used to display the current operation mode: Cool, Heat, Vent, Fan, Dry, Dehumid Cool or Auto.
- In Auto mode, the actual operation mode (Cool or Heat) will be also displayed.
- Operation mode cannot be changed when OFF is displayed.
Operation mode can be changed after starting operation.

2. Fan Speed

- Used to display the fan speed that is set for the unit.
- The fan speed will not be displayed if the connected model does not have fan speed control functionality.

3. Setpoint

- Used to display the setpoint for the unit.
- Use the Celsius/Fahrenheit item in the main menu to select the temperature unit (Celsius or Fahrenheit).

4. Stand by for Defrost/Hot start/ Oil return “” (See page 12.)

If ventilation icon is displayed in this field:

- Indicates that an energy recovery ventilator (ERV) is connected.
For details, refer to the Operation Manual of the ERV.

5. Message

The following messages may be displayed.

“This function is not available”

- Displayed for a few seconds when an Operation button is pressed and the unit does not provide the corresponding function.
- In a remote control group, the message will not appear if at least one of the units provides the corresponding function.

“Error: Push Menu button”

“Warning: Push Menu button”

- Displayed if an error or warning is detected (see page 59).

“Time to clean filter”

“Time to clean element”

“Time to clean filter & element”

- Displayed as a reminder when it is time to clean the filter and/or element (see page 57).

6. Ventilation

- Displayed when an energy recovery ventilator is connected.
- **Ventilation Mode icon.** “ ERV BYPASS ”
These icons indicate the current ventilation mode (ERV only) (AUTO, ERV, BYPASS).
- **Air Purify ICON** “ ”
This icon indicates that the air purifying unit (Optional) is in operation.

7. Key Lock (See page 21.)

- Displayed when the key lock is set.

8. Scheduled or Override (See page 37, 42.)

- Displayed if the Schedule or Override is enabled.
- For Schedule, see page 37, for override, see page 42.
- When the Override is active, the icon will flash. “ ”

9. Under Centralized control “ ”

- Displayed if the system is under the management of a multi-zone controller (Optional) and the operation of the system through the remote controller is limited.

10. Changeover controlled by the master indoor unit “ ” (VRV only)

- Displayed when another indoor unit on the system has the authority to change the operation mode between cool and heat.

11. Setback “” (See page 16.)

- The setback icon flashes when the unit is turned on by the setback control.

12. Airflow Direction “”

- Displayed when the airflow direction and swing are set (see page 28).
- If the connected model does not include oscillating louvers this item will not be displayed.

13. Current Day/Time (12/24 hour time display)

- Displayed if the clock is set (see page 51).
- If the clock is not set, “-- : --” will be displayed.
- 12 hour time format is displayed by default.
- Select 12/24 hour time display option in the main menu under “Clock & Calendar”.

14. Selectable Display Item

- Room temperature is selected by default.
- For other choices see page 50.

15. Unable to schedule

- Displayed when the clock needs to be set.
- The schedule function will not work unless the clock is set.

16. Optimum Start/Stop

“” “” (See page 45.)

- Displayed when the Optimum start or Optimum stop is enabled.
- “” or “” is flashing when the Optimum start or Optimum stop is active.

17. Lockout “”

(Rooftop unit only)

- “” is flashing when the lockout is active.

Basic Operation

Cool/Heat/Auto/Fan Operation (SkyAir, VRV and Rooftop)

How to follow the operation manual

Operation procedure

Explains the sequence of operation for the remote controller. Operate the buttons according to the procedure.

Operation button display


Displays the location of buttons to be operated.

Operation screen display


Describes screens that will be displayed on the remote controller in operation.

Operation

1

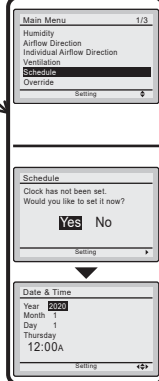

- Display the main menu screen. (See page 25.)
- Press ▼▲ buttons to select **Schedule**. Press **Menu/OK** button to display the schedule screen.
- Before setting the schedule, the clock must be set.
- If the clock has not been set, a screen like the one on the left will appear. Press ◀▶ buttons to select **Yes** and press **Menu/OK** button.
- The date & time screen will appear.
- Set the current year, month, day, and time. (See clock settings on page 51.)





Preparation

- For mechanical protection purposes, apply power to the outdoor units (rooftop units) at least six hours before starting the operation of the system.

Operation

1

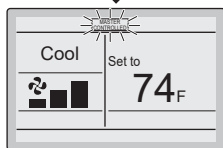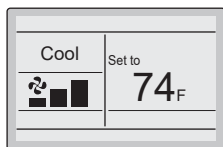

- Press **Mode** button several times until the desired mode Cool, Heat, Fan, or Auto mode is selected.




* Unavailable operation modes are not displayed.

Note

- Both heat and cool mode may not be selected if the unit is master controlled. See page 18 if MASTER CONTROLLED icon flashes.


2

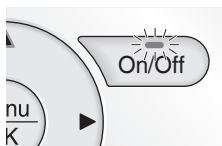

- Press **On/Off** button.
The Operation lamp will illuminate solid green and the system will start operating.



3

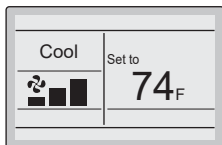


- The setpoint will increase by 1°F (or 1°C) when ▲ button is pressed and decrease by 1°F (or 1°C) when ▼ button is pressed.





* Setpoint is not available in fan or dry mode.

4

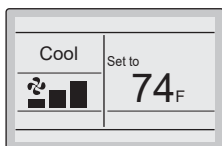

- To change the fan speed, press **Fan Speed** button and select the fan speed from;

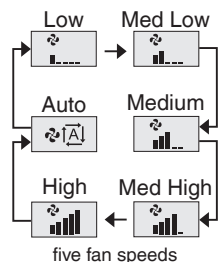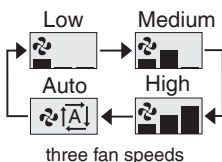

- Low/High/Auto for two-speed
- Low/Medium/High/Auto for three-speed
- Low/Med Low/Medium/Med High/High/Auto for five-speed depending on the model.

* Auto cannot be selected if the unit does not have Auto Fan speed function.

* The system may change the fan speed automatically for equipment protection purposes.

* The system may turn off the fan when the room temperature is satisfied.

* It is normal for a delay to occur when changing the fan speed.

* If the Auto is selected for the fan speed, the fan speed varies automatically based on the difference between setpoint and room temperature.


Basic Operation

5

- Adjust Airflow Direction from the main menu (see page 28).

* If the connected unit does not have oscillating louvers, this function will not be available.

6

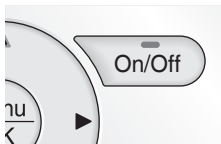

- When **On/Off** button is pressed again, the system will stop operating and the Operation lamp will turn off.



* When the system is stopped while in the heating mode, the fan will continue to operate for a few minutes to remove residual heat from the unit.

Note

- To prevent condensation water damage or system failure, do not shut off the power supply to the unit immediately after operation. Wait at least five minutes for the condensate pump to finish draining residual water from the unit.

Characteristics of Defrost, Hot start, Oil return Mode

The system automatically controls the following operating modes to prevent the reduction of heating capacity and space comfort.

Defrost operation

- The system will automatically go into defrost operation to prevent frost accumulation at the outdoor unit (rooftop unit) and subsequent loss of heating capacity.
- The fan will stop, and "STANDBY" will be displayed on the remote controller.
- The system will finish the Defrost operation and return to normal usually within six to eight minutes. It won't last for more than ten minutes.

Hot start

- When the system starts heating operation, the fan will operate with a delay in order to prevent a cold draft. (In that case, "STANDBY" will be displayed on the remote controller.)

Oil return

(Rooftop unit only)

- At the cooling mode, the space may be cooled more than necessary in order to prevent a shortage of oil in the compressor. (In that case, "STANDBY" will be displayed on the remote controller.)


Dehumidification Cooling Mode

Preparation

- For equipment protection purposes, apply power to the outdoor units (rooftop units) at least six hours before starting the operation of the system.
- The Dehumidification Cooling mode may not be selected if the remote controller is master controlled and the system is not already in the cooling mode of operation. (see page 20 for details)
- If the connected unit(s) has Dehumidification Cooling mode, Dehumidification Cooling mode is available instead of dry mode.
- If the connected unit(s) does not have Dehumidification Cooling mode, Dry mode is available instead of Dehumidification Cooling mode.

Operation

1

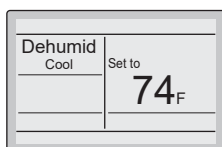

- Press **Mode** button several times until the Dehumid Cool mode is selected from;



- Cool / Heat / Fan / Auto / Dehumid Cool

* The Dehumid Cool mode may not be available depending on the model of unit.

2




- Press **On/Off** button.
The Operation lamp will illuminate solid green and the system will start operating.



* In Dehumidification Cooling mode, the system maintains automatic fan speed control. Therefore fan speed settings are not available while the unit is in the Dehumidification Cooling mode.

3

- Set the Setpoint with ▼▲ buttons.



4

- Adjust Airflow Direction from the main menu (see page 28).


* If the connected unit does not have oscillating louvers, this function will not be available.

Basic Operation

5



- When **On/Off** button is pressed again, the system will stop operating and the Operation lamp will turn off.



Note

- To prevent condensation water damage or system failure, do not shut off the power supply to the unit immediately after operation. Wait at least five minutes for the condensate pump to finish draining residual water from the unit.

Characteristic of Dehumidification Cooling mode

The Dehumidification Cooling mode dehumidifies the space and adjusts a room temperature to the Setpoint. Dehumidification Cooling level can be set to either of Low, Medium, High from Main menu.


Dry Mode

Preparation

- For equipment protection purposes, apply power to the outdoor units (rooftop units) at least six hours before starting the operation of the system.
- The dry mode may not be selected if the remote controller is master controlled and the system is not already in the cooling mode of operation. (see page 20 for details)
- If the connected unit has Dehumidification Cooling mode, Dry mode is not available.

Operation

1

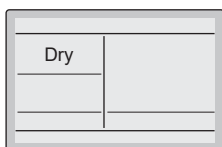

- Press **Mode** button several times until the Dry mode is selected from;
- Cool / Heat / Fan / Auto / Dry



* The Dry mode may not be available depending on the model of unit.

2



- Press **On/Off** button.
The Operation lamp will illuminate solid green and the system will start operating.



* In Dry mode, the system maintains automatic temperature and fan speed control. Therefore, temperature setpoint or fan speed settings are not available while the unit is in the Dry mode.


3

- Adjust Airflow Direction from the main menu (see page 28).

* If the connected unit does not have oscillating louvers, this function will not be available.

Basic Operation

4

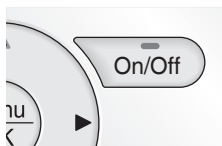

- When **On/Off** button is pressed again, the system will stop operating and the Operation lamp will turn off.




Note

- To prevent condensation water damage or system failure, do not shut off the power supply to the unit immediately after operation. Wait at least five minutes for the condensate pump to finish draining residual water from the unit.

Characteristic of Dry mode

The Dry mode dehumidifies the space at reduced cooling capacity to prevent the room temperature from dropping to an uncomfortable level.

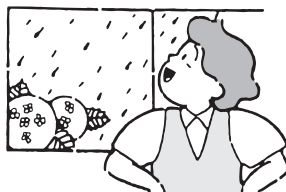

Setback


The Setback function can be used to maintain the space temperature in an assigned range for an unoccupied period.

Note


- When enabled, the Setback mode becomes active when the unit is turned off by either the user, a schedule event or an Override.
- This function is not available by default. It can be enabled by the system installer.

Operation

1

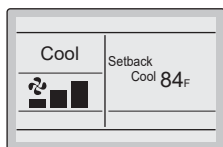

- The setback icon flashes when the unit is turned on by the setback control.

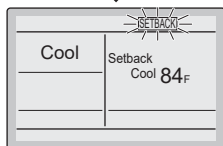


Ventilation Mode When the Indoor Unit (VRV/SkyAir) is Interlocked with Energy Recovery Ventilator

Preparation


- For equipment protection purposes, apply power to the outdoor units at least six hours before starting the operation of the system.

Operation

1

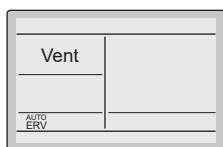

- When operating the energy recovery ventilator (ERV) between seasons without the indoor unit, set the control to ventilation mode.



2

- Changes to the ventilation mode are made from the main menu.

* Ventilation Mode: Auto, ERV, and Bypass

3

- Changes to the ventilation rate are made from the main menu.

* Ventilation Rate: Low or High

Basic Operation


4



- Press **On/Off** button.
The Operation lamp will illuminate solid green and the system will start operating.



5

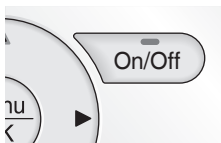

- When **On/Off** button is pressed again, the system will stop operating and the Operation lamp will turn off.





Setting the Cool / Heat Changeover Master

(VRV only)

Setting Changes See page 20 for an explanation of the cool/heat changeover master indoor unit.

1

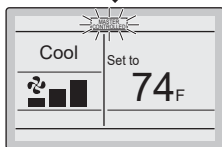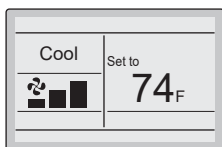

- Press **Mode** button on the remote controller of the changeover master indoor unit for at least four seconds while the backlight is illuminated.



- The “MASTER CONTROLLED” icon on each remote controller for the indoor units connected to the same outdoor unit or Branch Selector unit will start flashing.



* Fan mode setting changes are possible regardless of the cool/heat changeover master indoor unit.
* If the outdoor unit is configured as cool/heat changeover master, all remote controllers serving the associated indoor units will display its “MASTER CONTROLLED” icon.

- Set the cool/heat changeover master indoor unit as outlined below.

Selection Settings

The icon "MASTER CONTROLLED" will flash on all remote controllers when the power is turned ON for the first time.

2

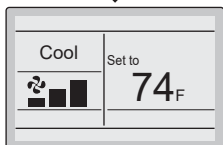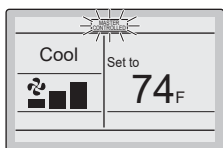


- Press **Mode** button on the remote controller of the indoor unit which is to serve as the cool/heat changeover master.



The remote controller for the changeover master indoor unit is established and the  icon is no longer displayed.

Other remote controllers in the system (indoor units served by the same outdoor unit or indoor units served by the same branch selector unit) will now display the  icon.

3

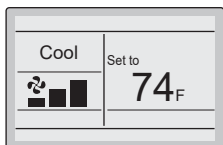

- Press **Mode** button on the remote controller of the indoor unit designated as the cool/heat changeover master (the remote controller not displaying the  icon) repeatedly until the desired mode is selected. The display will change to **Fan, Dry, Auto, Cool, Heat** each time the button is pressed.
- Simultaneously, the other indoor units on the system will follow suit and change modes to reflect the new mode selected at the changeover master remote controller.



Basic Operation

Cool / Heat Mode Selection Availability (VRV only)


- “Cool”, “Heat”, and “Auto” are all only available for selection on the cool/heat changeover master indoor unit. The following table indicates the available operating modes of the other indoor units on the system based upon the selected mode of the master indoor unit.

When the master indoor unit is set to	The other indoor units in the system can be set to			
	Cool	Dry / Dehumid Cool	Heat	Fan
Cool mode	✓	✓		✓
Dry/Dehumid Cool mode	✓	✓		✓
Heat mode			✓	✓
Fan mode				✓
Auto mode (Cooling operation)	✓	✓		✓
Auto mode (Heating operation)			✓	✓


Precautions for Selecting the Cool / Heat Changeover Master Indoor Unit (VRV only)

- The cool/heat changeover master must be set for a single indoor unit in the following applications

(2-Pipe Heat Pump System)

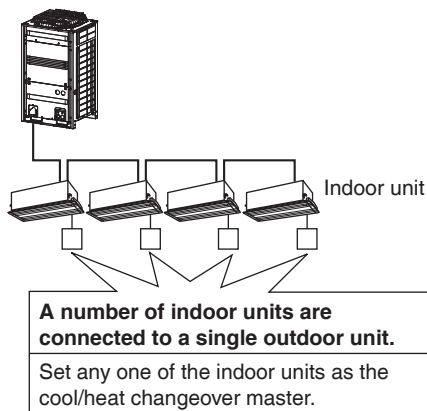


(3-Pipe Heat Recovery System)

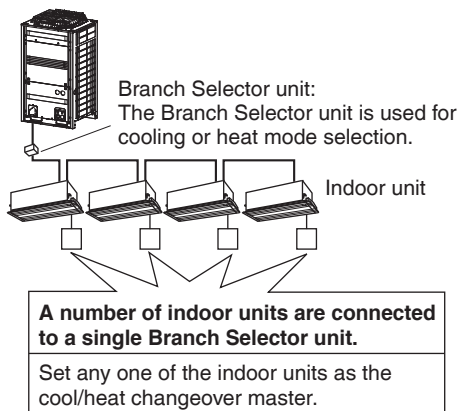

Key Lock

Operation Confirm and cancel Key Lock settings in the basic display screen.

1

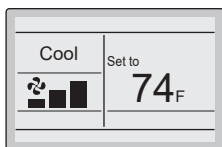


Basic screen

- Press **Menu/OK** button for at least four seconds while the backlight is illuminated.



2

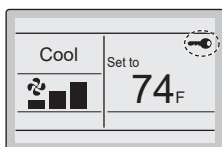

- “” is displayed.
All buttons are disabled when the keys are locked.
- To cancel the key lock mode, continue pressing **Menu/OK** button for at least four seconds while the backlight is illuminated.

Quick Reference

■ The main menu has the following items.

Menu item		Description	Reference page
CO2 Monitoring (Only available for Rooftop units)		Display CO2 history plot and current CO2. (If the unit has a CO2 sensor.) • This function is not available by default and available only for Rooftop units. It can be enabled by the system installer.	26
Humidity (Only available for Rooftop units)		Display the current room humidity and set the humidity setpoint.	27
Airflow Direction		Used to configure airflow direction settings. • The airflow direction louver is automatically operated up and down (left and right). • The fixed airflow directions are configurable for five positions. * Only for indoor unit that supports Airflow Direction setting.	28
Individual Airflow Direction (Depends on the model of unit)	Louver Setting	Set the airflow direction individually for each of the 4 louvers. • Maximum 16 units (unit 0 till 15).	30
	Louver Setting List	Setting table for louver.	31
	Reset All Louvers Position	Reset all louvers to factory default setting.	32
Active Circulation		• Used to set the “Enable” or “Disable” for the Active Circulation. When the fan speeds and Airflow Direction are auto mode, circulation mode is activated. • The Active Circulation can only be displayed if all connected units have Active Circulation.	34
Ventilation (Ventilation operation settings for energy recovery ventilator)	Ventilation Rate	Used to set “Low” or “High”	35
	Ventilation Mode	Used to set Auto, ERV, or Bypass.	36
Schedule	Daily Patterns	• Day settings are selected from four patterns, i.e., “7Days”, “Weekday/Sat/Sun”, “Weekday/Weekend”, and “Everyday”.	38


Menu item		Description	Reference page
Schedule	Settings	- Set the startup time and operation stop time. ON: Startup time, cooling and heating temperature setpoints can be configured. OFF: Operation stop time, cooling and heating setback temperature setpoints can be configured. (--: Indicates that the setback function is disabled for this time period.) __ : Indicates that the temperature setpoint and setback temperature setpoint for this time period is not specified. The last active setpoint will be utilized. - Up to five actions can be set for each day.	39
Override		Used to set the run time for the indoor unit and rooftop unit using this controller. Possible to set in 10 minute increments from 10 minutes to 10 hours.	42
Dehumid Cool Level		- Used to set the level from “Low”, “Medium”, “High” of the Dehumidification for the Dehumidification Cooling mode. - This menu is appeared if the connected unit(s) has Dehumidification Cooling mode.	44
Optimum Start/Stop (Only available for Rooftop units)		Optimum start and stop can be enabled or disabled by each. - Optimum start is used to ensure comfortable space temp prior to occupancy. - Optimum stop is used to ensure energy savings prior to unoccupancy without compromising on comfort.	45
Celsius / Fahrenheit		Used to select whether temperature values will be displayed in Celsius or Fahrenheit.	—
Filter Auto Clean		Set the time when the filter needs to be automatically cleaned. For the detailed operation refer to the Operation Manual of the self cleaning decoration panel.	—
Maintenance Information		Used to display the maintenance information.	46
Configuration	Draft Prevention (Only available with Occ. sensor installed model of the unit)	The draft prevention function can be enabled or disabled . When enabled, the Occ. sensor will adjust the louver’s position to prevent air blowing directly on occupant.	47
	Contrast Adjustment	Used to make LCD contrast adjustment.	48

Quick Reference

Menu item		Description	Reference page
Configuration	Display	Used to set the display mode. - Display mode Standard, Detailed, or Simple display - Detailed and Simple displays provide the selectable display item among Room Temp, System, None or Outside Air Temp.	49
	Current Settings	Used to display a list of current settings for available items.	51
Clock & Calendar	Date & Time	Used to configure date and time settings and corrections. - The default time display is 12H. - The clock will maintain accuracy to within ± 30 seconds per month. - If there is a power failure for a period not exceeding 48 hours, the clock will continue working with the built-in backup power supply.	51
	12H/24H Clock	The time can be displayed in either a 12 hour or a 24 hour time format.	54
Daylight Saving Time		Used to adjust the clock in observance of daylight saving time.	54
Language		The display language can be selected between English , Francais , or Espanol .	57

Note: Available setting items vary with the model of unit.

Sub Remote Controller Menu Items	
If two remote controllers are connected to a single indoor unit or rooftop unit, the following menu items are not set in the sub remote controller. In this case, the following items should be configured in the main remote controller.	
- Individual Airflow Direction - Active Circulation - Schedule - Override - Humidity	- Setback - Draft Prevention - CO2 Monitoring - Optimum Start/Stop

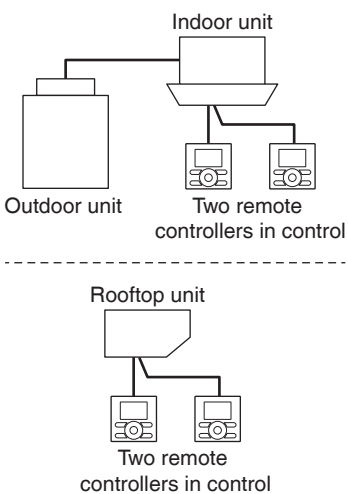

Indoor unit

Outdoor unit

Two remote controllers in control

Rooftop unit

Two remote controllers in control


Menu Options

Navigating the Main Menu Screen

■ Display Method for Main Menu

Operation

1

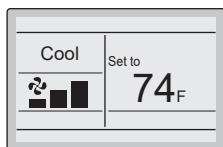


Basic screen

- Press **Menu/OK** button.



2

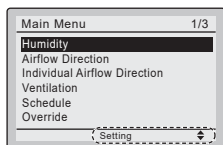


Main menu screen

- The main menu screen is displayed.

⇐ Instructions for navigating the main menu will appear.

3

- Selecting items from the main menu.
 1. Press ▼▲ buttons to select the desired item to be set.
 2. Press **Menu/OK** button to display the details for the selected item.



4

- To go back to the basic screen from the main menu, press **Cancel** button.



Note

- If a button is not pressed for 5 minutes during configuration, the controller will automatically revert to the basic screen.


Menu Options

CO2 Monitoring (Only available for Rooftop units)


- If the unit has CO2 sensor, CO2 history plot and current CO2 are displayed.
- This function is not available by default and available only for Rooftop units. It can be enabled by the system installer.

Operation


1

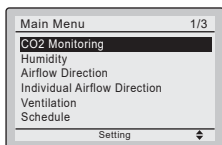

- Display the main menu screen.
(See page 25.)
- Press ▼▲ buttons to select **CO2 Monitoring** and press **Menu/OK** button.

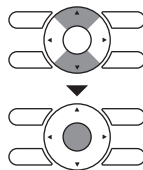


2

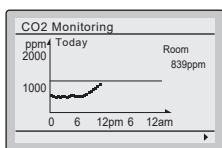


- Today's CO2 history plot and current CO2 are displayed.

3

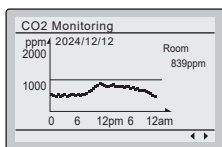

- The date of the history plot can be changed using the ◀▶ buttons up to a week in the past.



Note


- If the unit is powered off, history data only remains the latest 2 days.
- If the clock has not been set, the history plot is not displayed.

Humidity (Only available for Rooftop units)


Display the current room humidity and set the humidity.

Operation


1

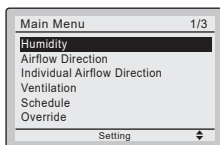


- Display the main menu screen.
(See page 25.)
- Press ▼▲ buttons to select **Humidity** and press **Menu/OK** button.

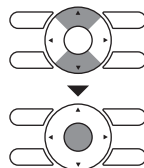

2

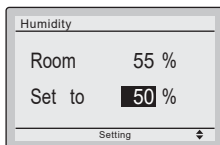


- Room Humidity is displayed.
- To set the humidity, use ▼▲ buttons for adjustment and press **Menu/OK** button. Then, the confirmation screen is displayed.

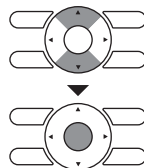


Note

- The menu appears when the connected unit has a humidity sensor.
- The humidity setting appears when the connected unit supports the humidity setting.

3

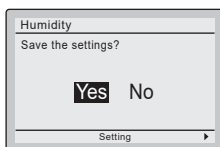

- Press ◀▶ button to select **Yes** on the confirmation screen. Pressing **Menu/OK** button confirms the humidity and takes you back to the basic screen.

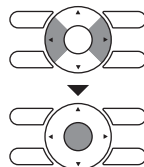


Menu Options

Airflow Direction


■ Configuring Airflow direction

Operation


1

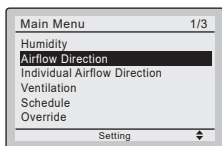

- Display the main menu screen.
(See page 25.)
- Press ▼▲ buttons to select **Airflow Direction** and press **Menu/OK** button.


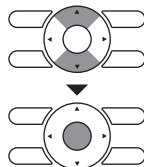


2

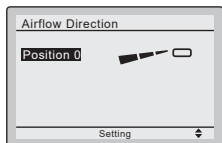


- (1) Adjusting method when there is single airflow direction.

- Select the desired airflow direction from **Position 0**, **Position 1**, **Position 2**, **Position 3**, **Position 4**, **Swing** or **Auto** using ▼▲ buttons.
- Press **Menu/OK** button to confirm the settings and to return to the basic screen.

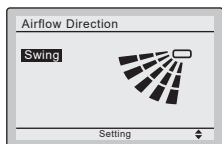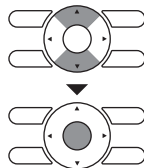

Airflow direction
setting (up/down)

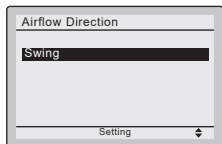

Airflow direction
setting (left/right)

Note


- The airflow directions appear on the screen as follows:




Notice

These operation and screen are example of single airflow direction type indoor unit.
It is different from Single flow cassette model.

3

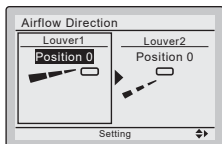


When front/back direction is selected

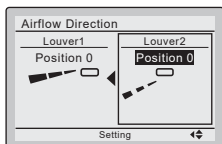

When left/right direction is selected

(2) Adjusting method for selecting dual airflow directions.




- Press ◀▶ buttons, to select front/back or left/right direction setting.




Notice

These operation and screen are example of dual airflow directions type directions indoor unit (Single flow cassette model).


4

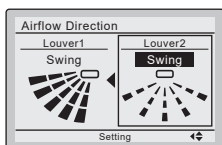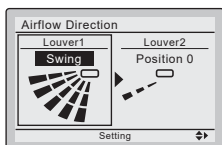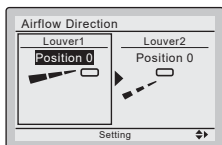

- Select the desired airflow direction from **Position 0** , **Position 1** , **Position 2** , **Position 3** , **Position 4** , **Swing** or **Auto** using ▼▲ buttons.
- Selecting **Swing** will cause the airflow direction louver to swing position 0 to 4.
- Setting **Auto** is not available when left/right direction is selected.
- Press **Menu/OK** button to confirm the settings and return to the basic screen.



5

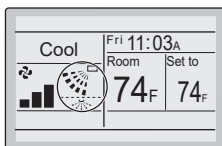

Basic screen
(Detailed display)

- If dual airflow directions are set, then the dual airflow direction icons are displayed in the basic screen.


Menu Options

Individual Airflow Direction


■ Louver Setting

Operation


1

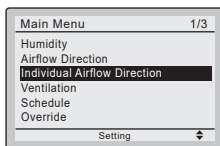


- Display the main menu screen.
(See page 25.)
- Select **Individual Airflow Direction** and press **Menu/OK** button.

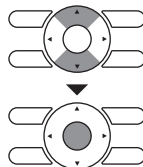


2

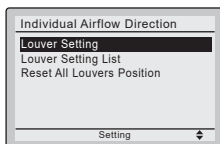


- Select **Louver Setting** and press **Menu/OK** button.

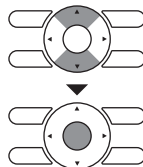

3

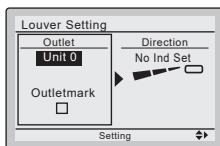


- Use ▼▲ buttons to select the unit and outlet mark.
- Maximum 16 units for each group (unit 0 till 15) can be selected.

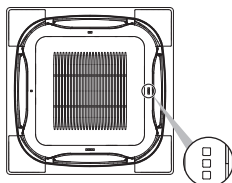


Note

In case of four outlets (cassette type), you can control each one of the four louvers individually (the following marks are beside each air outlet: □, □□, □□□, □□□□).


4

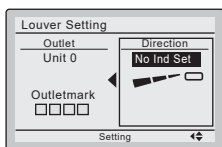

- Press ◀▶ button to select the airflow direction.
- Use ▼▲ buttons to change the airflow direction to the following:
No Ind Set , **Position 0** , **Position 1** ,
Position 2 , **Position 3** , **Position 4** ,
Swing or **Blocked** .
No Ind Set : No Individual Louver Setting.
Blocked : Individual airflow is blocked.
- Press **Menu/OK** button to confirm the settings and to return to the basic screen.

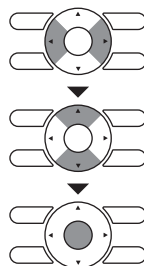

5

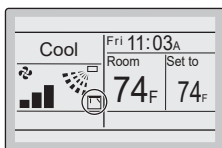


Basic screen
(Detailed display)

- If individual airflow direction is set, then the individual airflow direction icon is displayed in the basic screen.


■ Louver Setting List

Operation

1

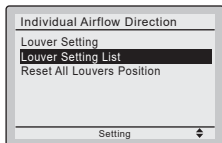


- Display the individual airflow direction screen. (See page 30.)
- Press ▼▲ buttons to select **Louver Setting List** and press **Menu/OK** button.

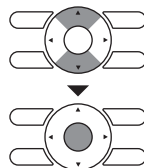

2

Louver Setting List		
Unit 0	Direction	Indiv.
□	Position 0	OFF
□□	Position 0	OFF
□□□	Position 0	OFF
□□□□	Position 0	OFF

- A table shows the current settings. Press ▼▲ buttons to go to the next unit.
- Press **Cancel** button to return to the previous menu.

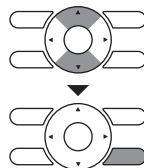


Menu Options


■ Reset All Louvers Position

Operation


1

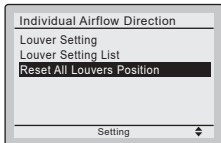


- Display the individual airflow direction screen.
(See page 30.)
- Press ▼▲ buttons to select **Reset All Louvers Position** and press **Menu/OK** button.

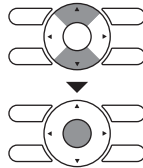

2

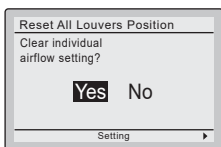

- Press ◀▶ buttons to select **Yes**.
- Press **Menu/OK** button to confirm the reset and to return to the basic screen.

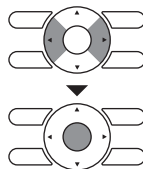


Operational Details and Functions

There are two types of airflow direction settings.


Airflow direction swing

The louvers automatically oscillate up and down.

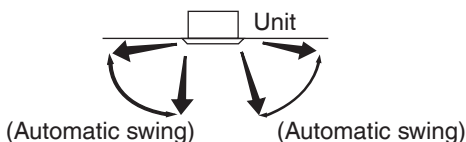

Airflow direction

You can select from one of five fixed directions. (This has no relation to the angle of the louvers.)

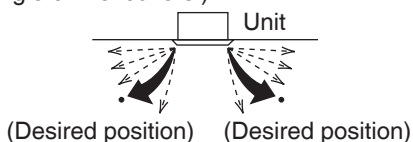

Movement of airflow direction louver

Under the operating conditions shown next, airflow direction is controlled automatically. Actual operation may be different than what is displayed on the remote controller.

Operating condition

- Room temperature is higher than the remote controller's setpoint (in heating operation).
- When defrosting (in heating operation).
(The airflow discharges horizontally to avoid creating a draft for the room occupants.)
- Under continuous operation with the airflow discharging horizontally.

Menu Options


Active Circulation

- Used to set the “Enable” or “Disable” for the Active Circulation. When the fan speeds and Airflow Direction are auto mode, circulation mode is activated.
- The Active Circulation can only be displayed if all connected units have Active Circulation.


■ Configuring and Confirming Active Circulation settings

Operation


1

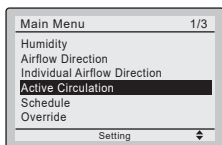



- Display the main menu screen.
(See page 25.)
- Press ▼▲ buttons to select **Active Circulation** on the main menu screen.

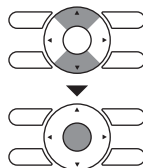


2

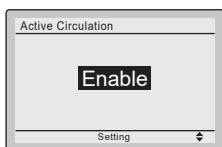

- Press ▼▲ buttons to select from “Enable”, “Disable”.
Press **Menu/OK** button to display the confirmation screen.

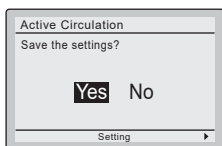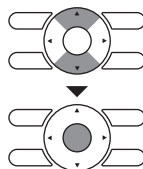

- Press ◀▶ buttons to select **Yes** on the confirmation screen.
- Pressing **Menu/OK** button confirms the settings and takes you back to the basic screen

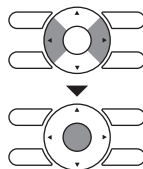


Ventilation


■ Ventilation screen display properties

Operation

1

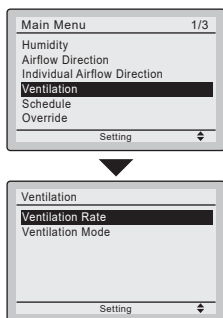


- Display the main menu screen.
(See page 25.)
- Press ▼▲ buttons to select **Ventilation** on the main menu screen.
(For models with no ventilation function, **Ventilation** will not be displayed on the main menu screen.)
Press **Menu/OK** button to display the ventilation screen.

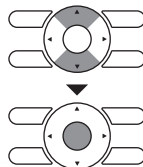


■ Changing the ventilation rate

Operation


1

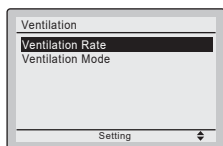

- Navigate to the ventilation screen
(see above).
- Press ▼▲ buttons to select **Ventilation Rate** on the ventilation screen.
Press **Menu/OK** button to display the ventilation rate screen.

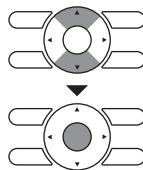


2

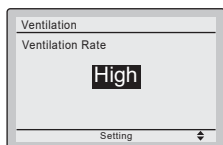

- Press ▼▲ buttons to toggle between the **Low** and **High** settings.
* Only modes that can be set are displayed.



3

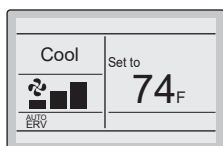

- Selecting and confirming the desired ventilation rate will take you back to the basic screen.
(Pressing **Cancel** button takes you back to the previous screen without changing the ventilation rate.)




Menu Options


■ Changing the ventilation mode

Operation


1

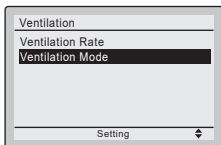

- Display the ventilation screen.
(See page 35.)
- Press ▼▲ buttons to select **Ventilation Mode** on the ventilation screen.
Press **Menu/OK** button to display the ventilation mode screen.

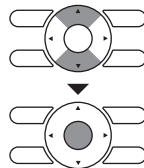

2

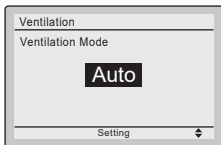


- Pressing ▼▲ buttons cycles through the settings in the order shown below.



* Only modes that can be set are displayed.



3

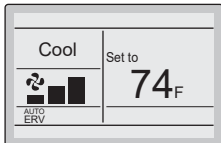

- Selecting and confirming the desired ventilation mode will take you back to the basic screen.
(Pressing **Cancel** button takes you back to the previous screen without changing the ventilation mode.)



Ventilation Mode

Auto mode

Using information from the indoor unit (cool, heat, fan, and setpoint) and the energy recovery ventilator unit (indoor and outdoor temperatures), the ventilation mode is automatically changed between ERV and Bypass.

ERV mode

Outside air is passed through the ERV core and is supplied to the conditioned space.

Bypass mode

Outside air is supplied to the conditioned space without passing through the ERV core.

Schedule


■ Setting the schedule

Operation



The schedule will disappear when a multizone controller is connected, but can be re-enabled by the system installer.

The schedule will disappear when a BACnet is connected, but can be re-enabled from BACnet. (Rooftop unit only)



1

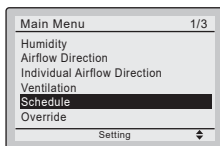


- Display the main menu screen.
(See page 25.)
- Press ▼▲ buttons to select **Schedule**. Press **Menu/OK** button to display the schedule screen.

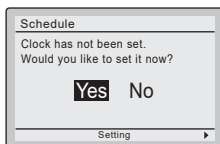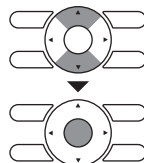


- Before setting the schedule, the clock must be set.
- If the clock has not been set, a screen like the one on the left will appear. Press ◀▶ buttons to select **Yes** and press **Menu/OK** button.
- The date & time screen will appear.
- Set the current year, month, day, and time. (See clock settings on page 51.)

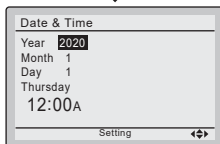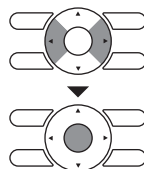

2

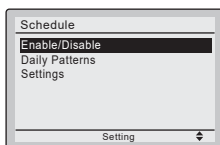

- Press ▼▲ buttons to select the desired function on the schedule screen and press **Menu/OK** button.

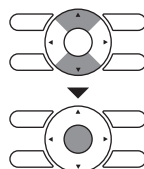


Menu Options

■ Daily Patterns


Operation

1

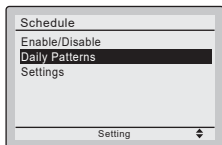


- The schedule screen will appear.
- Press ▼▲ buttons to select **Daily Patterns** on the schedule screen.

The daily patterns screen will appear when **Menu/OK** button is pressed.

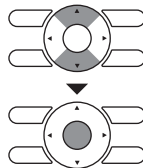


2

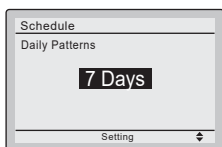


- Press ▼▲ buttons to select **7 Days**, **Weekday/Sat/Sun**, **Weekday/Weekend** or **Everyday** on the daily patterns screen.

The confirmation screen will appear when **Menu/OK** button is pressed.

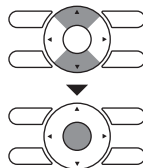


3

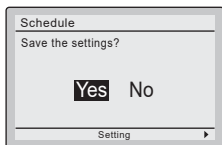

- Press ◀▶ buttons to select **Yes** on the confirmation screen.


Pressing **Menu/OK** button enters the daily patterns in the schedule and takes you back to the main menu screen.

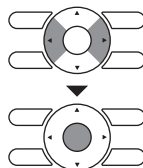


■ Settings

Operation


1

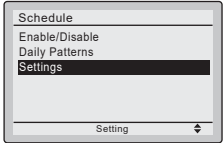

- The schedule screen will appear.
- Press ▼▲ buttons to select **Settings** on the schedule screen. The settings screen will appear when **Menu/OK** button is pressed.

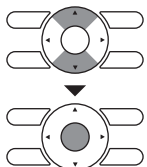


2

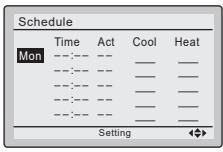


- Press ▼▲ buttons to select the day to be set.



* It cannot be selected in the case of **EVDY** .



3

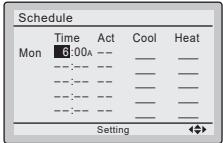

- Input the time for the selected day.
- Press ◀▶ buttons to move the highlighted item and press ▼▲ buttons to input the desired operation start time. Each press of ▼▲ buttons moves the numbers by 1 hour or 1 minute.

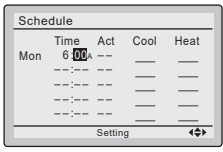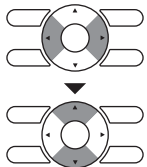

Menu Options

4

Schedule				
	Time	Act	Cool	Heat
Mon	6:00a	■		
	--:--	--		
	--:--	--		
	--:--	--		
	--:--	--		


Setting



Schedule				
	Time	Act	Cool	Heat
Mon	6:00a	ON	90F	60F
	--:--	--		
	--:--	--		
	--:--	--		
	--:--	--		

Setting

- Press ◀▶ buttons to move the highlighted item and press ▼▲ buttons to configure ON/OFF/-- settings. --, ON, or OFF changes in sequence when ▼▲ buttons are pressed.

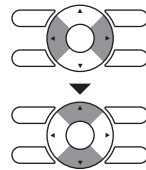

ON: The temperature setpoints can be configured.
 OFF: The setback temperature setpoints can be configured.

--: The temperature setpoints and setback temperature setpoints become disabled.

Schedule				
	Time	Act	Cool	Heat
Mon	6:00a	ON	75F	70F
	8:00a	OFF	■	
	--:--	--		
	--:--	--		
	--:--	--		

Setting

- The cooling and heating temperature setpoints for both ON and OFF (Setback) are configured.

___: Indicates that the temperature setpoint and setback temperature setpoint for this time period is not specified. The last active setpoint will be utilized.

--: Indicates that the setback function is disabled for this time period.

5

Schedule				
	Time	Act	Cool	Heat
Mon	6:00a	ON	75F	70F
	8:00a	OFF	85F	50F
	5:30p	ON	75F	70F
	10:00p	■		
	--:--	--		

Setting



Schedule				
	Time	Act	Cool	Heat
Mon	6:00a	ON	75F	70F
	8:00a	OFF	85F	50F
	5:30p	ON	75F	70F
	10:00p	OFF	82F	62F
	--:--	--		

Setting




Schedule				
	Time	Act	Cool	Heat
Tue	6:00a	ON	75F	70F
	8:00a	OFF	85F	50F
	5:30p	ON	75F	70F
	10:00p	OFF	82F	62F
	--:--	--		

Setting

A maximum of five actions per day can be set.

- Press **Menu/OK** button when settings for each day are completed. The confirmation screen will appear.

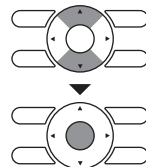


To copy the settings for the previous day, press **Mode** button so that the existing settings will be copied.


Example: The contents for Monday are copied by pressing **Mode** button after selecting Tuesday.



6

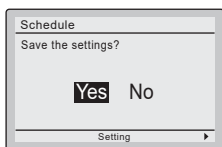


- Press ◀▶ buttons to select **Yes** on the confirmation screen. Pressing **Menu/OK** button confirms the settings for each day and takes you back to the basic screen.

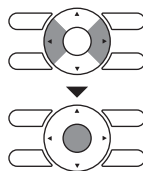


Enabling or disabling the schedule

Operation


1

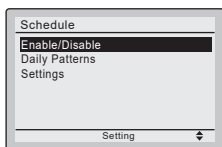


- Display the schedule screen. (See page 37.)
- Press ▼▲ buttons to select **Enable / Disable** on the schedule screen. Press **Menu/OK** button to display the enable/disable screen.

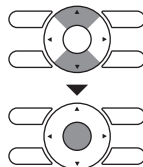


2

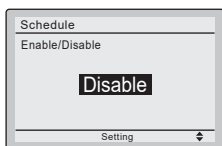


- Press ▼▲ buttons to select **Enable** or **Disable** on the enable/disable screen. Press **Menu/OK** button after selecting the item. The confirmation screen is displayed.

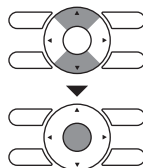

3

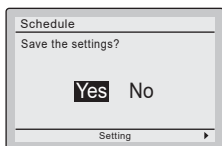

- Press ◀▶ buttons to select **Yes** on the confirmation screen. Pressing **Menu/OK** button confirms the enable/disable setting for the schedule and takes you back to the basic screen.

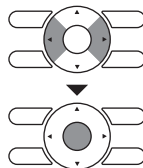

Menu Options


Override

When the unit is turned on by the On/Off button during except for the occupied period, it will automatically turn off after a time set by the timer to prevent forgetting to turn it off.


■ Configuring and Confirming the Override settings

Operation


1

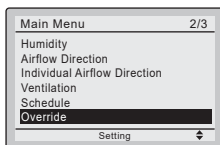


- Display the main menu screen.
(See page 25.)
- Press ▼▲ buttons to select the **Override** on the main menu screen. Press **Menu/OK** button to display the override screen.

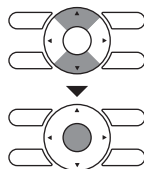


2

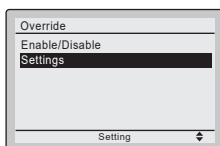


- Press ▼▲ buttons to select **Settings** on the override screen. Press **Menu/OK** button to display the configuration screen.

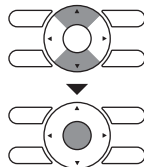


3

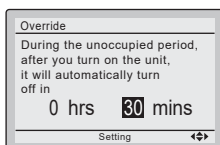


- Use ▼▲ buttons to set the time from operation start until the unit automatically stops.
- Use ◀▶ buttons to select the items of hours and minutes.
- Selections can be made in increments of 10 minutes from 10 minutes to 10 hours.
- Select the desired time and press **Menu/OK** button. The confirmation screen will appear.

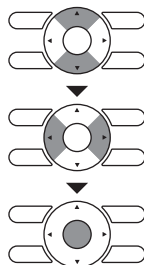

4

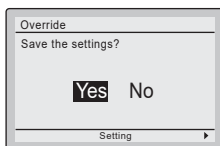

- Press ◀▶ button to select **Yes** on the confirmation screen. Pressing **Menu/OK** button confirms the override and takes you back to the basic screen.

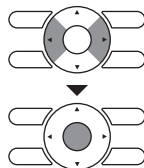





Enabling or disabling the override

Operation


1

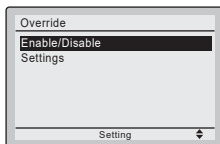


- Navigate to the override screen.
(See page 42.)
- Press ▼▲ buttons to select **Enable/Disable** on the override screen. Press **Menu/OK** button to display the enable/disable screen.

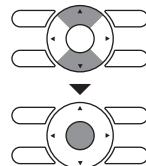


2

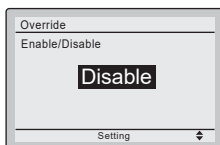


- Press ▼▲ buttons to select **Enable** or **Disable** on the enable/disable screen. Press **Menu/OK** button after selecting the item. Then the confirmation screen is displayed.

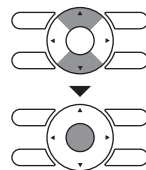

3

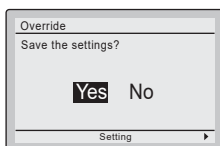

- Press ◀▶ button to select **Yes** on the confirmation screen. Pressing **Menu/OK** button confirms the enable/disable for the override and takes you back to the basic screen.

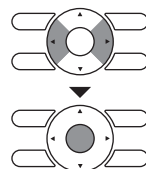


Menu Options

Dehumid Cool Level


- Used to set the level from “Low”, “Medium”, “High” of the Dehumidification for the Dehumidification Cooling mode.
- This menu is appeared if the connected unit(s) has Dehumidification Cooling mode.

Operation


1

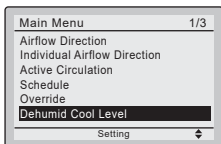


- Display the main menu screen.
(See page 25.)
- Press ▼▲ buttons to select the **Dehumid Cool Level** on the main menu screen.

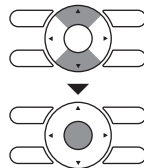


2

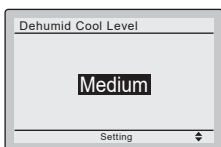


- Press ▼▲ buttons to select from “Low”, “Medium”, “High”.
- Press **Menu/OK** button to display the confirmation screen.

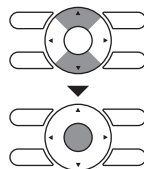

3

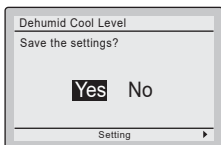

- Press ◀▶ button to select **Yes** on the confirmation screen.
Pressing **Menu/OK** button confirms the settings and takes you back to the basic screen.

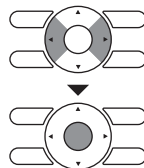

Optimum Start/Stop (Only available for Rooftop units)


Optimum Start: Unit operation automatically starts before the occupied period to bring the space to desired occupied temperature levels at the beginning of scheduled occupancy.

Optimum Stop: Unit operation automatically slows down before the unoccupied period to bring the space to unoccupied temperature levels at the end of scheduled occupancy.


■ Configuring and Confirming the Optimum Start/Stop settings

Operation

1

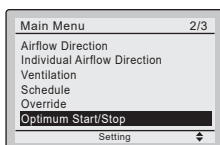


- Display the main menu screen.
(See page 25.)
- Press ▼▲ buttons to select the **Optimum Start/Stop** on the main menu screen.
Press **Menu/OK** button to display the optimum start/stop screen.

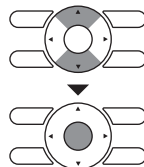


Note

The Optimum Start/Stop menu appears when the connected unit supports the Optimum Start/Stop.


2

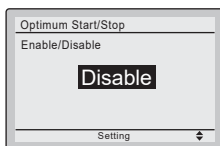


- Press ▼▲ buttons to select from **Disable**, **Start and Stop**, **Start only**, or **Stop only**.
Press **Menu/OK** button to display the confirmation screen.

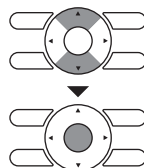

3

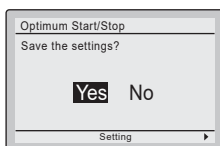

- Press ◀▶ button to select **Yes** on the confirmation screen.
Pressing **Menu/OK** button confirms the settings and takes you back to the basic screen.

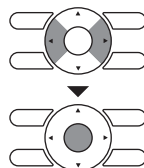


Menu Options

Maintenance Information


■ Displaying the service contact and model information

Operation


1

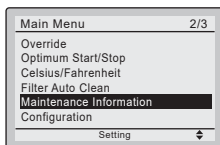

- Display the main menu screen.
(See page 25.)
- Press ▼▲ buttons to select **Maintenance Information** on the main menu screen and press **Menu/OK** button.

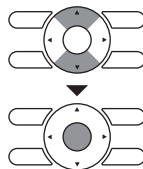

2

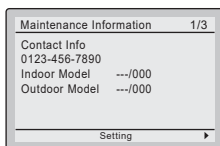

- The phone number for the contact is displayed at the top of the screen.
(If it has not yet been entered, it will not be displayed.)
- The model information of the indoor and outdoor units (or rooftop units) for your product will be displayed at the middle of the screen.
(For some models the product code may be displayed.)
- The serial number and detailed model name of the units are displayed on 2nd page and 3rd page.
 - * If the rooftop unit is connected, only one model name is displayed as a model name, and it does not display on 3rd page.
 - * The model name will not be displayed if the unit PCB has been replaced.

* The error code history may also be displayed. If the Operation lamp is not flashing, the unit is working properly. The error code history is no longer displayed if you press **On/Off** button for more than 4 seconds.




Configuration


■ Draft Prevention

Operation


1

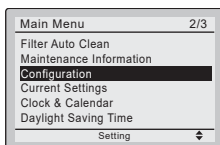


- Display the main menu screen.
(See page 25.)
- Press ▼▲ buttons to select **Configuration** and press **Menu/OK** button.

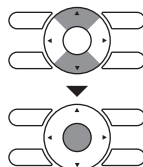


2

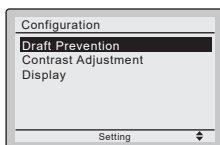


- Press ▼▲ buttons to select **Draft Prevention** and press **Menu/OK** button.

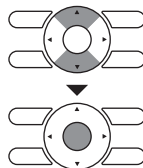


3

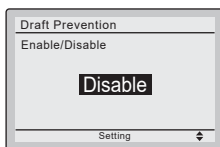


- Press ▼▲ buttons to select **Enable** or **Disable**.
- The confirmation screen will appear when **Menu/OK** button is pressed.

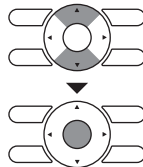

4

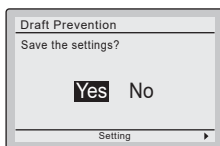

- Press ◀▶ buttons to select **Yes**.
- Press **Menu/OK** button to confirm the settings and to return to the basic screen.

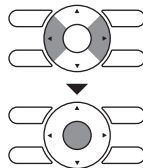


Menu Options


■ Contrast Adjustment

Operation


1

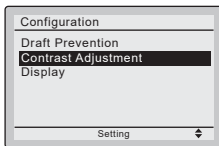


- Navigate to the configuration screen.
(See page 47.)
- Press ▼▲ buttons to select **Contrast Adjustment** on the configuration screen.
Press **Menu/OK** button to display the contrast adjustment screen.

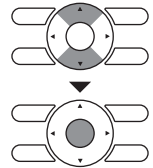

2

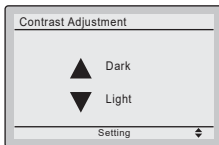

- On the contrast adjustment screen press ▼▲ buttons until you reach the desired contrast.
After setting, press **Menu/OK** button and return to the basic screen.

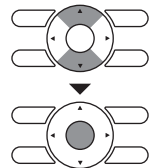


■ Display


Display Mode

Operation


1

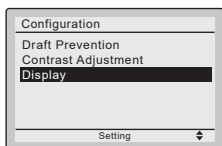


- Navigate to the configuration screen.
(See page 47.)
- Press ▼▲ buttons to select **Display** on the configuration screen. Press **Menu/OK** button to display the display screen.

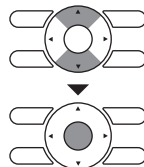

2

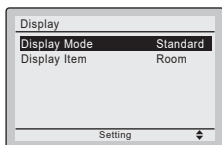


- Press ▼▲ buttons to select **Display Mode** on the display screen. Press **Menu/OK** button to display the display mode screen.

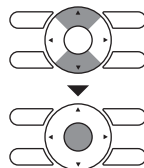

3



- Press ▼▲ buttons to select **Standard**, **Detailed** or **Simple** on the display screen.
- Press **Menu/OK** button to confirm the settings and return to the basic screen.

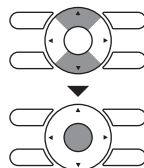


* Refer to **Display Item** to change the selectable display item for Detailed and Simple display modes. (See page 50.)

Menu Options


Display Item

Operation

1

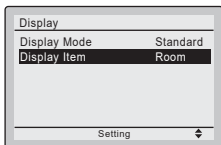

- Navigate to the display screen.
(See page 49.)
- Press ▼▲ buttons to select **Display Item** on the display screen. Press **Menu/OK** button to display the display item screen.

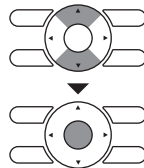

2



- Pressing ▼▲ buttons displays the following.



* Some models may not display these items even if they are selected.

- Be sure to read the following notes regarding display of room temperature and outside air temperature.

Room Temp

..... The temperature at the remote controller.

The temperature that is detected may be affected by the location of the remote controller.

Outside Air Temp

..... The temperature that is detected may be affected by factors such as the location of the unit (for example, if it is in direct sunlight) and unit operation during defrosting.

- After setting, press **Menu/OK** button to confirm settings and return to the basic screen.




Current Settings


■ Confirming the current settings

Operation


1

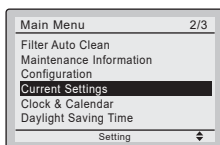


- Display the main menu screen.
(See page 25.)
- Press ▼▲ buttons to select **Current Settings** on the main menu screen and press **Menu/OK** button.

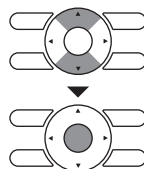

2

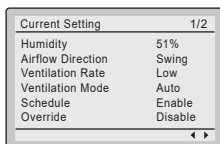

- A list showing the current setting status will appear.
Press ◀▶ buttons to go to the next item.
- Pressing **Cancel** button takes you back to the main menu screen.

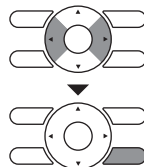

Display items

Humidity	Dehumid Cool Level
Airflow Direction	Display Mode
Ventilation Rate	Display Item
Ventilation Mode	Filter Auto Clean
Active Circulation	Optimum Start
Schedule	Optimum Stop
Override	


* Display items may differ depending on the model.
Only the items that can be set are displayed.

Clock & Calendar


■ Date & Time

Operation

1

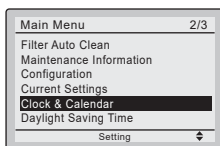


- Display the main menu screen. (See page 25.)
- Press ▼▲ buttons to select **Clock & Calendar** on the main menu screen.
Press **Menu/OK** button to display the clock & calendar screen.

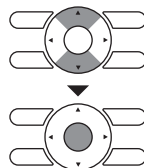


Menu Options


2

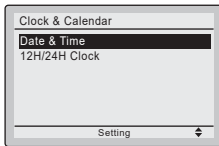


- Press ▼▲ buttons to select **Date & Time** on the clock & calendar screen. Press **Menu/OK** button to display the date & time screen.

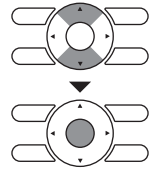


3

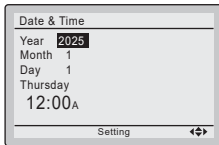


- Select **Year** with ◀▶ buttons. Change the year with ▼▲ buttons. Holding down the button causes the number to change continuously.

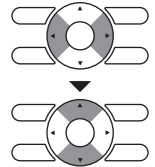


4

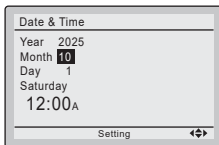


- Select **Month** with ◀▶ buttons. Change the month with ▼▲ buttons. Holding down the button causes the number to change continuously.

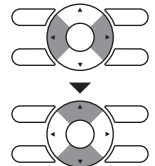


5

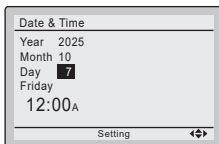


- Select **Day** with ◀▶ buttons. Change the day with ▼▲ buttons. Holding down the button causes the number to change continuously. Days of the week change automatically.

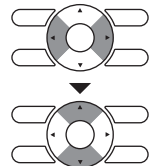


6

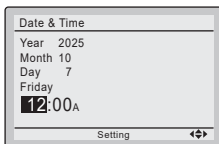

- Select **Hour** with ◀▶ buttons. Change the hour with ▼▲ buttons. Holding down the button causes the number to change continuously.

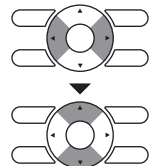


7

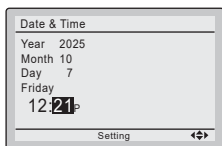


- Select **Minute** with ◀▶ buttons.
Change the minute with ▼▲ buttons.
Holding down the button causes the number to change continuously.
- Press **Menu/OK** button.
The confirmation screen will appear.

Note: _____

The date can be set between
January 1, 2020 and December 31, 2099.

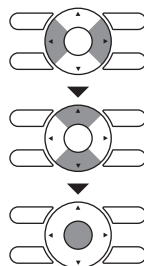


8

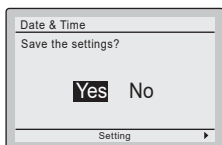

- Press ◀▶ button to select **Yes** on the confirmation screen.
Press **Menu/OK** button to confirm the clock and return to the basic screen.

* When setting the schedule, the display returns to the settings screen.

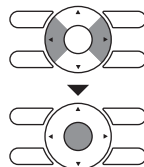


Menu Options


■ 12H/24H CLOCK

Operation


1

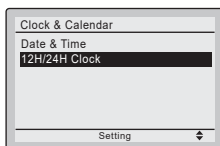


- Display the clock & calendar screen. (See page 51.)
- Press ▼▲ buttons to select **12H/24H Clock** on the clock & calendar screen. The 12H/24H clock screen will appear when **Menu/OK** button is pressed.

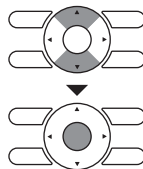


2

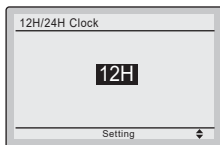


- By default, the time display is set to the 12H format.
- Press ▼▲ buttons to select **12H** **24H** on the 12H/24H clock screen.
 - The confirmation screen will appear when **Menu/OK** button is pressed.

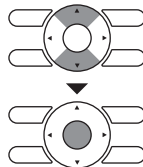

3

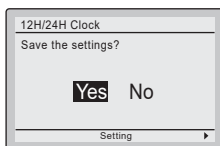

- Press ◀▶ buttons to select **Yes** on the confirmation screen. Pressing **Menu/OK** button confirms the 12H or 24H and takes you back to the basic screen.

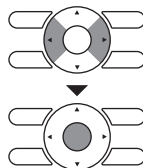


Daylight Saving Time


■ How to display Daylight Saving Time

Operation

1

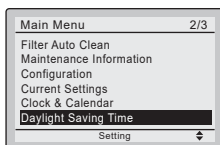


- Display the main menu screen. (See page 25.)
- Press ▼▲ buttons to select **Daylight Saving Time** on the main menu screen. Press **Menu/OK** button to display the daylight saving time screen.

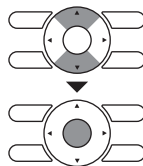


Enabling or disabling Daylight Saving Time

Operation


1

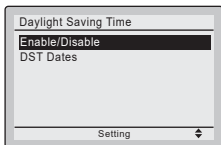


- Display the daylight saving time screen.
(See page 54.)
- Press ▼▲ buttons to select **Enable/Disable** on the daylight saving time screen. Press **Menu/OK** button to display the enable/disable screen.

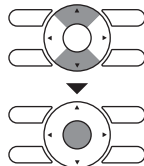


2

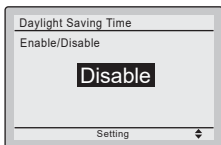


- Press ▼▲ buttons to select **Enable** or **Disable** on the enable/disable screen.
- Press **Menu/OK** button to display the setting confirmation screen.

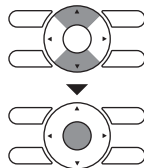

3

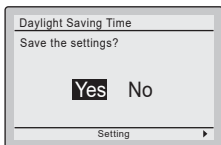


- Press ◀▶ buttons to select **Yes** on the setting confirmation screen. Pressing **Menu/OK** button confirms the daylight saving time enable/disable setting and takes you back to the basic screen.

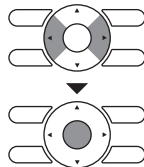


Setting the date

Operation

1

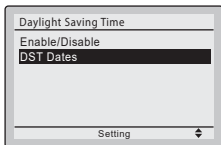


- Display the daylight saving time screen.
(See page 54.)
- Press ▼▲ buttons to select **DST Dates** on the daylight saving time screen. Press **Menu/OK** button to display the duration setting screen.

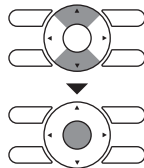


Menu Options

2

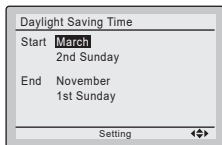


- Press ▼▲ buttons to select the start month and the end month.
- Press ◀▶ buttons to select a week. Press ▼▲ buttons to select the start week and the end week.

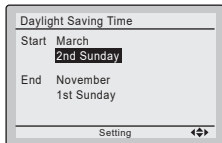


- After setting the Start and End dates, press **Menu/OK** button to display the setting confirmation screen.



3

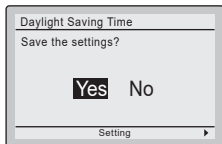

- Press ◀▶ buttons to select **Yes** on the setting confirmation screen. Pressing **Menu/OK** button confirms the Daylight Saving Time settings and takes you back to the basic screen.



When Daylight Saving Time is enabled


When the time in the remote controller reaches 2:00 a.m. on the specified start date, the clock is automatically set forward by one hour. When the time in the remote controller reaches 2:00 a.m. on the end date, the clock is automatically set back by one hour.

Language


■ Selectable Languages

Operation


1

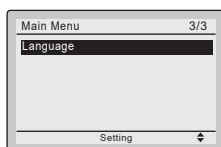


- Display the main menu screen.
(See page 25.)
- Press ▼▲ buttons to select **Language** on the main menu screen and press **Menu/OK** button.

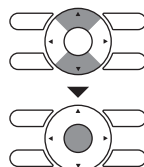

2

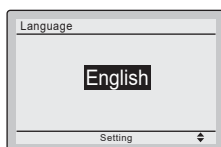

- Press ▼▲ buttons to select the preferred language on the language screen.
English/Français/Español are available.
- Press **Menu/OK** button to confirm the settings and return to the basic screen.

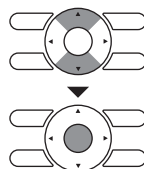


Maintenance

Reset Filter Indicator

Operation

1

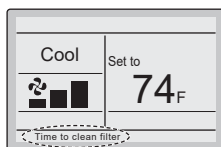

- When it is time to clean or replace the filter, one of the following messages will be displayed on the bottom of the basic screen.

Time to clean filter

Time to clean filter & element

Time to clean element

* This is not displayed when Simple display is set.

- Wash, clean, or replace the filter or element.
For details, refer to the operation manual supplied with the unit.


Maintenance

2



- Reset the filter indicator when the filter or element is cleaned or replaced.
- Press **Menu/OK** button.
The main menu screen will be displayed.



3

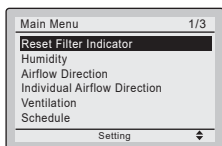

- Press ▼▲ buttons to select **Reset Filter Indicator** on the main menu screen and press **Menu/OK** button.

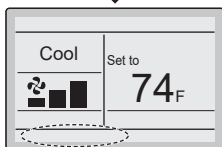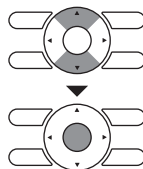

- The displayed message “Time to clean filter” is no longer displayed on the basic screen when the filter sign is reset.

Maintaining the Unit and LCD Display

- Wipe the LCD and surface of the remote controller with a dry cloth when they become dirty.
- If the dirt on the surface cannot be removed, soak the cloth in neutral detergent diluted with water, squeeze the cloth tightly, and clean the surface. Wipe the surface with a dry cloth.

Note

- Do not use any paint thinner, organic solvent, or strong acid.


Reference Information

Error Code Display

■ Contact your Daikin dealer in the following cases

Operation

1

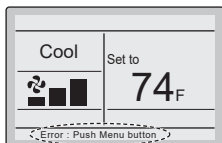


- If an error occurs, either one of the following items will flash in the basic screen.

Error: Push Menu button

- * The Operation lamp will flash.
- * For Simple display, the message is not displayed, and only the Operation lamp flashes.

Warning: Push Menu button


- * The Operation lamp will not flash.
- * For Simple display, the message is not displayed, and the Operation lamp does not flash, either.

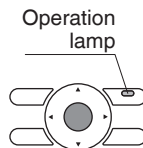

- Press **Menu/OK** button.

- * If the refrigerant leaks, it will automatically transition to the below screen from the basic screen. However, if the basic screen is not displayed, the transition will not occur automatically.

2

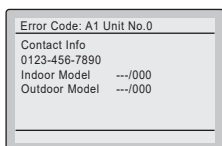

- The error code will flash on the screen for the corresponding unit number.
- The service contact and model name or code are displayed.
- If the refrigerant leaks, it shows "Refrigerant leak detected." with an error code.
- Notify your Daikin dealer with the Error code and model name or code.

Reference Information

After-sale Service



Warning

- **Do not relocate or reinstall the remote controller by yourself.**

Improper installation may result in electric shocks or fire.
Consult your Daikin dealer.



■ Advise your Daikin Dealer of the following items

- Model name
- Date of installation
- Failure conditions: As precise as possible.
- Your address, name, and telephone number

■ Repairs after Warranty Period

Consult your Daikin dealer.

■ Inquiry about After-sale Service

Contact your Daikin dealer.

DAIKIN COMFORT TECHNOLOGIES MANUFACTURING, INC.

Daikin Texas Technology Park,

19001 Kermier Road,

Waller, TX, 77484, U.S.A.

Tel: 713-861-2500

Web: www.daikincomfort.com or www.daikinac.com