

OPERATION MANUAL

VRV System air conditioner

English

MODEL

REYA72AATJ*	REYA72AAYD*	RXYA72AATJ*	RXYA72AAYD*
REYA96AATJ*	REYA96AAYD*	RXYA96AATJ*	RXYA96AAYD*
REYA120AATJ*	REYA120AAYD*	RXYA120AATJ*	RXYA120AAYD*
REYA144AATJ*	REYA144AAYD*	RXYA144AATJ*	RXYA144AAYD*
REYA168AATJ*	REYA168AAYD*	RXYA168AATJ*	RXYA168AAYD*
REYA192AATJ*	REYA192AAYD*	RXYA192AATJ*	RXYA192AAYD*
REYA216AATJ*	REYA216AAYD*	RXYA216AATJ*	RXYA216AAYD*
REYA240AATJ*	REYA240AAYD*	RXYA240AATJ*	RXYA240AAYD*
REYA264AATJ*	REYA264AAYD*	RXYA264AATJ*	RXYA264AAYD*
REYA288AATJ*	REYA288AAYD*	RXYA288AATJ*	RXYA288AAYD*
REYA312AATJ*	REYA312AAYD*	RXYA312AATJ*	RXYA312AAYD*
REYA336AATJ*	REYA336AAYD*	RXYA336AATJ*	RXYA336AAYD*
REYA360AATJ*	REYA360AAYD*	RXYA360AATJ*	RXYA360AAYD*
REYA384AATJ*	REYA384AAYD*	RXYA384AATJ*	RXYA384AAYD*
REYA408AATJ*	REYA408AAYD*	RXYA408AATJ*	RXYA408AAYD*
REYA432AATJ*	REYA432AAYD*	RXYA432AATJ*	RXYA432AAYD*
REYA456AATJ*	REYA456AAYD*	RXYA456AATJ*	RXYA456AAYD*
REYA480AATJ*	REYA480AAYD*	RXYA480AATJ*	RXYA480AAYD*

Read these instructions carefully before installation.
Keep this manual in a handy place for future reference.
This manual should be left with the equipment owner.

Regarding the operation procedures of the remote controller,
refer to the manual included to the corresponding remote controller.

Please visit <http://www.daikinac.com/content/resources/manuals> for the most current version of Operation manual. In the event of conflicting information, the online contents are to be used.

Veillez visiter <http://www.daikinac.com/content/resources/manuals> pour obtenir la version la plus récente du Manuel d'utilisation. En cas de conflit d'informations, le contenu en ligne est à privilégier.

Visite <http://www.daikinac.com/content/resources/manuals> para obtener la versión en español del Manual de operación. En caso de información contradictoria, se utilizarán los contenidos en línea.

Safety Considerations

Refer also to the General Safety Considerations in the separate booklet.

	<p>Read the precautions in this manual carefully before operating the unit.</p>
	<p>This appliance is filled with R32.</p>

Read these **Safety Considerations for Operations** carefully before installing air conditioning equipment. After completing the installation, make sure that the unit operates properly during the startup operation.

Instruct the customer on how to operate and maintain the unit. Inform customers that they should store this Operation Manual with the Installation Manual and General Safety Considerations for future reference.

Meanings of **DANGER**, **WARNING**, **CAUTION**, and **NOTE** Symbols:

 **DANGER**.....Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

 **WARNING**.....Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

 **CAUTION**.....Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.

 **NOTE**Indicates situations that may result in equipment or property-damage accidents only.

DANGER

- Do not install the unit in an area where flammable materials are present due to risk of explosion resulting in serious injury or death.
- Any abnormalities in the operation of the air conditioner such as smoke or fire could result in severe injury or death. Turn off the power and contact your dealer immediately.
- Refrigerant gas may produce toxic gas if it comes in contact with fire, such as from a fan, heater, stove, or cooking device. Exposure to this gas could cause severe injury or death.
- For refrigerant leakage, consult your dealer. Refrigerant gas is heavier than air and replaces oxygen. A massive leak could lead to oxygen depletion, especially in basements, and an asphyxiation hazard could occur leading to serious injury or death.
- If equipment utilizing a burner is used in the same room as the air conditioner, there is the danger of oxygen deficiency which could lead to an asphyxiation hazard resulting in serious injury or death. Be sure to ventilate the room sufficiently to avoid this hazard.
- Safely dispose of the packing materials. Packing materials, such as nails and other metal or wooden parts, may cause stabs or other injuries.

- Tear apart and throw away plastic packaging bags so that children can not play with them. Children playing with plastic bags face the danger of death by suffocation.

WARNING

- Contact your dealer for repair and maintenance. Improper repair and maintenance may result in water leakage, electric shock, and fire. Only use accessories made by Daikin that are specifically designed for use with the equipment and have them installed by a professional.
- Contact your dealer to move and reinstall the air conditioner. Incomplete installation may result in water leakage, electric shock, and fire.
- Never let the indoor unit or the remote controller get wet. Water can cause an electric shock or a fire.
- Never use flammable spray such as hair spray, lacquer, or paint near the unit. Flammable spray may cause a fire.
- When a fuse blows out, never replace it with one of incorrect ampere ratings or different wires.
- Never remove the fan guard of the unit. A fan rotating at high speed without the fan guard is very dangerous and could result in injury.
- Never inspect or service the unit by yourself. Contact a qualified service person to perform this work.
- Turn off all electrical power before doing any maintenance to avoid the risk of serious electric shock; never sprinkle or spill water or liquids on the unit. Do not touch the switch with wet fingers. Touching a switch with wet fingers can cause electric shock.
- Only personnel that have been trained to install, adjust, service, maintenance or repair (hereinafter, "service") the equipment specified in this manual should service the equipment.
- This equipment is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the equipment.
- The manufacturer will not be responsible for any injury or property damage arising from improper supervision, service or service procedures.
- If you service this unit, you assume responsibility for any injury or property damage which may result. In addition, in jurisdictions that require one or more licenses to service the equipment specified in this manual, only licensed personnel should service the equipment.
- Improper supervision, installation, adjustment, servicing, maintenance or repair of the equipment specified in this manual, or attempting to install, adjust, service or repair the equipment specified in this manual without proper supervision or training may result in product damage, property damage, personal injury or death.
- Do not bypass safety devices.

- The heat exchanger fins are sharp enough to cut. To avoid injury wear gloves or cover the fins while working around them.
- Do not put a finger or other objects into the air inlet or air outlet. The fan is rotating at high speed and may cause injury.
- Check the unit foundation for damage on a continuous basis, especially if it has been in use for a long time. If left in a damaged condition the unit may fall and cause injury.
- Placing a flower vase or other containers with water or other liquids on the unit could cause a shock or fire if a spill occurs.
- Do not touch the air outlet or horizontal blades while the swing flap is in operation because fingers could get caught and injured.
- Never touch the internal parts of the controller. Do not remove the control box cover because some parts inside are dangerous to touch. To check and adjust internal parts, contact your dealer.
- Be sure to ground the unit.
Do not ground the unit to an utility pipe, arrester, or telephone ground. Incomplete grounding may cause electric shock, or fire. A high surge current from lightning or other sources may cause damage to the air conditioner.
- This equipment can be installed with a Ground-Fault Circuit Breaker (GFCI). Although this is a recognized measure for additional protection, with the grounding system in North America, a dedicated GFCI is not necessary.



CAUTION

- Do not use the air conditioner for any other purposes other than comfort cooling or heating. Do not use the unit for cooling precision instruments, food, plants, animals or works of art.
- Do not place items under the indoor unit as they may be damaged by condensates that may form if the humidity is above 80% or if the drain outlet gets blocked.
- Before cleaning, stop the operation of the unit by turning the power off or by pulling the supply cord out from its receptacle. Otherwise, an electric shock and injury may result.
- Do not wash the air conditioner with excessive water. An electric shock or fire may result.
- Avoid placing the controller in a spot splashed with water. Water entering the controller may cause an electric shock or damage the internal electronic parts.
- Do not operate the air conditioner when using a room fumigation type of insecticide. Failure to observe this could cause the chemicals to be deposited in the unit and can endanger the health of those who are hypersensitive to chemicals.
- Do not turn off the power immediately after stopping operation. Always wait for at least five minutes before turning off the power. Otherwise, water leakage may occur.
- Children should be supervised to ensure that they do not play with the appliance.
- The remote controller should be kept away from children so they cannot play with it.
- Consult with the installation contractor for cleaning.

- Incorrect cleaning of the inside of the air conditioner could make the plastics parts break and cause water leakage or electric shock.
- Do not touch the air inlet or aluminum fin of the air conditioner as they can cut and cause injury.
- Do not place objects in direct proximity of the outdoor unit. Do not let leaves and other debris accumulate around the unit. Leaves are a hotbed for small animals which can enter the unit. Once inside the unit, animals can cause the unit to malfunction, and cause smoke or fire when they make contact with electrical parts.



NOTE

- Never press the button of the remote controller with a hard, pointed object. The remote controller may be damaged.
- Never pull or twist the electric wire of the remote controller. It may cause the unit to malfunction.
- Do not place appliances that produce open flames in places that are exposed to the airflow of the unit or under the indoor unit. It may cause incomplete combustion or deformation of the unit due to the heat.
- Do not expose the controller to direct sunlight. The LCD display can become discolored and may fail to display the data.
- Do not wipe the controller operation panel with benzene, thinner, chemical dust cloth, etc. The panel may get discolored or the coating can peel off. If it is heavily dirty, soak a cloth in water-diluted neutral detergent, squeeze it well and wipe the panel clean. Then wipe it with another dry cloth.
- Dismantling of the unit, disposal of the refrigerant, oil, and additional parts, should be done in accordance with the relevant local, state, and national regulations.
- Operate the air conditioner in a sufficiently ventilated area and not surrounded by obstacles. Do not use the air conditioner in the following places.
 - a. Places with a mist of mineral oil, such as cutting oil.
 - b. Locations such as coastal areas where there is a lot of salt in the air.
 - c. Locations such as hot springs where there is a lot of sulfur in the air.
 - d. Locations such as factories where the power voltage varies a lot.
 - e. In cars, boats, and other vehicles.
 - f. Locations such as kitchens where oil may splatter or where there is steam in the air.
 - g. Locations where equipment produces electromagnetic waves.
 - h. Places with an acid or alkaline mist.
 - i. Places where fallen leaves can accumulate or where weeds can grow.
- Take snow protection measures. Contact your dealer for the details of snow protection measures, such as the use of a snow protection hood.
- Do not attempt to do electrical work or grounding work unless you are licensed to do so. Consult with your dealer for electrical work and grounding work.
- Pay attention to operating sound. Be sure to use the following places:
 - a. Places that can sufficiently withstand the weight of the air conditioner yet can suppress the operating sound and vibration of the air conditioner.

- b. Places where warm air from the air outlet of the outdoor unit or the operating sound of the outdoor unit does not annoy neighbors.
 - **Make sure that there are no obstacles close to the outdoor unit. Obstacles close to the outdoor unit may drop the performance of the outdoor unit or increase the operating sound of the outdoor unit.**
 - **Consult your dealer if the air conditioner in operation generates unusual noise.**
 - **Make sure that the drainpipe is installed properly to drain water. If no water is discharged from the drainpipe while the air conditioner is in the cooling mode, the drainpipe may be clogged with dust or dirt and water leakage from the indoor unit may occur. Stop operating the air conditioner and contact your dealer.**
-

[Place of Installation]

- **Make sure that the air conditioner is located in a sufficiently ventilated place not surrounded by obstacles.**
- **Do not use the air conditioner in the following places.**
 - a. Places with a mist of mineral oil, such as cutting oil.
 - b. Locations such as coastal areas where there is a lot of salt in the air.
 - c. Locations such as hot springs resorts where there is a lot of sulfur in the air.
 - d. Locations such as factories where the power voltage varies a lot.
 - e. In cars, boats, and other vehicles.
 - f. Locations such as kitchens where oil may splatter or there is steam in the air.
 - g. Locations where equipment that produces electromagnetic waves is found.
 - h. Places with an acid or alkaline mist.
 - i. Places where fallen leaves are accumulated or weeds grow close together.
- **Take snow protection measures.**

Contact your local dealer for the details of snow protection measures, such as the use of a snow protection hood.

[Electrical Work]

- **Do not attempt to conduct electrical work or grounding work unless you are licensed to do so.**

Consult with your local dealer for electrical work and grounding work.
- **Use a dedicated circuit for the air conditioner.**

[Pay Attention to Operating Sound]

- **Be sure to use the following places.**
 - a. Places that can sufficiently withstand the weight of the air conditioner and suppress the operating sound and vibration of the air conditioner.
 - b. Places where warm air from the air outlet of the outdoor unit or the operating sound of the outdoor unit does not annoy neighbors.
- **Make sure that there are no obstacles close to the outdoor unit.**

Obstacles close to the outdoor unit may drop the performance of the outdoor unit or an increase in the operating sound of the outdoor unit.
- **Consult your local dealer if the air conditioner in operation generates unusual noise.**

[Drainage through Drainpipe]

- **Make sure that the drainpipe is installed properly to drain water.**

If no water is discharged from the drainpipe while the air conditioner is cooling operation, the drainpipe may be clogged with dust or dirt and water leakage from the indoor units may result.

Stop operating the air conditioner and consult your local dealer.

Contents

Safety Considerations	i
Specifications	2
What to do before Operation	4
Operation Range	4
Name and Function of Each Switch and Display.....	5
Operation Procedure	5
Maintenance	7
Reference Information	8
Optimum Operation	9
Seasonal Maintenance	9
Following Issues Do Not Mean System Malfunction.....	10
Trouble Shooting.....	12
After-Sales Service.....	13

The original instructions are written in English.
All other languages are translations of the original instructions.

Specifications

This table shows the specifications of the single module.

For the specifications of the multi module system, refer to the specifications of each single module that constitutes the system.

Heat recovery system: REYA-A series

Model name		REYA72AATJ*	REYA96AATJ*	REYA120AATJ*	REYA144AATJ*	REYA168AATJ*
Power supply						
Phase	—	3~	3~	3~	3~	3~
Frequency	Hz	60	60	60	60	60
Voltage	V	208/230	208/230	208/230	208/230	208/230
Nominal cooling Maximum capacity	Btu/h	72,000	96,000	119,000	144,000	162,000
Nominal heating Maximum capacity	Btu/h	81,000	108,000	135,000	162,000	189,000
Dimensions HxWxD	inch (mm)	65-3/8 x 36-5/8 x 30-1/8 (1660 x 930 x 765)		65-3/8 x 48-13/16 x 30-1/8 (1660 x 1240 x 765)		
Mass	lbs. (kg)	549 (249)	736 (334)	739 (335)	825 (374)	827 (375)
Refrigerant						
Type	—	R32	R32	R32	R32	R32
Charge	lbs. (kg)	21.6 (9.8)	25.8 (11.7)	25.8 (11.7)	25.8 (11.7)	25.8 (11.7)
Maximum allowable pressure	psig (MPa)	580 (4.0)	580 (4.0)	580 (4.0)	580 (4.0)	580 (4.0)

Model name		REYA192AATJ*	REYA216AATJ*	REYA240AATJ*
Power supply				
Phase	—	3~	3~	3~
Frequency	Hz	60	60	60
Voltage	V	208/230	208/230	208/230
Nominal cooling Maximum capacity	Btu/h	192,000	216,000	238,000
Nominal heating Maximum capacity	Btu/h	216,000	243,000	270,000
Dimensions HxWxD	inch (mm)	65-3/8 x 68-7/8 x 30-1/8 (1660 x 1750 x 765)		
Mass	lbs. (kg)	1010 (458)	1010 (458)	1010 (458)
Refrigerant				
Type	—	R32	R32	R32
Charge	lbs. (kg)	25.8 (11.7)	25.8 (11.7)	25.8 (11.7)
Maximum allowable pressure	psig (MPa)	580 (4.0)	580 (4.0)	580 (4.0)

Model name		REYA72AAJD*	REYA96AAJD*	REYA120AAJD*	REYA144AAJD*	REYA168AAJD*
Power supply						
Phase	—	3~	3~	3~	3~	3~
Frequency	Hz	60	60	60	60	60
Voltage	V	460	460	460	460	460
Nominal cooling Maximum capacity	Btu/h	72,000	96,000	119,000	144,000	162,000
Nominal heating Maximum capacity	Btu/h	81,000	108,000	135,000	162,000	189,000
Dimensions HxWxD	inch (mm)	65-3/8 x 36-5/8 x 30-1/8 (1660 x 930 x 765)		65-3/8 x 48-13/16 x 30-1/8 (1660 x 1240 x 765)		
Mass	lbs. (kg)	564 (256)	752 (341)	754 (342)	840 (381)	842 (382)
Refrigerant						
Type	—	R32	R32	R32	R32	R32
Charge	lbs. (kg)	21.6 (9.8)	25.8 (11.7)	25.8 (11.7)	25.8 (11.7)	25.8 (11.7)
Maximum allowable pressure	psig (MPa)	580 (4.0)	580 (4.0)	580 (4.0)	580 (4.0)	580 (4.0)

Model name		REYA192AAJD*	REYA216AAJD*	REYA240AAJD*
Power supply				
Phase	—	3~	3~	3~
Frequency	Hz	60	60	60
Voltage	V	460	460	460
Nominal cooling Maximum capacity	Btu/h	192,000	216,000	238,000
Nominal heating Maximum capacity	Btu/h	216,000	243,000	270,000
Dimensions HxWxD	inch (mm)	65-3/8 x 68-7/8 x 30-1/8 (1660 x 1750 x 765)		
Mass	lbs. (kg)	1025 (465)	1025 (465)	1025 (465)
Refrigerant				
Type	—	R32	R32	R32
Charge	lbs. (kg)	25.8 (11.7)	25.8 (11.7)	25.8 (11.7)
Maximum allowable pressure	psig (MPa)	580 (4.0)	580 (4.0)	580 (4.0)

Heat pump system: RXYA-A series

Model name		RXYA72AATJ*	RXYA96AATJ*	RXYA120AATJ*	RXYA144AATJ*	RXYA168AATJ*
Power supply						
Phase	—	3~	3~	3~	3~	3~
Frequency	Hz	60	60	60	60	60
Voltage	V	208/230	208/230	208/230	208/230	208/230
Nominal cooling Maximum capacity	Btu/h	72,000	96,000	119,000	144,000	162,000
Nominal heating Maximum capacity	Btu/h	81,000	108,000	135,000	162,000	189,000
Dimensions HxWxD	inch (mm)	65-3/8 x 36-5/8 x 30-1/8 (1660 x 930 x 765)		65-3/8 x 48-13/16 x 30-1/8 (1660 x 1240 x 765)		
Mass	lbs. (kg)	549 (249)	736 (334)	739 (335)	825 (374)	827 (375)
Refrigerant						
Type	—	R32	R32	R32	R32	R32
Charge	lbs. (kg)	21.6 (9.8)	25.8 (11.7)	25.8 (11.7)	25.8 (11.7)	25.8 (11.7)
Maximum allowable pressure	psig (MPa)	580 (4.0)	580 (4.0)	580 (4.0)	580 (4.0)	580 (4.0)

Model name		RXYA192AATJ*	RXYA216AATJ*	RXYA240AATJ*
Power supply				
Phase	—	3~	3~	3~
Frequency	Hz	60	60	60
Voltage	V	208/230	208/230	208/230
Nominal cooling Maximum capacity	Btu/h	192,000	216,000	238,000
Nominal heating Maximum capacity	Btu/h	216,000	243,000	270,000
Dimensions HxWxD	inch (mm)	65-3/8 x 68-7/8 x 30-1/8 (1660 x 1750 x 765)		
Mass	lbs. (kg)	1010 (458)	1010 (458)	1010 (458)
Refrigerant				
Type	—	R32	R32	R32
Charge	lbs. (kg)	25.8 (11.7)	25.8 (11.7)	25.8 (11.7)
Maximum allowable pressure	psig (MPa)	580 (4.0)	580 (4.0)	580 (4.0)

Model name		RXYA72AAAYD*	RXYA96AAAYD*	RXYA120AAAYD*	RXYA144AAAYD*	RXYA168AAAYD*
Power supply						
Phase	—	3~	3~	3~	3~	3~
Frequency	Hz	60	60	60	60	60
Voltage	V	460	460	460	460	460
Nominal cooling Maximum capacity	Btu/h	72,000	96,000	119,000	144,000	162,000
Nominal heating Maximum capacity	Btu/h	81,000	108,000	135,000	162,000	189,000
Dimensions HxWxD	inch (mm)	65-3/8 x 36-5/8 x 30-1/8 (1660 x 930 x 765)		65-3/8 x 48-13/16 x 30-1/8 (1660 x 1240 x 765)		
Mass	lbs. (kg)	564 (256)	752 (341)	754 (342)	840 (381)	842 (382)
Refrigerant						
Type	—	R32	R32	R32	R32	R32
Charge	lbs. (kg)	21.6 (9.8)	25.8 (11.7)	25.8 (11.7)	25.8 (11.7)	25.8 (11.7)
Maximum allowable pressure	psig (MPa)	580 (4.0)	580 (4.0)	580 (4.0)	580 (4.0)	580 (4.0)


Model name		RXYA192AAAYD*	RXYA216AAAYD*	RXYA240AAAYD*
Power supply				
Phase	—	3~	3~	3~
Frequency	Hz	60	60	60
Voltage	V	460	460	460
Nominal cooling Maximum capacity	Btu/h	192,000	216,000	238,000
Nominal heating Maximum capacity	Btu/h	216,000	243,000	270,000
Dimensions HxWxD	inch (mm)	65-3/8 x 68-7/8 x 30-1/8 (1660 x 1750 x 765)		
Mass	lbs. (kg)	1025 (465)	1025 (465)	1025 (465)
Refrigerant				
Type	—	R32	R32	R32
Charge	lbs. (kg)	25.8 (11.7)	25.8 (11.7)	25.8 (11.7)
Maximum allowable pressure	psig (MPa)	580 (4.0)	580 (4.0)	580 (4.0)

What to do before Operation

This operation manual is for the following system with standard control. Before initiating operation, contact your local dealer for the operation that corresponds to your system type.

If your installation has a customized control system, ask your local dealer for the operation that corresponds to your system.

Heat recovery system: REYA-A series

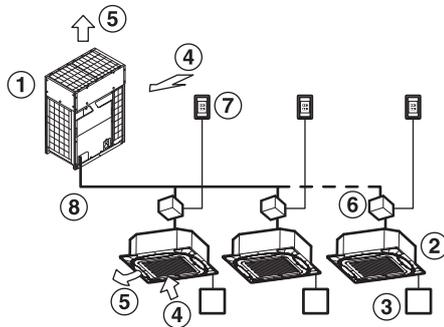


1. Outdoor unit
2. Indoor unit
3. Remote controller
4. Inlet air
5. Outlet air
6. Branch Selector unit
7. Cool/Heat selector (single Branch Selector unit only)
8. Refrigerant piping

Note

- The Cool/Heat selector cannot connect to the multi Branch Selector unit.

Heat pump system: RXYA-A series

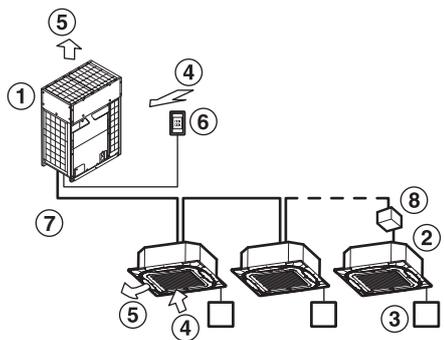

1. Outdoor unit
2. Indoor unit
3. Remote controller
4. Inlet air
5. Outlet air
6. Cool/Heat selector
7. Refrigerant piping
8. Safety shut-off valve unit

Note

- Installation of a safety shut-off valve unit is not mandatory. See General Safety Considerations for installation requirements.

Operation Range

	COOLING	HEATING	Simultaneous*	
			COOLING	HEATING
Outdoor temperature	23 to 110°FDB (-5 to 43°CDB)	-22 to 60°FWB (-30 to 16°CWB)	23 to 75°FDB / Up to 60°FWB (-5 to 24°CDB / Up to 16°CWB)	
Indoor temperature	57 to 77°FWB (14 to 25°CWB)	59 to 80°FDB (15 to 27°CDB)	57 to 77°FWB (14 to 25°CWB)	59 to 82°FDB (15 to 28°CDB)
Indoor humidity	80%	—	80%	—

* Heat recovery system (REYA-A series) only

Note


- Cooling operation:
If the air conditioner is operated continuously while the indoor temperature is 70°FDB (21°CDB) or below and the humidity is 80% or over, the interiors of the indoor units may cause icing and water leakage may result.
- Heating operation:
The air conditioner may stop operating for the protection of the machine if the outdoor temperature is 70°FDB (21°CDB) or over.

Name and Function of Each Switch and Display

Cool/Heat Selector

- When the Cool/Heat selector remote controller is installed, the remote controller connected to the indoor unit cannot be used to switch between cooling and heating operation.
 - Use to switch between cooling and heating operation from each Branch Selector unit*. (The Cool/Heat selector cannot connect to a multi Branch Selector unit.)
- * Heat recovery system (REYA-A series) only

<Cool/Heat selector>

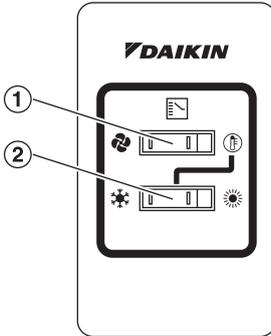

1. Fan only/air conditioning selector switch

- Set the switch to “” for fan only operation or to “” for heating or cooling operation.

2. COOL/HEAT changeover switch

- Set the switch to “” for cooling operation or to “” for heating operation.

Remote controller

- For more information, see the operation manual that came with the remote controller.

Operation Procedure


- For equipment protection purposes, apply power to the outdoor units at least 6 hours before starting the operation of the system.
- Operation procedure varies according to the combination of outdoor unit and remote controller. Read the chapter “What to do before Operation”.
- Do not turn it off during the air conditioning season for starting operation smoothly.
- If the main power supply is turned off during operation, operation will restart automatically after the power turns back on again.

Cool/Heat Selector


Cooling, Heating and Fan only operation

- Select operation mode with the Cool/Heat selector as follows:


Cooling operation

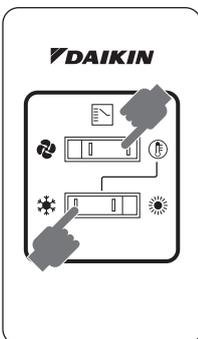

Heating operation

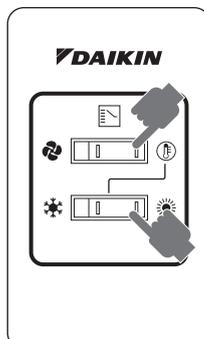

Fan only operation

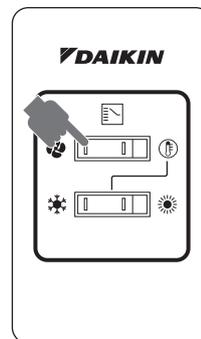


- Press On/Off button on the remote controller.
The operation lamp lights up and the system starts operation.
- The system can now be controlled from the remote controller.

Dry Mode

Preparation

- The dry mode may not be selected if the remote controller is master controlled and the system is not already in the cooling mode of operation (see the following section).
- In case of changing the operation mode by the Cool/Heat selector, set it to cooling operation mode.
- The system can now be controlled from the remote controller.

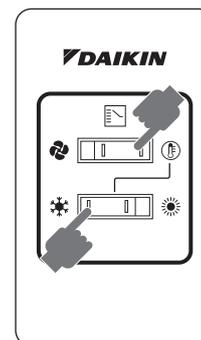

Cool/Heat Mode Selection Availability

- “Cool”, “Heat” and “Auto” are all only available for selection on the COOL/HEAT changeover master indoor unit. The following table indicates the available operating modes of the other indoor units on the system based upon the selected mode of the master indoor unit.


When the master indoor unit is set to	The other indoor units in the system can be set to			
	Cool	Dry	Heat	Fan
Cool mode	✓	✓		✓
Dry mode	✓	✓		✓
Heat mode			✓	✓
Fan mode				✓
Auto mode (Cooling operation)	✓	✓		✓
Auto mode (Heating operation)			✓	✓

Precautions for Selecting the COOL/HEAT Changeover Master Indoor Unit

- The COOL/HEAT changeover master must be set for a single indoor unit in the following applications.

Heat recovery system: REYA-A series

(3-Pipe Heat Recovery System)

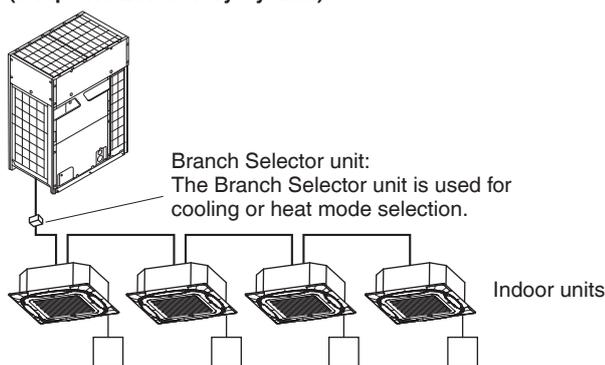


A number of indoor units are connected to a single Branch Selector unit.

Set any one of the indoor units as the COOL/HEAT changeover master.

Heat pump system: RXYA-A series

(2-Pipe Heat Pump System)

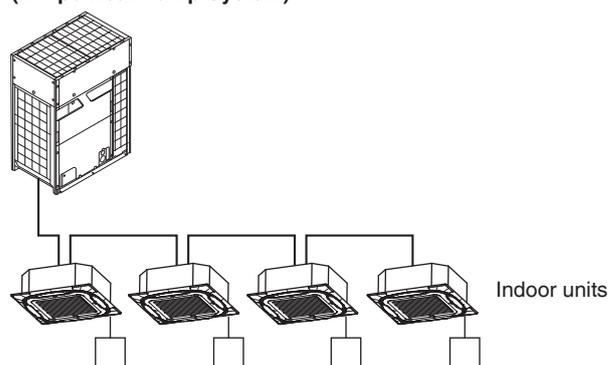

A number of indoor units are connected to a single outdoor unit.


Set any one of the indoor units as the COOL/HEAT changeover master.

Maintenance

Reset Filter Indicator

Operation

1

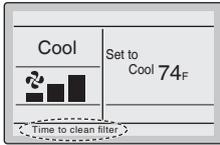

- When it is time to clean or replace the filter, one of the following messages will appear on the bottom of the basic screen.
 - “Time to clean filter”
 - “Time to clean filter & element”
 - “Time to clean element”


- Wash, clean, or replace the filter or element.
For details, refer to the Operation Manual came with the indoor unit.

2



- Reset the filter indicator when the filter or element is cleaned or replaced.
- Press Menu/OK button.
The main menu screen will appear.



3

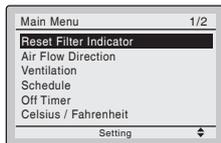

- Press ▼▲ buttons to select **Reset Filter Indicator** on the main menu screen and press Menu/OK button.

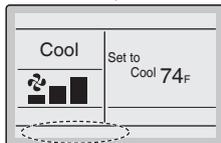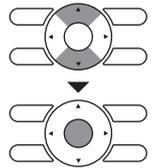

- The message shown in Operation 1 will disappear from the basic screen when the filter sign is reset.

Maintaining the LCD Display

- Wipe the LCD and surface of the remote controller with a dry cloth when they become dirty.
- If the dirt on the surface cannot be removed, soak the cloth in neutral detergent diluted with water, squeeze the cloth tightly, and clean the surface. Wipe the surface with a dry cloth.

Note

- Do not use any paint thinner, organic solvent, or strong acid.


Reference Information

Error Code Display

Contact your local dealer in the following cases

Operation

1

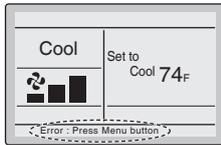

- If an error occurs, either one of the following items will flash in the basic screen.


“Error: Press Menu button”

* The operation lamp will flash.


“Warning: Press Menu button”

* The operation lamp will not flash.

- Press Menu/OK button.

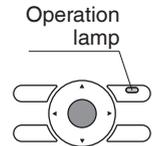

2

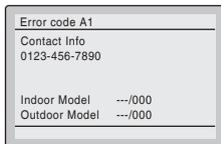

- The Error code will flash and the service contact and model name or code appear.
- Notify your local dealer of the Error code and model name or code.

Precautions for Group Control System or Two Remote Controllers Control System

This system provides two other control systems beside individual control (one remote controller controls one indoor unit) system. Confirm which type of your unit is the following system.

- **Group control system**

One remote controller controls up to 16 indoor units. All indoor units are equally set.

- **Two remote controllers control system**

Two remote controllers control one indoor unit (in case of group control system, one group of indoor units). The unit is individually operated.

Note

- Contact your local dealer in case of changing the combination or setting of group control and two remote controller control systems.

Optimum Operation

Observe the following precautions to ensure the system operates properly.

- Prevent direct sunlight from entering a room during cooling operation by using curtains or blinds.
- Do not leave doors and windows open. If the doors and windows remain open, air will flow out of your room causing a decrease in the cooling or heating effect.
- Do not use other heating devices directly beneath the indoor unit.
If you do, they might get deformed by the heat.
- Never place objects near the air inlet or the air outlet of the unit. It may cause deterioration in the effect or stop the operation.
- Adjust the room temperature properly for a comfortable environment. Avoid excessive heating or cooling.
- Ventilate often.
To avoid oxygen deficiency, ensure that the room is adequately ventilated if equipment such as a burner is used together with the air conditioner.
- Keep the indoor unit and remote controller at least 3.5 ft. (1 m) away from televisions, radios, stereos, and other similar equipment. Failing to do so may cause static or distorted pictures.
- Turn off the main power supply switch to the unit when the unit is not used for longer periods of time. If the switch is on, it uses electricity. Before restarting the unit, turn on the main power supply switch 6 hours before operation to ensure smooth running. (Refer to the chapter "Maintenance" in the indoor unit manual.)
- Fully use the function of air flow direction adjust.
Cold air gathers on the floor, and warm air gathers in the ceiling.
Set the air flow direction parallel during cooling or dry operation, and set it downwards during heating operation.
Do not let the air blow directly to a person.
- It takes time for the room temperature to reach the set temperature.
We recommend starting the operation in advance using schedule operation.

Seasonal Maintenance

Caution

- **Do not touch the air inlets or aluminum fins of the outside or indoor units.**
Touching them may result in injury.
- **Do not wash the outside or indoor units with water.**
An electric shock or fire may result.
- **Watch your steps at the time of air filter cleaning etc.**
If the scaffold is unstable, you may fall or topple down, thus causing injury.
- **Be sure to stop the operation, and turn the breaker off before cleaning.**
This may cause electric shock and injury.
- **Consult with the dealer for cleaning the interior of the indoor units.**
Incorrect cleaning may damage the plastic parts and cause failures, such as water leakage, and an electric shock may result.

■ At the beginning of the season

Check

- Are the indoor and outdoor unit intake and outlet vents blocked?
Remove anything that might be blocking them.

Clean the exterior.

- See the Operation Manual came with the indoor unit for details on how to clean it.

Turn the power on.

- When the power comes on, the characters in the remote controller display appear.
(To protect the unit, turn the power on at least 6 hours before operating it. This makes operation smoother.)

■ At the end of the season

On a clear day, use fan operation for around half a day to thoroughly dry out the interior of the unit.

- This step is performed to prevent build up of mold and other harmful organisms.

Turn off the power.

- When the power is shut off, the characters in the remote controller display disappear.
- If the power is on, the unit consumes up to several dozen Watts of power.
Turn off the power to conserve energy.

Clean the exterior.

- See the Operation Manual came with the indoor unit for details on how to clean it.

Please refer to the Maintenance and service check list available on Daikin City or contact your Daikin representative for the latest document.

Following Issues Do Not Mean System Malfunction

■ The system does not operate

- **The air conditioner does not start immediately when restarting or changing the operation mode.**
If the operation lamp lights, the system is in normal condition.
To prevent overloading of the compressor motor, the air conditioner starts 5 minutes after it is turned ON again in case it was turned OFF just before.
- If “**CENTRAL CONTROL**” is displayed on the remote controller and pressing the operation button causes the display to blink for a few seconds.
This indicates that the central device is controlling the unit.
The blinking display indicates that the remote control cannot be used.
- **The system does not start immediately after the power supply is turned on.**
Wait 10 minutes until the micro computer is prepared for operation.

■ It stops sometimes

- **The remote controller display reads “U4” or “U5” and the unit stops but then restarts after a few minutes.**
This is because the remote control is intercepted by noise from electrical appliances other than the air conditioner, and this prevents communication between the units, causing them to stop.
Operation automatically restarts when the noise goes away.
- **The remote controller displays “A0-19” or “U9-01” and the compressor of the outdoor unit stops, but restarts after a few minutes.**
This is because the refrigerant leak sensor detects refrigerant. After the detection, a judgment is made as to whether the detection is correct, and if it is determined to be a false detection, operation is automatically restarted.

■ Cool/heat cannot be changed over

- **When the display shows “MASTER CONTROLLED”.**
It shows that this is a sub remote controller.
- **When the Cool/Heat selector switch is installed and the display shows “MASTER CONTROLLED”.**
This is because COOL/HEAT changeover is controlled by the Cool/Heat selector. Ask your local dealer where the Cool/Heat selector is installed.

■ Fan operation is possible, but cooling and heating do not work

- **Immediately after the power is turned on.**
The micro computer is getting ready to operate. Wait 10 minutes.

■ The fan speed does not correspond to the setting

- **The fan speed does not change even if the fan speed control button is pressed.**
During heating operation, when the room temperature reaches the set temperature, the outdoor unit goes off and the indoor unit changes to whisper the fan speed.
This is to prevent cold air blowing directly on occupants of the room.
The indoor unit in the airflow mode can only operate with light airflow when other indoor units are in heating operation.

■ The fan direction does not correspond to the setting

- **The fan direction does not correspond to the remote control display.**
The fan direction does not swing.
This is because the unit is being controlled by the micro computer.
Please see the operation manual for the remote controller.

■ White mist comes out of the unit

Indoor unit

- **When humidity is high during cooling operation.**

If the interior of indoor unit is extremely contaminated, the temperature distribution inside a room becomes uneven. It is necessary to clean the interior of the indoor unit. Ask your local dealer for details on cleaning the unit. This operation requires a qualified service person.

- **Immediately after the cooling operation stops and if the room temperature and humidity are low.**

This is because warm refrigerant gas flows back into the indoor unit and generates steam.

Outdoor unit

- **When the system is changed over to heating operation after defrost operation.**

Moisture generated by defrost becomes steam and is exhausted.

■ Noise of air conditioners

Indoor unit

- **An electric starting sound is heard immediately after the power supply is turned on.**

The electronic expansion valve inside an indoor unit starts working and makes the noise. Its volume will reduce in about 1 minute.

- **A continuous low hissing sound like flowing water is heard when the system is in cooling operation or at a stop.**

When the drain pump (an optional accessory) is in operation, this noise is heard.

- **A squeaking sound is heard when the system stops after heating operation.**

Expansion and contraction of plastic parts caused by temperature change make this noise.

- **A low sound like dripping water is heard while the indoor unit is stopped.**

When the other indoor unit is in operation, this noise is heard. In order to prevent oil and refrigerant from remaining in the system, a small amount of refrigerant is kept flowing.

Outdoor unit

- **When the tone of operating noise changes.**

This noise is caused by the change of frequency.

Indoor unit, outdoor unit

- **A continuous low hissing sound is heard when the system is in cooling or defrost operation.**

This is the sound of refrigerant gas flowing through both indoor and outdoor units.

- **A hissing sound which is heard at the start or immediately after stopping operation or defrost operation.**

This is the noise of refrigerant caused by flow stop or flow change.

■ Dust comes out of the unit

- **When the unit is used after stopping for a long time.**

This is because dust has gotten into the unit.

■ The units can give off odors

- **During operation.**

The unit can absorb the smell of rooms, furniture, cigarettes, etc., and then emit it again.

■ The outdoor unit fan does not rotate

- **During operation.**

The speed of the fan is controlled in order to optimize product operation.

■ The compressor or fan in the outdoor unit does not stop

- **This is to prevent oil and refrigerant from remaining in the compressor. The unit will stop after 5 to 10 minutes.**

■ The inside of outdoor unit is warm even when the unit has stopped

- **This is because the crankcase heater is warming the compressor so that the compressor can start smoothly.**

■ Hot air is emitted even though the unit is stopped

- **Hot air can be felt when the unit is stopped.**

Several different indoor units are being run on the same system, so if another unit is running, some refrigerant will still flow through the unit.

■ Does not cool very well

- **Dry operation.**

Dry operation is designed to lower the room temperature as little as possible.
Refer to page 6.

Trouble Shooting

If one of the following malfunctions occur, take the measures shown below and contact your local dealer.

Warning

- **Stop operation and shut off the power if anything unusual occurs (burning smells, etc.)**

Leaving the unit running under such circumstances may cause breakage, electrical shock, or fire.
Contact your local dealer.

- If a safety device such as a fuse or a breaker frequently actuates;
Measure : Do not turn on the main power switch.
- If the ON/OFF switch does not properly work;
Measure : Turn off the main power switch.
- If water leaks from unit;
Measure : Stop the operation.
- The operation mode selector button does not work well.
Turn off the power.

If the system does not properly operate except for the above mentioned cases and none of the above mentioned malfunctions is evident, investigate the system according to the following procedures.

If it is impossible to fix the problem after checking all the above items, contact your local dealer.

Let them know the symptoms, system name, and model name.

1. If the system does not operate at all;

- Check for power failure.

Wait until power is restored. If power failure occurs during operation, the system automatically restarts immediately after the power supply is recovered.

- Check if fuse has blown;
Turn off the power supply.
- Check if the breaker is blown.

Turn the power on with the breaker switch in the OFF position.

Do not turn the power on with the breaker switch in the trip position.


(Contact your local dealer.)

2. If the system stops soon after starting the operation;

- Check if air inlet or outlet of outside or indoor unit is blocked by obstacles.
Remove any obstacle and make it well-ventilated.
- Check if the remote controller display shows "Time to clean filter & element";
Refer to the Operation Manual of the indoor unit. And clean the air filter or element.

3. The system operates but cooling or heating is insufficient;

- Check if air inlet or outlet of outside or indoor unit is blocked by obstacles.
Remove any obstacle and make it well-ventilated.
- Check if the remote controller display shows "Time to clean filter & element";
Refer to the Operation Manual of the indoor unit. And clean the air filter or element.
- Check the temperature setting.
Refer to the operation manual that came with the remote controller.

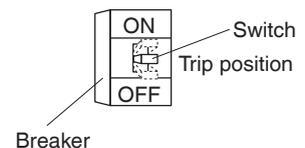

- Check the fan speed setting on your remote controller.
Refer to the operation manual that came with the remote controller.
- Check for open doors or windows.
Shut doors and windows to prevent wind from coming in.
- Check if there are too many occupants in the room during cooling operation.
- Check if the heat source of the room is excessive during cooling operation.
- Check if direct sunlight enters the room during cooling operation.
Use curtains or blinds.
- Check if the air flow angle is not proper.
Refer to the operation manual that came with the remote controller.

After-Sales Service

After-sale Service

Danger

- Refrigerant gas may produce a toxic gas or combust if it comes in contact with fire such as from a fan, heater, stove or cooking device. Exposure to this gas could cause severe injury or death.

Warning

- **Do not disassemble, modify or repair the unit.**
This may cause water leakage, electric shock or fire.
Contact your local dealer.
- **Do not remove or reinstall the unit by yourself.**
Incorrect installation may cause water leakage, electrical shock or fire.
Contact your local dealer.

• When asking your local dealer to repair, inform related staff of the details as follows:

- Model name and product No. of air conditioner
- Shipping date and installation date
- Malfunction:
Inform the staff of the defective details. (Malfunction code being displayed on the remote controller.)
- Name, address, telephone number

• Repair after the warranty term is expired

Contact your local dealer.

• Recommendations for maintenance and inspection

Since dust collects after using the unit for several years, the performance will be deteriorated to some extent.

Disassembling and cleaning inside require technical expertise, so we recommend entering a maintenance and inspection contract (at a cost) separate from regular maintenance.

• Recommended inspection and maintenance cycles

[Note: The maintenance cycle is not the same as the warranty period.]

Table 1 assumes the following usage conditions.

1. Normal use without frequent starting and stopping of the machine.
(Although it varies with the model, we recommend not starting and stopping the machine more than 6 times/hour for normal use.)
2. Operation of the product is assumed to be 10 hours/day and 2,500 hours/year.

• Table 1 “Inspection Cycle” and “Maintenance Cycle” Lists

Name of Main Part	Inspection Cycle	Maintenance Cycle*1
Compressor	1 year	20,000 hours
Electric motor (fan, damper, etc.)		20,000 hours
Printed circuit boards		25,000 hours
Heat exchanger		5 years
Sensor (thermistor, etc.)		5 years
Remote controller and switches		25,000 hours
Drain pan		8 years
Expansion valve		20,000 hours
Electromagnetic valve		20,000 hours
FAN		Outside : 10 years Indoor : 13 years

Note

This table indicates main parts.

See the maintenance and inspection contract for details.

*1

The maintenance cycle durations are for appropriate budgetary maintenance planning.

The maintenance cycle indicates the recommended length of time before the need for maintenance work may arise due to normal wear and tear for a system under normal use that has undergone recommended inspection and regular maintenance. Contact your local dealer for detailed estimate and inspection/service planning.

Shortening of “maintenance cycle” and “replacement cycle” needs to be considered in the following cases.

1. When used in hot, humid locations or locations where temperature and humidity fluctuate greatly.
2. When used in locations where power fluctuation (voltage, frequency, wave distortion, etc.) is high.
(Cannot be used if it is outside the allowable range.)
3. When installed and used in locations where bumps and vibrations are frequent.
4. When used in bad locations where dust, salt, harmful gas or oil mist such as sulfurous acid and hydrogen sulfide may be present in the air.
5. When used in locations where the machine is started and stopped frequently or operation time is long. (Example: 24 hour air-conditioning)

■ Recommended replacement cycle of wear-out parts

[The cycle is not the same as the warranty period.]

• Table 2 “Replacement Cycle” Lists

Name of Main Part	Inspection Cycle	Replacement Cycle*1
Air filter	1 year	5 years
High efficiency filter (Optional accessory)		1 year
Crankcase heater		8 years

Note

This table indicates main parts.

See the maintenance and inspection contract for details.

*1

The replacement cycle durations are for appropriate budgetary replacement planning.

The replacement cycle indicates the recommended length of time before the need for replacement work may arise due to normal wear and tear for a system under normal use that has undergone recommended inspection and regular replacement.

Contact your local dealer for detailed estimate and inspection/service planning.

■ Moving and discarding the unit

This unit uses chlorofluorocarbon.

Contact your local dealer for discarding this unit since it is required by law to collect, transport and discard the refrigerant in accordance with "chlorofluorocarbon collection and destruction" law.

■ Where to call

For after-sales service, etc., consult with your local dealer.



DAIKIN COMFORT TECHNOLOGIES MANUFACTURING, L.P.

Daikin Texas Technology Park,
19001 Kermier Road,
Waller, TX, 77484, U.S.A.

